



Sustainment Management System Support

Knowledgebase > BUILDER > Frequently Asked Questions > How do I move buildings from one complex to another complex?

How do I move buildings from one complex to another complex?

Paul Paisley - 2020-09-03 - Comments (0) - Frequently Asked Questions

Question:

How do I move buildings from one complex to another complex?

Answer:

To move a building from a complex (you should have the Work Planner/Data Manger role):

Go to the complex where the building is located. Select the Facility Mgmt. tab and use the arrow to move the selected building from Assigned to Unassigned, then click SAVE.

The building is now located at the Site level. Now select the Complex where you want to move the building. Again, select the Facility Mgmt. tab and move the building from Unassigned to Assigned and click SAVE.

If you refresh your navigation tree or do CTRL-F5, then you will see the building is now in the complex.


The screenshot displays the Sustainment Management System interface. The left-hand navigation tree shows a hierarchy of training organizations and complexes. 'Complex A' is selected and highlighted in orange. The main content area shows the 'Facility Mgmt.' tab, which is circled in red. This tab contains an 'Index Data' table and 'Calculated Data'.

Metric	Value
CI	70
FI	100
PI	79
FCI	100

Calculated Data:

Number of Facilities: 1

PRV: \$100,000

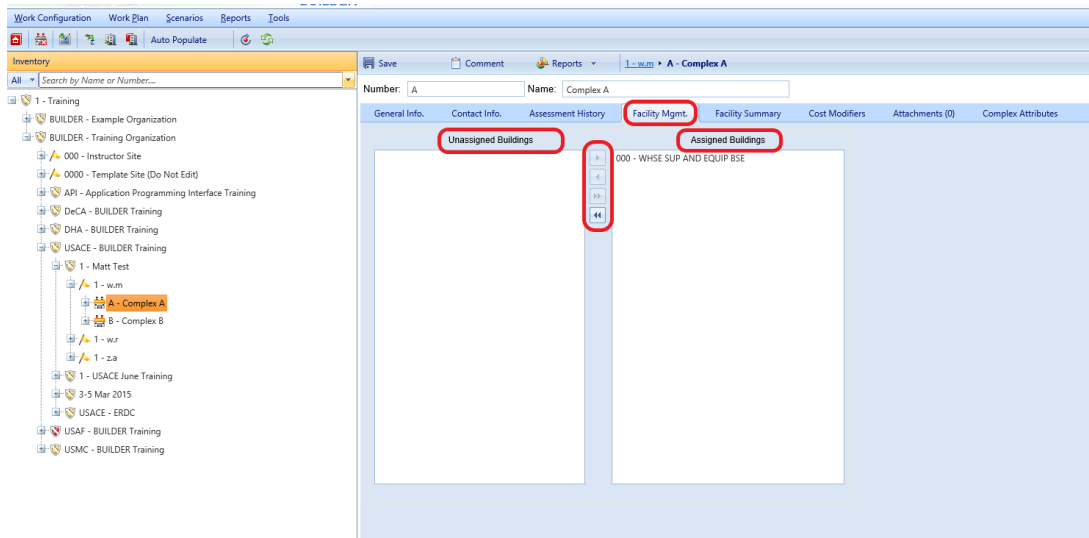

- Tags
- Assigned
- Building
- Complex
- Facility
- Facility Mgmt
- Moving
- Unassigned