

BUILDER™ Condition Assessment Guide

Version 3.4

March 27, 2019

Disclaimers and Restrictions

Disclaimer



This program is furnished by the U.S. Army Corps of Engineers Engineering Research and Development Center - Construction Engineering Research Laboratory (ERDC-CERL) and is accepted and used by the recipient with the express understanding that the United States Government, the U.S. Army Corps of Engineers, and ERDC-CERL make no warranties, expressed or implied, concerning the accuracy, completeness, reliability, usability, or suitability for any particular purpose of the information and data contained in this program or furnished in connection therewith, and the United States shall be under no liability whatsoever to any person by reason of any use made thereof. This program is a property of ERDC-CERL. The recipient agrees not to assert any proprietary rights therein or to represent this program to anyone as other than a government property; furthermore, this program can only be copied for legitimate backup purposes by the user.

Hold-Harmless Statement

ERDC-CERL makes no guarantee as to the precision of the predictive elements of the BUILDER™ or ROOFER™ software. ERDC-CERL shall not be held responsible for damages or losses which are due to facility mismanagement decisions based upon predicted outcomes of facility asset performance from the BUILDER™ or ROOFER™ software.

Information Re-Use Restrictions

End Users are strictly forbidden from re-using any information from the BUILDER™ or ROOFER™ system (compiled code or stored data) to provide similar capabilities in other tools. End Users may use the report outputs and may access their own inventory data, as stored in the database, to facilitate their own organization's business management practices. Any other use of or access to the data is strictly forbidden.

Copyright Warning

The computer program described in this documentation is protected by copyright law and international treaties. Unauthorized reproduction or distribution of the program, or any portion of it, may result in severe civil and criminal penalties, and will be prosecuted to the maximum extent possible under the law.

Protected by the following U.S. Patents: 7,058,544; 7,734,488; 7,769,568.

Documentation Copyright ©2019 US Army Corps of Engineers (USACE). All rights reserved.

Table of Contents

Introduction	3
Welcome to BUILDER™	3
Using this Guide	4
About Condition Assessment in BUILDER	5
Condition Assessment Overview	5
Condition Assessment Tools and Reference	6
Orientation to the Condition Tree	8
About CSCI Calculations and Rollup	10
Choose Assessment Type	13
Condition Assessment Types	13
About Choosing Condition Assessment Type	16
Direct Ratings	17
About Direct Ratings	17
View a Direct Rating	19
Add a Direct Rating	23
Edit a Direct Rating	27
Delete an Inspection	31
Rapid Inspection Method (Direct Rating)	32
Distress Surveys	36
About Distress Surveys	36
View a Distress Survey	38
Add a Distress Survey	44
Edit a Distress Survey	47
Distress Survey Data (Not Sampling)	48
Distress Survey: Distress-Level Data	55
Delete an Inspection	65
PM Inspections	67
Preventative Maintenance (PM) Inspections	67
View a Preventative Maintenance Inspection	68

Add a Preventative Maintenance Inspection	72
Edit a Preventative Maintenance Inspection	75
Delete an Inspection	77
Inspection Comments and Attachments	80
Inspection Comments	80
Inspection Attachments	83
Sampling	88
How To Prepare for Sampling	88
Add a Sample	92
Edit a Sample	93
Delete a Sample	95
Sampling Data	96
Scheduling Assessments	98
About Manual Inspection Scheduling	98
About Knowledge-Based Inspection Scheduling	98
Add a Knowledge-Based Inspection Schedule	101
Remote Inspection and Inventory Entry Using BuilderRED	104
What is BuilderRED?	104
Collecting Inventory Data	104
Performing Inspections	104
Export Data to BuilderRED	105
Import Data from BuilderRED to BUILDER	114
Reports	119
Generate a Report	119
Export a Report	121
APPENDIX A: About Rollup	123
Automated Rollup	123
APPENDIX B: Direct Condition Rating Definitions	126
APPENDIX C: Paint Rating Definitions	128
Glossary	129
Index	135

Introduction

Welcome to BUILDER™

BUILDER, part of the Sustainment Management System, provides facility managers with the tools needed to generate the greatest impact from maintenance and rehabilitation activities, and to plan and defend maintenance budgets.

The primary measure used in BUILDER is the *condition index* (CI) rating, using a 0-to-100 point scale. After real property inventory has been subdivided into hierarchical levels of increasing fineness, down to the Component-Section level, the condition index for each Component-Section is computed from inspection data that records the type, severity, and density of each distress found.

Deterioration curves, developed from experience over time, show the optimal point at which work should be done to avoid more costly rehabilitation projects later.

Another measure available in BUILDER is the *functionality index* (FI), also on a 0-to-100 point scale in keeping with the SMS design philosophy. It is computed from assessment data that records the functionality issues present in a building. Based on the severity and density of those issues, building modernization requirements can be identified.

Based on condition index and/or functionality index scores, BUILDER can generate recommended work items automatically. Using cost books associated with BUILDER, cost estimates are attached to the work items. Managers can then choose which work items to fund. The cost of *not* funding work items can be determined using Scenarios.

With the assistance of the Scenarios simulation engine included as part of BUILDER, managers can develop long-range work plans based on a sound investment strategy. By providing an objective description of condition (a core BUILDER functionality) and an automated means of exploring various options under different budget scenarios (Scenarios), BUILDER and Scenarios together make multi-year work plans easier to formulate and funding requests easier to justify. The goal is optimal facility performance for the dollars invested.

For information, announcements, links to documents, and discussion forums, visit the SMS community user's group website at <https://www.sms.erdcdren.mil>.



Developed by U.S. Army ERDC-CERL
3/26/2019

Using this Guide

This guide explains how to record condition assessment inspections in the Sustainment Management System with BUILDER™.

Prerequisite

This guide assumes that you are already familiar with the material in the *BUILDER™ Getting Started Guide* and the *BUILDER™ Inventory Guide*.

Companion Guides

At the user support site at <https://www.sms.erdc.dren.mil>, you should be able to download user guides for the following additional tasks:

- Getting Started (listed as "BUILDER Start Guide")
- Inventory

Version 3.4 Condition Assessment Changes

The following changes were made to condition assessment in BUILDER Version 3.4:

1. New Condition Assessment Type Added: Preventative Maintenance (PM) Inspection

In addition to performing direct ratings and distress surveys, there is now a third option: users can perform preventative maintenance inspections and enter the data into BUILDER.

2. Hybrid Condition Assessment Options

Both distress surveys and PM inspections now have a column in the table of subcomponents where the inspector can optionally enter a direct rating for the subcomponent. For distress surveys, this allows distress survey of some subcomponents and direct rating of others. For PM inspections, this allows a listing of criteria for some subcomponents and direct rating of others.

About Condition Assessment in BUILDER

Condition Assessment Overview

This topic introduces the Version 3.4 condition assessment process in BUILDER.

Notes: In the user documentation, the word "inspection" is sometimes used instead of "condition assessment." Also, "Component-Section" and "Section" are equivalent.

About Condition Assessment Types

After inventory of your real property has been entered into BUILDER, you can perform condition assessments/inspections. BUILDER accommodates multiple types of condition assessments.

Condition Assessment Types in BUILDER

Direct Rating	Distress Survey	PM Inspection
A green/amber/red color coding system used by the inspector is translated into numeric condition ratings	Density and severity of deficiencies are logged; then BUILDER computes Component-Section condition scores that take all of the deficiencies into account.	This option allows each customer organization to develop and use their own customized list of inspection criteria for inspectors to follow

Beginning with BUILDER Version 3.4, you can also use the distress survey option to create a hybrid condition assessment containing distress survey of some components and direct rating of others. PM inspections also offer this hybrid option.

About the Condition Index

When a condition assessment is completed, BUILDER computes a *condition index* for the inspected Component-Section. This condition index is the CSCI, the Component-Section Condition Index. Details about how the CSCI is calculated and rolled up to higher levels of inventory are found in ["About CSCI Calculations and Rollup" on page 10](#).

Condition Assessment Reports

After a condition assessment is completed, the data entered into BUILDER can be used to generate a variety of inspection-related reports. These are described in the Reports section of the documentation.

Knowledge-Based Inspection Scheduling

An additional, optional task available to you after real property has been entered is to establish an inspection schedule using the [Knowledge-Based Inspection scheduling](#) tool in BUILDER. This tool is designed to select a subset of Component-Sections from your inventory that should be considered for inclusion in the next round of condition assessments.

Work Plans

Condition assessments are prerequisite to generating relevant work items and work plans, because the CSCI is used in deciding at what point an inventory item is in need of repair or replacement.

Condition Assessment Tools and Reference

This topic provides an overview of tools and resources available for help with the condition assessment process in BUILDER.

Condition Assessment Tools

BUILDER provides specialized tools to assist with the condition assessment process. These are described briefly here, and in more depth at the following linked locations:

- ["Remote Inspection and Inventory Entry Using BuilderRED" on page 104,](#)
- ["Rapid Inspection Method \(Direct Rating\)" on page 32](#)
- ["About Knowledge-Based Inspection Scheduling " on page 98](#)

BuilderRED

The is an optional, free, downloadable add-on to the **SMS**¹. It is a portable application designed to run on a Windows® operating system, and can be used on a Windows tablet or laptop by inspectors at the inspection site.

Using BuilderRED, inspectors can quickly and easily enter condition assessment data into the application at the inspection site, then electronically import the data to BUILDER afterwards. This saves the effort of entering the data onto paper and then having to enter it again into the BUILDER Web interface.

¹Sustainment Management System

Rapid Inspection Method

For assessments using the direct condition rating method, BUILDER's [Rapid Inspection method](#) enables quick and easy input. In cases where entire Components, Systems, Buildings, or Complexes have a uniform or nearly uniform condition rating, you can input the condition rating at levels higher than Component-Section, then adjust the condition rating of individual Component-Sections as needed.

Note: There is no Rapid Inspection method for distress surveys or PM inspections.

Knowledge-Based Inspection Scheduling

BUILDER also provides a [Knowledge-Based Inspection scheduling](#) tool. This tool is designed to select from your entire inventory a subset of Component-Sections that should be considered for inclusion in the next round of direct rating or distress survey condition assessments. Additionally, this feature is able to determine whether it is better to perform a distress survey or a direct rating.

Reference

Condition Assessment Reference Manual

A valuable resource to have on hand when performing condition assessment is the December 2018 ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*. This reference manual, written for BUILDER Version 3, is available by download from the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

For distress surveys, Appendixes A through D of the Condition Assessment Reference Manual enumerate and define each of the available distresses. This information is also included in the BUILDER Online Help under the same Appendix numbers.

Note: the Condition Assessment Reference Manual does not include detailed information about BUILDER's preventative maintenance (PM) inspections, which were implemented starting with version 3.4.

Orientation to the Condition Tree

This topic

- explains how to [access the condition tree](#)
 - highlights the similarities and differences between [navigating the condition tree](#) and navigating the inventory tree
 - explains how to [exit the condition tree](#)
-

Access the Condition Tree


To record inspections or to work with Knowledge-Based Inspection Scheduling, you will need to work within the condition assessment navigation tree ("condition tree") in BUILDER.

Two alternate ways of accessing the condition tree are

- a. switching to the condition tree from the inventory tree or functionality tree, or
- b. making the condition tree your default view

Switch from the Inventory or Functionality Tree

If your default location when opening BUILDER is the inventory tree or functionality tree, then you can switch to the condition tree by activating the **Condition** ribbon, which may be either above or below the tree currently being displayed.

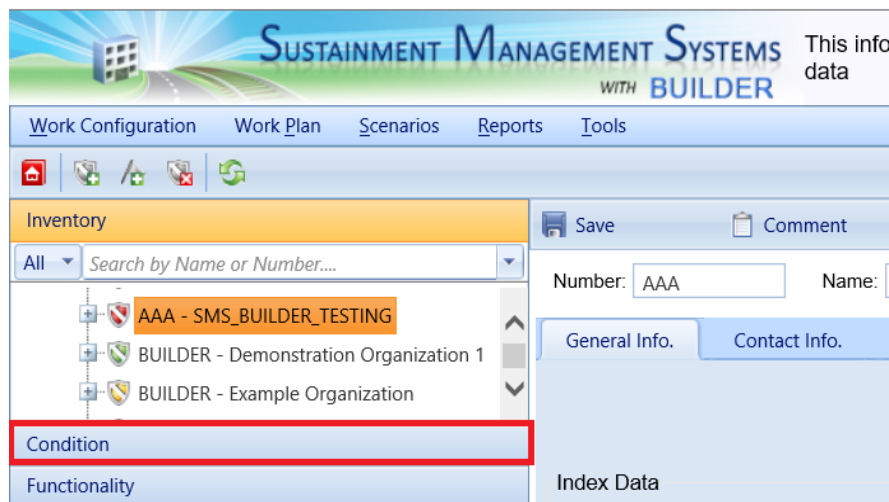



Make the Condition Tree Your Default View

Alternatively, if you expect to be accessing the condition tree more often than the other navigation tree options, you have the option to configure your User Prefer-

ences to make the condition tree display by default when you open BUILDER. To do so, follow these steps:

1. Activate the User Preferences link at the upper right of the main BUILDER screen.
2. In the "Options" popup window, navigate to the **Default View** segment.
3. Activate the dropdown arrow (see the first red box in the illustration below) to display the options for default view.
4. Select **Condition Assessment** from the dropdown options.

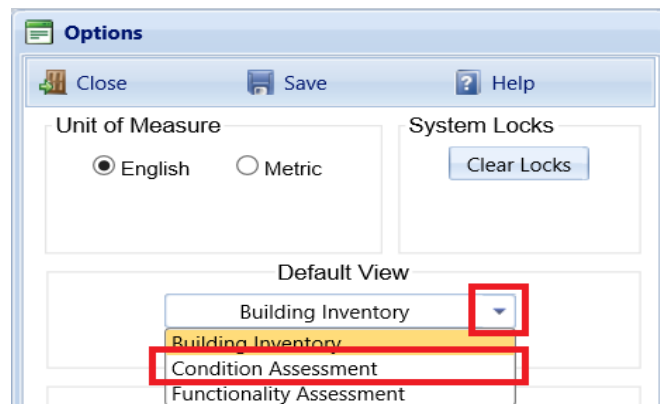

5. Activate  **Save** on the popup window toolbar.
6. Use the **Close** button to close the "Options" window .

The next time you log into BUILDER, the condition tree will display at the left.

Navigating the Condition Tree

From the Organization (if applicable) or Site level, down through the Building level, navigating the condition tree works exactly the same way as navigating the inventory tree.

Once you click "+" to expand a Building, however, the display changes. Two folders, named **By System** and **By Sample Location** will appear below the Building.

By System

Navigating the **By System** folder will feel similar to navigating the inventory tree, except that the content area of the screen will remain blank until you reach the Section level. At the Section level, the Section name, quantity, and unit of measurement will appear in the content area just under the content area toolbar.

New Copy Delete Reports	
Section Name: Roof Test 2 B301002 LOW SLOPE ROOF SYSTEMS Built-Up Section Qty: 10000 SF	
Inspection Date	Inspector
01/01/2009	

Next appears a table with the columns **Inspection Date** and **Inspector**. Activating the link for an inspection date will open the inspection.

Note: The oldest inspection date listed, at the bottom of the table, will have no **Inspector** listed because it represents an inspection created automatically by BUILDER on the date the Component-Section was added to the BUILDER database. The CSCI rating for this inspection is 100 because the Component-Section was presumably new at the time.

Further Information: For information about viewing individual inspections, see ["View a Direct Rating " on page 19](#), and/or ["View a Distress Survey " on page 38](#), and/or ["View a Preventative Maintenance Inspection" on page 68](#).

By Sample Location

If sampling has been used for inspections, the sample locations used will be listed under **the By Sample Location** folder. Applicable Components and Sections will be listed under each sample location.

Exit the Condition Tree

To exit the condition tree, simply activate either the **Inventory** ribbon or the **Functionality** ribbon in the navigation tree.

About CSCI Calculations and Rollup

A condition assessment in BUILDER results in the computation of a Component-Section Condition Index (CSCI). This informational topic details how the CSCI is calculated for each of the condition assessment types. It also touches on how the CSCI values are "rolled up" into condition indexes of progressively higher levels of BUILDER inventory.

CSCI Computation

The Component-Section Condition Index (CSCI) is a condition rating for the Component-Section being inspected. For all condition assessment types, BUILDER computes the CSCI by using the assessment data to calculate a deduct value, then subtracting that deduct value from the maximum possible rating of 100.

The deduct value computation differs depending on the type of condition assessment performed. The computational approach to obtaining a CSCI is described below for each inspection type:

- [direct rating](#)
- [distress survey](#)
- [PM inspection](#)

Direct Rating CSCI Computation

For direct ratings, the selected color rating corresponds directly to a deduct value for the Component-Section. Using this deduct value, the CSCI can be easily computed. If sampling is used for the Component-Section, a sample unit condition index will be computed at each sample location and aggregated into a CSCI by computing the average of the representative samples weighted by size.

Distress Survey CSCI Computation

For distress surveys, the combination of distress type, severity level, and density of the subcomponents of the Section are used to determine the deduct value for the individual subcomponents. The deduct values for each combination of distress, severity, and density were determined during ERDC-CERL's research effort using rating values from a team of experts.

Note: If more than one distress exists for a given Component-Section, the sum of the deduct values for the distresses present must be corrected. This is because as additional distress types and/or severity levels occur on the subcomponent, the impact of a given distress on the condition rating becomes less. This correction correlates the expert panel's ratings and the computed indexes. The correction factor is a function of the summed total of the individual deduct values, a minimum individual deduct value, and the number of different distress types and severity level combinations found. The correction factor values were developed from the rating panel data and are applied directly to the deduct value to produce a corrected deduct value.

After all the subcomponent condition indexes are determined for a Component-Section, the CSCI (or, if sampling is used, the Sample Unit Condition Index, SUCI) is computed based on the individual subcomponent CIs and their weight factors. If sampling is used, the sample unit indexes for each Component-Section are aggregated into a CSCI by computing the average of the representative samples weighted by size. All calculations are made at the time an inspection is entered.

PM Inspection CSCI Computation

In a PM inspection, ratings are done against the subcomponents to determine a subcomponent condition index (SCCI) for each subcomponent, which is then aggregated to the overall Component-Section level to determine the Component-Section condition index (CSCI).

Condition Index Rollups

The preceding documentation segments described how a condition index is computed for a Component-Section after an inspection. The inspection CIs form the basis for computing a current CI for all inventory items in the hierarchy. CSCIs are rolled up hierarchically to compute condition indexes for each component (BCCI), system (SCI), the Building as a whole (BCI), the Site, and the Organization. Collectively, trends can be monitored, and **M&R**¹ can be scheduled accordingly.

- **(Building) Component CI (BCCI)** - For each Component, the BCCI is computed by taking the average of its Sections' CIs, weighted by replacement cost.
- **System CI (SCI)** - For each System, the SCI is computed by taking the average of its Component CIs, weighted by replacement cost.
- **Building CI (BCI)** - For each Building, the BCI is computed by taking the average of its System CIs, weighted by replacement cost.
- **Complex CI** - The Complex CI is computed by taking the average of the BCIs of each Building in the Complex, weighted by replacement cost.
- **Site CI** - The Site CI is computed by taking the average of the BCIs of each Building at the Site, weighted by replacement cost.
- **Organization CI** - The Organization CI is computed by taking the average of the BCIs of each Building at the Organization, weighted by replacement cost.

For more information about rollups, see ["APPENDIX A: About Rollup" on page 123](#).

¹Maintenance and Rehabilitation

Choose Assessment Type

Condition Assessment Types

This topic introduces the condition assessment (inspection) types available in BUILDER. Additional topics will go into further detail about direct ratings (including the Rapid Inspection method) and distress surveys and preventative maintenance inspections separately.

Further Information: More in-depth conceptual detail about direct ratings and distress surveys is available in the **Overview** chapter of ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, available by download from the SMS community user's group website at <https://www.sms.erd.c.dren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

BUILDER offers these condition assessment types:

- [direct ratings](#)
- [distress surveys](#)
- [preventative maintenance \(PM\) inspections](#) (starting with BUILDER version 3.4).

Each type is described briefly below, and more thoroughly at the links provided in the list above. All types allow for [sampling](#). None of the types yield a detailed engineering assessment, but all are designed to satisfy facility management data requirements regarding inventory condition and expected work requirements. In keeping with other aspects of BUILDER's design, every effort has been made to speed the process and ease the burden of performing condition assessments.

Direct Rating - Quick Introduction

When performing a direct condition rating, the inspector enters a color rating describing the Section's condition according to the diagram shown below.

RATING	DETERIORATION	M&R NEEDS
Green + Green Green –	Minor Deterioration	Routine Maintenance or Minor Repair
Amber + Amber Amber –	Moderate Deterioration	Necessary Repair or Replacement
Red + Red Red–	Significant Deterioration	Major Rehabilitation or Replacement


The rating for the Component-Section is determined by first choosing one of the three color bands (green, amber, or red) that corresponds to the amount of deterioration observed and the maintenance and rehabilitation (M&R) needs of the Component-Section. Then within that color band, one of three ratings is chosen according to whether the observed condition falls at the top, middle, or bottom of the color band. Each color rating is specifically defined in Appendix B of this Condition Assessment Guide, or Appendix E in the Condition Assessment Reference Manual or Online Help.

The color rating chosen produces a CSCI, which is calibrated to match the ratings that would result if a distress survey had been done.

Distress Survey - Quick Introduction

When performing a distress survey, inspectors record information about a Component-Section by recording the distresses on each subcomponent of the Component-Section. Each distress is given a severity rating (low, medium, or high) and density range (quantity) based on established criteria. BUILDER uses this inspection information to calculate the Component-Section Condition Index (CSCI), which is then tied to **M&R**¹ costs to form the basis for maintenance and rehabilitation planning and budgeting. This process is illustrated by the diagram shown below.

¹Maintenance and Rehabilitation

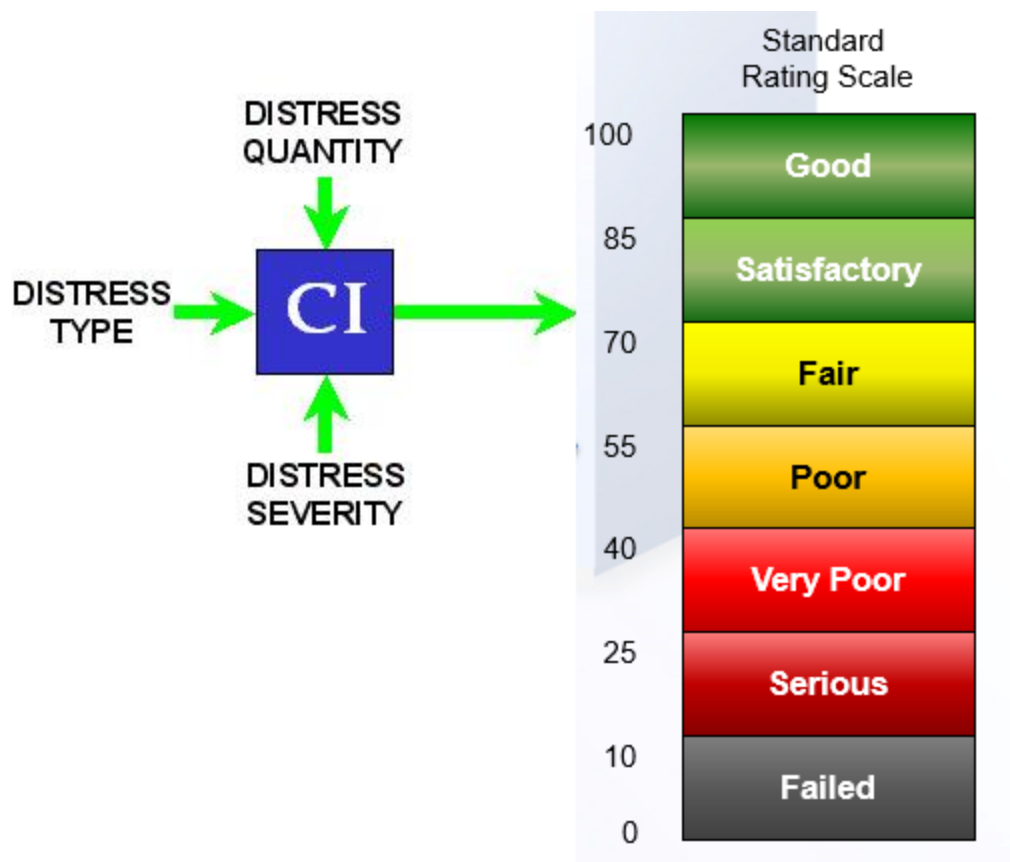

Preventative Maintenance Inspection - Quick Introduction

In addition to the direct rating and distress survey inspection approaches, BUILDER now offers a third inspection type option called the preventative maintenance (PM) inspection. The PM inspection approach is designed to align closely with routine preventive maintenance activities typically undertaken in an organization. This allows a technician performing regular PM work to record observations about the condition and operation of the component while he or she is conducting the maintenance. Under most circumstances, this is the most advantageous time to observe the true condition, when the component is being serviced and a more invasive survey can be done.

The objective of the PM inspection type is the same as that for the direct rating or distress survey: that is, to collect observations about issues adversely affecting the condition and operation of a component, then translate those observations into a quantitative condition index. The PM assessment method, however, is a hybrid of the distress and direct rating methods. Similar to the distress survey, observations are recorded against each subcomponent, allowing the assessor to pinpoint the specific item directly affected by an issue. However, instead of recording distresses, an inspector will provide a Green/Amber/Red color rating similar to the direct rating, but at the subcomponent level. In addition, the PM inspection

screen provides rating guidance criteria associated with each subcomponent, as well as a list of preventative maintenance tasks to be performed during the assessment.

BUILDER provides default criteria and PM tasks for select component types.

About Choosing Condition Assessment Type

The BUILDER condition assessment process is designed to require the minimum of data needed to make good managerial decisions about where attention and resources need to be focused. When a Building is new, or when inspecting a relatively new Component-Section with a long expected remaining service life, using a direct condition rating on each Component-Section will probably be sufficient. However, as a Component-Section begins to deteriorate, it is beneficial to gather more data during the inspection using a distress survey.

Section 2.4 in ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, provides additional information on pairing inspection types (distress survey vs. direct rating) with inspection objectives. This document is available for download at the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

Direct Ratings

About Direct Ratings

Direct rating is the most commonly used type of condition assessment in BUILDER. A direct rating allows a seasoned inspector to judge the overall condition of a Component-Section and quickly assign a color code corresponding to a condition tier.

The Direct Ratings segment of the documentation describes direct ratings and provides links to direct rating tasks. It also alerts the user to the option of using the Rapid Inspection method.

Note: Starting with BUILDER Version 3.4, direct rating may be performed on individual subcomponents in a Component-Section while at the distress survey screen, or while using the [PM \(preventative maintenance\) Inspection](#) feature. In releases before Version 3.4, direct ratings can only be performed on Component-Sections as a whole.

What is a Direct Rating?

A direct rating is the most commonly used type of condition assessment in BUILDER. In contrast to a distress survey (which requires the inspector to catalog each deficiency found, including its density and severity), a direct rating allows a seasoned inspector to judge the overall condition of a Component-Section and quickly assign a corresponding color rating (Red, Amber, Green), by taking into account the same distress/severity/density factors of a distress survey but without the increased data input.

Using direct ratings is a quick and efficient way to assess the condition level of each Section, and after Sections have been inspected and assigned a condition rating, the condition of the Sections are rolled up to indicate overall condition of Components and Systems, and so on up the asset tree.

Beginning with BUILDER Version 3.4, direct rating can also be used on individual subcomponents, at the distress survey screen. This allows users to mix direct rating and distress survey within a Section.

When to Use a Direct Rating

Direct rating inspections, because they are faster and less complex than other options, can be ideal for inventory that is being brought into BUILDER in bulk for the first time.

Note: For an even quicker start, consider using the Rapid Inspection method, which can speed up the process of creating direct rating inspections. Rapid inspection is described in detail at "[Rapid Inspection Method \(Direct Rating\)](#)" on page 32.

However, there are stages in the lifecycle of an asset where a more detailed condition assessment option, the distress survey, serves best to prolong the asset's useful life. To read engineering advice concerning the best timing for a distress survey, consult the **Overview** chapter of the manual referenced immediately below.

Resource: ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, is available by download from the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

Rapid Inspection Option

For assessments using the direct condition rating method, you can use BUILDER's [Rapid Inspection method](#) for quick and easy input. In cases where entire Components, Systems, Buildings, or Complexes have a uniform or nearly uniform condition rating, you can input the condition rating at levels higher than Component-Section, then adjust the condition rating of individual Component-Sections as needed.

Note: There is no Rapid Inspection method for distress surveys or PM inspections.

Additional Information

Chapter 5 of the December 2018 ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections* discusses some of the concepts behind direct rating procedures. Written for BUILDER Version 3, the Condition Assessment Reference Manual is available by download from the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

Direct Rating Tasks

Tasks that can be performed on a direct rating are:

["View a Direct Rating " below](#)

["Add a Direct Rating " on page 23](#)

["Edit a Direct Rating " on page 27](#)

["Delete an Inspection" on page 77](#)

View a Direct Rating





This topic covers how to open and view an existing direct rating that does not use sampling, and explains the information included there.

Open an Inspection

Note: An inspection may be viewed at any time. Editing, however, may only be performed within a specified number of days after the inspection date. The number of days is typically 30 by default in BUILDER as delivered to customers, but can be configured by a BUILDER Administrator.

To open an inspection for viewing or editing,


1. If you are not already in the condition tree, activate the **Condition** ribbon.
2. Navigate to the Building containing the desired inspection.
3. Expand the Building's **By System** folder.
4. Navigate to the desired Section and click on its name. *In the content area you should see a table listing at least one inspection.*

 New	 Copy	 Delete	 Reports
Section Name: East windows B202001 WINDOWS Aluminum Windows			
Section Qty: 19 EA			
Inspection Date	Inspector		
11/09/2017	Fisher, Audrey		
10/11/2017	Fisher, Audrey		
10/05/2017	Fisher, Audrey		

Note: The oldest inspection was automatically generated by BUILDER as a direct rating when the Section was added to the inventory. No inspector name will be listed for this inspection.

Because an inventory item is assumed to be new at installation, BUILDER assigns a Green+ rating to this automatically generated inspection.

5. In the **Inspection Date** column, activate an inspection date link. *The inspection should open. The radio button under the **Type** heading indicates what type of inspection you are viewing or editing.*

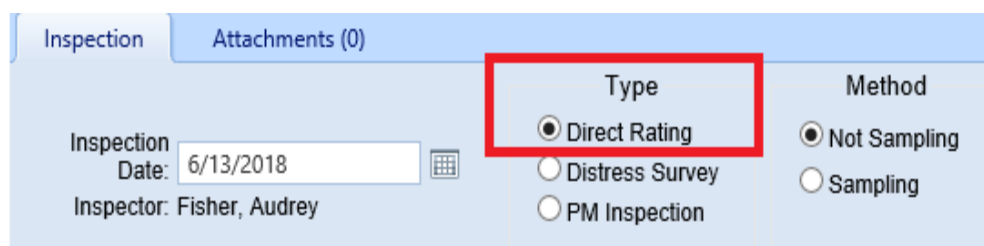

The screenshot shows a web form for an inspection. At the top, there are two tabs: 'Inspection' (active) and 'Attachments (0)'. Below the tabs, there is a section for 'Inspection Date' with a text input field containing '6/13/2018' and a calendar icon. Below that, there is a section for 'Inspector' with the text 'Fisher, Audrey'. To the right of these fields, there is a section for 'Type' and 'Method'. The 'Type' section has three radio buttons: 'Direct Rating' (selected), 'Distress Survey', and 'PM Inspection'. The 'Method' section has two radio buttons: 'Not Sampling' (selected) and 'Sampling'. The 'Type' section is highlighted with a red box.

View Direct Rating Inspection Data

The direct rating inspection screen has two tabs where you can view inspection data: **Inspection** and **Attachments**. Above the tabs is the toolbar.

Select a link below for how to view

- ["Inspection Identification Data" below](#) (date, inspector name, inspection type and method)
- ["Inspection Results" on the facing page](#)
- ["Inspection Attachments" on page 22](#)
- ["Inspection Comments" on page 22](#)
- ["Inventory Information" on page 22](#)

Inspection Identification Data

- **Inspection Date.** The inspection date can be changed in this field. The oldest inspection is a direct rating that is automatically generated by BUILDER as of the date that the Component-Section was built, installed, or renewed.
- **Inspector (Read-Only).** Inspector name, automatically filled in by BUILDER based on user login. This will not be present for the oldest inspection, which is automatically generated by BUILDER.
- **Type.** Inspection type. Available types are **Direct Rating**, **Distress Survey**, and **PM inspection**¹.

¹Preventative maintenance inspection

- **Method.** Inspection method. Available methods are **Not Sampling** and **Sampling**.

Inspection	Attachments (0)
Inspection Date: 6/13/2018 Inspector: Fisher, Audrey	<div> <div>Type</div> <input checked="" type="radio"/> Direct Rating <input type="radio"/> Distress Survey <input type="radio"/> PM Inspection </div> <div> <div>Method</div> <input checked="" type="radio"/> Not Sampling <input type="radio"/> Sampling </div>

Inspection Results

All inspection results shown in the header section are read-only. They can not be directly changed in the BUILDER interface, only by changing the underlying assessment data or the selection on the corresponding Condition Rating Scale.

- **CSCI (Read-Only).** This is the Component-Section condition index corresponding to the color rating chosen by the inspector (see [Inspector's rating judgment](#), later in this bullet list). In addition, the field's background color also matches the color rating. If the background color of the CSCI box is white, it means that data has not yet been entered to produce a result.
- **CSCCI (Read-Only)(Painted or coated items only).** If the Component-Section is painted or coated, the screen will display a separate condition index for the coating, as shown in the red box in this illustration:

Inspection	Attachments (0)	Type	Method	Results
Inspection Date: 6/26/2018 Inspector: Fisher, Audrey	<input checked="" type="radio"/> Direct Rating <input type="radio"/> Distress Survey <input type="radio"/> PM Inspection	<input checked="" type="radio"/> Not Sampling <input type="radio"/> Sampling	CSCI: 71 CSCCI: 50	

- **Inspector's rating judgment.** The radio button selected under **Direct Condition Rating Scale** indicates the inspector's rating judgment for the Component-Section as a whole, and for the paint/coating if applicable:

Direct Condition Rating Scale			Paint/Coating Condition Rating Scale		
<input type="radio"/> Green +	<input type="radio"/> Amber +	<input type="radio"/> Red +	<input type="radio"/> Green +	<input type="radio"/> Amber +	<input checked="" type="radio"/> Red +
<input type="radio"/> Green	<input type="radio"/> Amber	<input type="radio"/> Red	<input type="radio"/> Green	<input type="radio"/> Amber	<input type="radio"/> Red
<input checked="" type="radio"/> Green -	<input type="radio"/> Amber -	<input type="radio"/> Red -	<input type="radio"/> Green -	<input type="radio"/> Amber -	<input type="radio"/> Red -

Inspection Attachments

The number in parentheses shown on an inspection's **Attachments** tab indicates how many attachments are connected with the inspection. (This is something you can see even when you are at the **Inspection** tab.) If the number is zero, there are no attachments yet associated with the inspection.


To view one or more attachments,

1. Navigate to and activate the **Attachments** tab. *If attachments are present, a table will display their type, title, and description.*
2. Activate the link in the **Title** column. *The attachment will appear in the "Image Viewer" popup window.*
3. When finished viewing, activate the **Close** button on the popup window toolbar. *You will be returned to the table of attachments.*
4. Repeat the two steps immediately above for additional attachments as desired.

Inspection Comments

To view comments for the inspection, activate the **Comment** button on the toolbar above the inspection display. *The "Inspection Comments" popup window will appear.*

Note: If the **Comment** button icon does not show a white checkmark on a green background, no comments have been attached to the inspection.

To close the "Inspection Comments" popup without making any changes, either activate the  **Cancel** button on the popup toolbar, or activate the **X** in the upper right corner of the popup window.

Inventory Information

Inventory information is not directly a part of the inspection; however, when viewing an inspection in the condition tree, you have the option to switch to **Inventory** view to see more detail about the Component-Section if desired, by following these steps:

1. Without changing your location in the condition tree, activate the **Inventory** ribbon.
2. Activate the tabs as desired to see inventory details stored for the Section.
3. To return to the inspection, activate the **Condition** ribbon without changing your location in the inventory tree.

When you return to the condition tree, you will not be viewing the inspection itself, but rather the listing of inspections for that Component-Section. Simply re-select the date of the desired inspection to open it again.

Related Links

["Add a Direct Rating " below](#)

["Edit a Direct Rating " on page 27](#)

["Delete an Inspection" on page 77](#)


Add a Direct Rating

This topic covers how to create a new direct rating inspection that does not use sampling.

Initiate a New Inspection

To initiate a new inspection,

1. Make sure you are in the condition tree by activating the **Condition** ribbon.
2. Navigate to the Building containing the Section to be inspected.
3. Expand the Building's **By System** folder.
4. Navigate to the Section to be inspected and click on its name. *In the content area you should see a table listing at least one inspection.*
5. In the content area toolbar, activate the **New** icon. *Result: In the Content area you should see a screen similar to the one illustrated in [Navigating the Direct Rating Inspection Screen](#).*

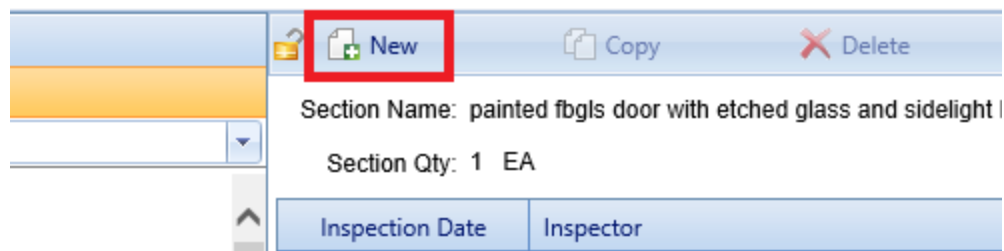

Troubleshooting tip: If the **New** icon is deactivated, this may be because an inspection has already been recently recorded for the Section. If the designated editing window (typically 30 days) has not elapsed, you can edit the existing inspection instead of creating a new inspection.

Select Inspection Type

At the default new inspection screen shown below, you have these choices in the **Type** column:

- Direct Rating
- Distress Survey
- **PM inspection**¹ (new as of BUILDER Version 3.4)

The screenshot shows the 'Inspection' screen in the BUILDER software. The interface includes two tabs: 'Inspection' and 'Attachments (0)'. The 'Inspection' tab is selected. The form contains the following elements:

- Inspection Date:** 6/13/2018
- Inspector:** Fisher, Audrey
- Type:** Radio buttons for Direct Rating (selected), Distress Survey, and PM Inspection.
- Method:** Radio buttons for Not Sampling (selected) and Sampling.
- Direct Condition Rating Scale:** A section with three columns of radio buttons for rating conditions: Green (+, , -), Amber (+, , -), and Red (+, , -).

Direct Rating is the default inspection **Type** when you create a new inspection, so if this is the type you wish to create, nothing needs to be done to select it. To create a distress survey instead, see ["Add a Distress Survey" on page 44](#); or, to create a preventative maintenance inspection, see ["Add a Preventative Maintenance Inspection" on page 72](#).

Enter Direct Rating Inspection Data

Permissions/Access Note: At the far left of the toolbar above the **Inspection** and **Attachments** tabs, a record lock indicator shows as open (🔓) if the inspection is unlocked and can be edited if you have appropriate permissions. If the lock shows as closed (🔒), the inspection is locked. For example, it may have been exported to BRED.

The direct rating inspection screen has two tabs where you can enter inspection data: **Inspection** and **Attachments**. Above the tabs is the toolbar.

¹Preventative maintenance inspection

Select a link below for how to add

- ["Inspection Identification Data" below](#)
- ["Inspector's Condition Rating" below](#)
- ["Inspection Attachments" on page 83](#) (this links to a separate topic)
- ["Inspection Comments" on page 80](#) (this links to a separate topic)

Inspection Identification Data

The following identifying information is contained in the header section at the **Inspection** tab:

- **Inspection Date.** Note that the oldest inspection is one that is automatically generated by BUILDER, as a direct rating, as of the date that the Component-Section was built, installed, or renewed.
- **Inspector (Read-Only).** Inspector name, automatically filled in by BUILDER based on user login. Inspector name will not be present for the oldest inspection, which is automatically generated by BUILDER.
- **Type.** Available inspection types are **Direct Rating**, **Distress Survey**, and **Preventative Maintenance**.
- **Method.** Available inspection methods are **Not Sampling** and **Sampling**.

After the inspection type has been selected, you should be finished with identification entries unless you wish to use sampling. (**Not Sampling** is the default method, and what is described in this topic.) Your name, as creator of the inspection, is applied to the inspection and is not modifiable.

For information about using sampling, see ["How To Prepare for Sampling" on page 88](#).

Inspector's Condition Rating

Below the header section (and below any intervening detail about samples) is where you designate a color rating for the Section being inspected.

For a detailed description of each color rating, see Appendix B in this Condition Assessment Guide, or Appendix E in the Condition Assessment Reference Manual or Online Help.

If the Section is painted or coated, consult Appendix C in this Condition Assessment Guide, or Appendix F in the Condition Assessment Reference Manual or Online Help for detailed description of each paint color rating.

Resource: The Condition Assessment Reference Manual, ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, is available by

download from the SMS community user's group website at <https://www.sms.erdc.dren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

Direct Condition Rating

The radio button selected in the **Direct Condition Rating Scale** indicates the inspector's rating judgment for the Component-Section as a whole, not including paint or coating if the Paint/Coating Condition Rating grid appears to the right.

Paint/Coating Condition Rating

If the Component-Section is marked as painted in inventory, BUILDER will display the **Paint/Coating Condition Rating Scale**, and the appropriate color rating radio button should be selected.

Display of Inspection Results

The inspection result(s) are shown in the header section and are read-only. Each result is a numerical equivalent of the radio button selection made in the corresponding Condition Rating Scale. In addition, the background color of the CSCI display field should match the color rating selected.

- **CSCI (Read-Only).** In the header section, under the heading **Results**, is the Component-Section condition index corresponding to the rating chosen by the inspector.
- **CSCCI (Painted or coated items only) (Read-Only).** If the Component-Section is painted or coated, the screen will show a separate condition index for the coating at the upper right, below the CSCI.

Inspection Attachments

To associate one or more attachments with the inspection, see the topic ["Inspection Attachments" on page 83](#).

The number in parentheses shown on the **Attachments** tab indicates how many attachments are connected with the inspection. If the number is zero, there are no attachments currently associated with the inspection.

Inspection Comments

To add, edit, or delete inspection comments, see the topic ["Inspection Comments" on page 80](#).

Save Direct Rating

When finished with entering the desired direct rating information, activate **Save** on the content area toolbar.

Related Links

["View a Direct Rating " on page 19](#)

["Edit a Direct Rating " below](#)

["Delete an Inspection" on page 77](#)

Edit a Direct Rating





This topic covers how to edit an existing direct rating inspection that does not use sampling.

Open an Inspection

Note: An inspection may be viewed at any time. Editing, however, may only be performed within a specified number of days after the inspection date. The number of days is typically 30 by default in BUILDER as delivered to customers, but can be configured by a BUILDER Administrator.

To open an inspection for viewing or editing,

1. If you are not already in the condition tree, activate the **Condition** ribbon.
2. Navigate to the Building containing the desired inspection.
3. Expand the Building's **By System** folder.
4. Navigate to the desired Section and click on its name. *In the content area you should see a table listing at least one inspection.*

 New	 Copy	 Delete	 Reports
Section Name: East windows B202001 WINDOWS Aluminum Windows			
Section Qty: 19 EA			
Inspection Date	Inspector		
11/09/2017	Fisher, Audrey		
10/11/2017	Fisher, Audrey		
10/05/2017	Fisher, Audrey		

Note: The oldest inspection was automatically generated by BUILDER as a direct rating when the Section was added to the inventory. No inspector name will be listed for this inspection.

Because an inventory item is assumed to be new at installation, BUILDER assigns a Green+ rating to this automatically generated inspection.

5. In the **Inspection Date** column, activate an inspection date link. *The inspection should open. The radio button under the **Type** heading indicates what type of inspection you are viewing or editing.*

Edit Direct Rating Inspection Data

Permissions/Access Note: At the far left of the toolbar above the **Inspection** and **Attachments** tabs, a record lock indicator shows as open (🔓) if the inspection is unlocked and can be edited if you have appropriate permissions. If the lock shows as closed (🔒), the inspection is locked. For example, it may have been exported to BRED.

The direct rating inspection screen has two tabs where you can edit inspection data: **Inspection** and **Attachments**. Above the tabs is the toolbar.

Select a link below for how to edit

- ["Inspection Identification Data" below](#)
- ["Inspector's Condition Rating" on the facing page](#)
- ["Inspection Attachments" on page 83](#) (this links to a separate topic)
- ["Inspection Comments" on page 80](#) (this links to a separate topic)

Inspection Identification Data

- **Inspection Date.** The inspection date can be changed in this field. The oldest inspection is a direct rating that is automatically generated by BUILDER as of the date that the Component-Section was built, installed, or renewed.
- **Inspector (Read-Only).** Inspector name, automatically filled in by BUILDER based on user login. This will not be present for the oldest inspection, which is automatically generated by BUILDER.
- **Type.** Inspection type. Available types are **Direct Rating**, **Distress Survey**, and **PM inspection**¹.
- **Method.** Inspection method. Available methods are **Not Sampling** and **Sampling**.

¹Preventative maintenance inspection

The inspection date can be changed, but this is not recommended. The designated Inspector name can not be changed.

If you change the inspection type using the radio buttons under **Type**, all information entered for the inspection type you changed from will be ignored.

For information about using sampling, see ["How To Prepare for Sampling" on page 88](#). The instructions in this current topic assume you are using **Not Sampling** as the inspection method.

Inspector's Condition Rating

Below the header section (and also below the intervening detail about samples, if sampling is used) is where the color rating is designated for the Section, and separately for its paint/coating, if applicable. You can change the rating(s) and activate **Save** on the content area toolbar.

For a detailed description of each color rating, see Appendix B in this Condition Assessment Guide, or Appendix E in the Condition Assessment Reference Manual or Online Help.

If the Section is painted or coated, consult Appendix C in this Condition Assessment Guide, or Appendix F in the Condition Assessment Reference Manual or Online Help for detailed description of each paint color rating.

Note: Both Component-Section and paint ratings allow you to enter a comment by activating the **Comment** button on the toolbar. See ["Inspection Comments" on page 80](#) for more information.

Resource: The Condition Assessment Reference Manual, ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, is available by download from the SMS community user's group website at <https://www.sms.erdc.dren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

Direct Condition Rating

The radio button selected under **Direct Condition Rating Scale** indicates the inspector's rating judgment for the Component-Section as a whole, not including paint or coating if the **Paint/Coating Condition Rating Scale** grid appears to the right.

Paint/Coating Condition Rating

If the Component-Section is marked as painted, the appropriate color rating radio button under **Paint/Coating Condition Rating Scale** should be selected.

Display of Inspection Results

The inspection result(s) are shown in the header section and are read-only. Each result is a numerical equivalent of the radio button selection made in the associated Condition Rating Scale. In addition, the background color of the CSCI display field should match the color rating selected.

- **CSCI (Read-Only).** In the header section, under the heading **Results**, is the Component-Section condition index corresponding to the rating chosen by the inspector.
- **CSCCI (Painted or coated items only) (Read-Only).** If the Component-Section is painted or coated, the screen will show a separate condition index for the coating at the upper right, below the CSCI.

Inspection Attachments

Note: The only way to "edit" an attachment is to delete the attachment link from the list of attachments and link to an attachment that has been corrected as desired.

To associate one or more attachments with the inspection, see the topic ["Inspection Attachments" on page 83](#).

Inspection Comments

To add, edit, or delete inspection comments, see the topic ["Inspection Comments" on page 80](#).

Save Edited Direct Rating

After you have made your desired edits, be sure to activate **Save** on the content area toolbar.



Related Links

["View a Direct Rating " on page 19](#)

["Add a Direct Rating " on page 23](#)

["Delete an Inspection" on page 77](#)

Delete an Inspection

This topic outlines the instructions and needed permissions for deleting an inspection (direct rating or distress survey or preventative maintenance inspection)

Who May Delete an Inspection

- A Master Planner or BUILDER administrator may delete any inspection.
- You may delete any of your own inspections within 30 days (or possibly less—see **CAUTION** below) of their creation.





CAUTION: If the default 30-day window has been changed to a different period of time in your organization, that different period of time is what will apply instead.

How to Delete


To delete an inspection,

1. Navigate to the applicable Component-Section in the condition tree and select it.
2. In the table of inspections, activate the inspector name in the row containing the inspection to be deleted. *The row will become highlighted, as shown below.*

Note: The reason for activating the inspector name is that selecting the inspection date will activate the link and take you into the inspection itself.

 New  Copy  Delete  Reports	
Section Name: A103001 STANDARD SLAB ON GRADE General	
Section Qty: 4855 SF	
Inspection Date	Inspector
06/05/2018	Fisher, Audrey
06/05/2018	Fisher, Audrey
01/01/1961	


3. Activate the **✖ Delete** button on the toolbar.

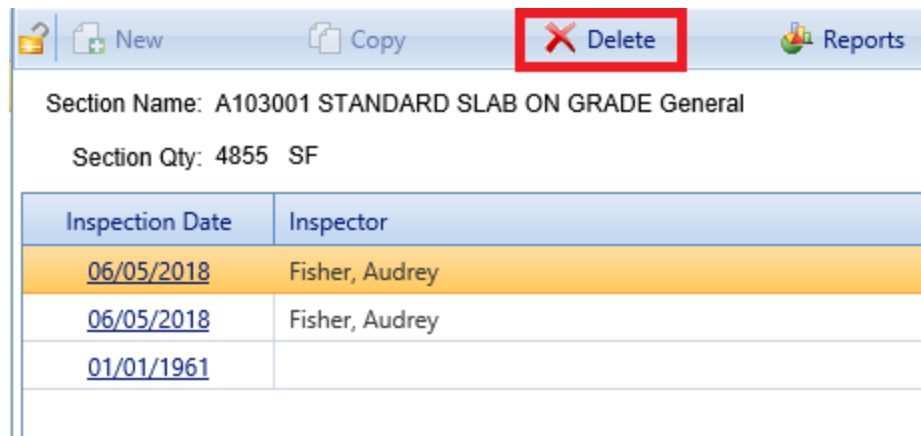

The screenshot shows the BUILDER software interface. At the top, there is a toolbar with buttons for 'New', 'Copy', 'Delete' (highlighted with a red box), and 'Reports'. Below the toolbar, the 'Section Name' is 'A103001 STANDARD SLAB ON GRADE General' and the 'Section Qty' is '4855 SF'. A table below shows inspection data:

Inspection Date	Inspector
06/05/2018	Fisher, Audrey
06/05/2018	Fisher, Audrey
01/01/1961	

4. Select **OK** in the confirmation popup.

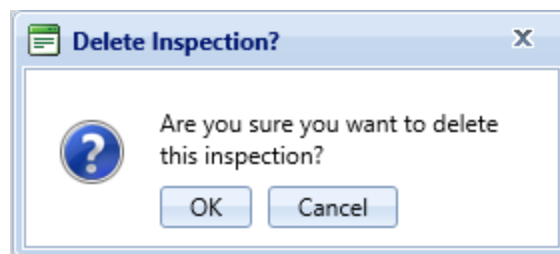

Rapid Inspection Method (Direct Rating)

In an effort to speed the data input process, BUILDER offers a Rapid Inspection method feature for rapidly creating direct rating assessment records. This topic

- outlines types of situations where the Rapid Inspection method can be used to advantage
- explains how to use the Rapid Inspection method
- lists the [required information](#) to be entered

Example Situations

Some example situations where the Rapid Inspection feature might be used:

1. You have just renovated a family housing complex, and multiple systems have been completely replaced in every house. You need to record these new conditions in your BUILDER database.

2. You have just completed your BUILDER inventory, and although your resources for physical inspections are very limited, you have staff members who are intimately knowledgeable of conditions in most of your Buildings.
3. You structured your BUILDER inventory so that every door, window, room wall/floor/ceiling, etc. is identified as a Component-Section (see the inventory for 1131 Administration Building in the Example database as an illustration of this). Now that you have to perform an assessment, you find that every door, window, room wall/floor/ceiling, etc. must have its own inspection record, but you want to do a quick walkthrough of the Building and record component ratings for everything.


In all of these situations, you want to input condition ratings for Systems or Components for which you already know the rating. This is when Rapid Inspection can be very useful.

Note: After explaining how to implement a Rapid Inspection, this topic will outline an appropriate Rapid Inventory approach for each of the situations above, in the section ["Example Situations Revisited" on page 35](#).

Initiate a Rapid Inspection

To launch the Rapid Inspection window:

1. Highlight the smallest inventory item (Site, Complex, or Building) in the condition assessment tree that contains all of the Buildings that the rapid inspection will be used in.
2. Either (a) activate the **Rapid Inspection** icon on the inspection toolbar menu, or (b) right-click the inventory item and select **Rapid Inspection** from the dropdown list.

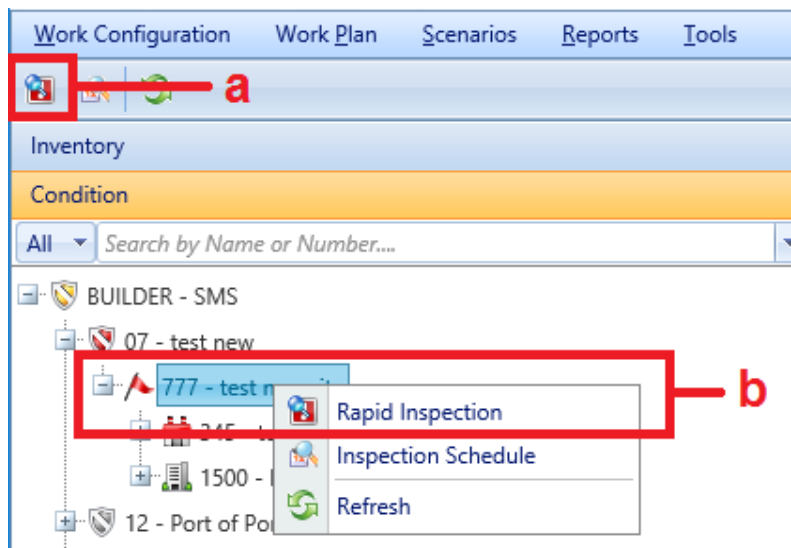

The "Rapid Inspection" popup window will appear:

Enter Rapid Inspection Parameters

Required Data

The following data are required before you can proceed with the Rapid Inspection process:

- **System.** In the dropdown list, select the System for which inspections are to be created.
- **Component and/or Material/Type.** If you do not specify a Component, then every Component-Section belonging to the selected kind of System in a selected Building(s) will have an assessment created for it. However, if you specify a Component but not a Material/Type, then every Component-Section belonging only to that kind of component in a selected Building(s) will have an assessment created for it. Finally, if you specify a Material/Type, then every Component-Section of that material and type in the selected Building(s) will have an assessment created for it.
- **Condition Rating for the Selected Items** - Select a Condition Rating for all of the inspections to be created.
- **Buildings to be Included in Rapid Inspection Entry** - Select the Buildings for which condition assessments are to be created by using the arrow keys to build the list of **Selected Buildings** from the **Available Building** list.

Optional Data

If you want to enter a comment to be recorded with every inspection created, activate the **Comment** button in the toolbar.

Activate Rapid Inspection

When all data has been entered, activate the **Proceed** button to start the Rapid Inspection process. If you do not wish to perform the Rapid Inspection, activate the **Close** button.

Example Situations Revisited

For the examples discussed above, here is how this feature may have been used:

1. You know that all of the roofs were rebuilt in the family housing complex. Select all of the houses, select Roofing as the System, and select G+ as the rating. Clicking **Proceed** will create an inspection record with condition rating G+ for every Component-Section in the roofing system of every selected house.
2. Have each staff member sit down sequentially with BUILDER to do the following process: Select sets of Buildings within his/her expertise that all have the same known condition for certain Systems or Components. Use the Rapid Inspection feature to create inspections as appropriate. If two staff members happen to input records for the same Component-Section, the later rating will overwrite the earlier rating if the ratings are done on the same day. (BUILDER allows only one inspection record per day per Component-Section.)
3. You have scanned the interior doors in your walk-through of the Building, and they are all in good condition (rating G). Your inventory has 50 interior door Component-Sections, each door identified with the room it is in. Use Rapid Inspection by selecting the Building, selecting Interior Construction/Interior Doors, and selecting condition rating G. Clicking **Proceed** will automatically create 50 inspection records, one for each interior door Component-Section.

Distress Surveys

About Distress Surveys

This topic introduces the distress survey type of condition assessment, in which the inspector lists the distresses in a Component-Section. Beginning with BUILDER Version 3.4, however, a distress survey condition assessment also allows the inspector to select, on a subcomponent by subcomponent basis, between (a) direct rating and (b) entering descriptions of distresses found.

The topic also supplies links to distress survey tasks.

BUILDER 3.4 Changes to Distress Surveys

The distress survey interface has been changed, introducing the ability to assign direct ratings at the subcomponent level as an alternative to listing distresses for the subcomponent.

New Feature: Direct Rating Option for Subcomponents

A new column in the distress survey table of subcomponents (the table you see when you select **Distress Survey** as your inspection type) allows you the option to apply a direct rating to individual subcomponents as an alternative to listing distresses for them.

By contrast, when you select **Direct Rating** as the inspection type to perform, that direct rating applies to the whole Component-Section.

Interface Changes

At the table of subcomponents that is presented when you select **Distress Survey** as the inspection type, the following changes have been made from Version 3.3.12:

- **D/F column deleted.** The subcomponent-level **D/F** (Defect Free) checkbox column has been removed. Instead, you have the option to select **G+** in the **Direct Rating** column.
- **Insp. column deleted.** The **Insp.** (Inspected) checkbox column has been removed.
- **N/A column moved.** The **N/A** checkbox column has been moved before the **Subcomponent** column.
- **Direct Rating column added.** For any given subcomponent, you can select a direct rating from the dropdown list in the Direct Rating column as an alternative to linking to the "Distresses" popup and listing distresses there.

Subject to your organization's policies, technically at least you can mix distress listings and direct ratings at the subcomponent level.

Note: If both a direct rating and distresses are entered for the same subcomponent, the direct rating will take precedence.

What is a Distress Survey?

A distress survey is the most thorough type of condition assessment that can be performed on a Component-Section level in BUILDER. It is the Component-Section level condition assessment type that provides the greatest detail as to a Section's deficiencies. It is also more time consuming to perform than a [direct rating](#).

Once details as to the severity and density of a Section's deficiencies have been entered, BUILDER will calculate the appropriate condition rating for the Section. After Sections have been inspected, the condition of the Sections are rolled up to indicate overall condition of Components and Systems, and so on up the asset tree.

When to Use a Distress Survey

To read engineering advice concerning the best timing for a distress survey, see ["About Choosing Condition Assessment Type" on page 16](#).

Additional Information

ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections* (December 2018) provides more background conceptual information about condition assessments, and in Chapter 4 provides additional discussion about details such as distress density. Written for BUILDER Version 3, this document is available by download from the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

Distress Survey Tasks

Tasks that can be performed on Distress Surveys are:

["View a Distress Survey " on the next page](#)

["Add a Distress Survey " on page 44](#)

["Edit a Distress Survey " on page 47](#)

["Distress Survey Data \(Not Sampling\)" on page 48](#)

["Distress Survey: Distress-Level Data" on page 55](#)

["Delete an Inspection" on page 77](#)

View a Distress Survey


This topic covers how to open and view an existing distress survey that does not use sampling, and explains the information included there.

Open an Inspection

Note: An inspection may be viewed at any time. Editing, however, may only be performed within a specified number of days after the inspection date. The number of days is typically 30 by default in BUILDER as delivered to customers, but can be configured by a BUILDER Administrator.

To open an inspection for viewing or editing,

1. If you are not already in the condition tree, activate the **Condition** ribbon.
2. Navigate to the Building containing the desired inspection.
3. Expand the Building's **By System** folder.
4. Navigate to the desired Section and click on its name. *In the content area you should see a table listing at least one inspection.*

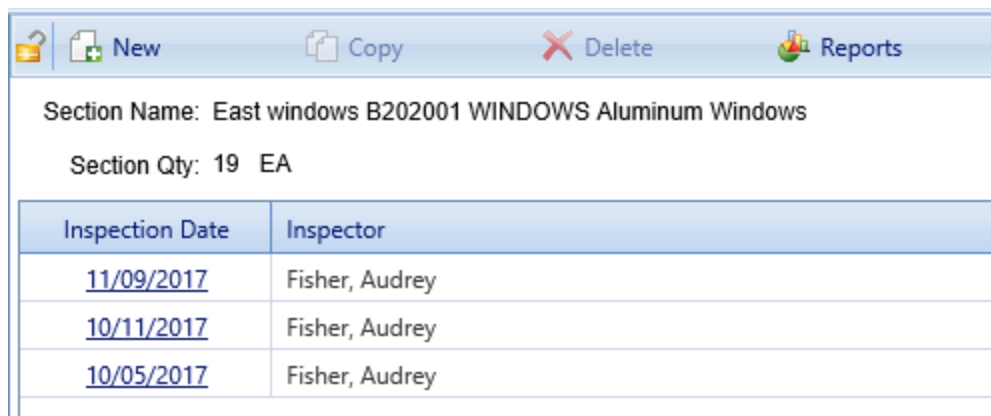

The screenshot shows a software interface with a ribbon at the top containing icons for 'New', 'Copy', 'Delete', and 'Reports'. Below the ribbon, the 'Section Name' is 'East windows B202001 WINDOWS Aluminum Windows' and the 'Section Qty' is '19 EA'. A table below this lists inspections with columns for 'Inspection Date' and 'Inspector'.

Inspection Date	Inspector
11/09/2017	Fisher, Audrey
10/11/2017	Fisher, Audrey
10/05/2017	Fisher, Audrey

Note: The oldest inspection was automatically generated by BUILDER as a direct rating when the Section was added to the inventory. No inspector name will be listed for this inspection.

Because an inventory item is assumed to be new at installation, BUILDER assigns a Green+ rating to this automatically generated inspection.

5. In the **Inspection Date** column, activate an inspection date link. *The inspection should open. The radio button under the **Type** heading indicates what type of inspection you are viewing or editing.*

View Distress Survey Inspection Data

Information about a distress survey is distributed as follows:

- The **Inspection** tab shows (1) a header section containing inspection identification data and CI results, followed by (2) a table of subcomponents showing higher-level information about each potential subcomponent in the Section (some of which might simply be recorded as not applicable).
- For each subcomponent that has distresses recorded against it, a popup can show details about each distress.
- If attachments (the number of which is shown in parentheses on the **Attachments** tab) are associated with the inspection, these are accessible from the **Attachments** tab.
- If one or more comments have been recorded for the inspection, they are shown together in a popup accessed by activating the **Comment** button on the content area toolbar.

Information contained at the inventory tree can sometimes provide helpful background information for evaluation.

Select a link below for how to view

- ["Inspection Identification Data" on the next page](#) (date, inspector name, inspection type and method)
- ["CI Results" on the next page](#)
- ["Inspection Details: Table of Subcomponents" on the next page](#)
- ["Inspection Details: Distresses Popup Window" on page 41](#)
- ["Inspection Attachments" on page 43](#)
- ["Inspection Comments" on page 43](#)
- ["Inventory Information" on page 44](#)

Inspection Identification Data

The following identifying information is contained in the header section at the **Inspection** tab:

- **Inspection Date.** Note that the oldest inspection is one that is automatically generated by BUILDER, as a direct rating, as of the date that the Component-Section was built, installed, or renewed.
- **Inspector (Read-Only).** Inspector name, automatically filled in by BUILDER based on user login. Inspector name will not be present for the oldest inspection, which is automatically generated by BUILDER.
- **Type.** Available inspection types are **Direct Rating**, **Distress Survey**, and **Preventative Maintenance**.
- **Method.** Available inspection methods are **Not Sampling** and **Sampling**.

The screenshot shows a software interface for inspection data entry. It features a header with two tabs: 'Inspection' and 'Attachments (0)'. The 'Inspection' tab is selected. Below the tabs, there are input fields for 'Inspection Date' (displaying 6/13/2018) and 'Inspector' (displaying Fisher, Audrey). To the right of these fields are two groups of radio buttons. The first group, labeled 'Type', includes 'Direct Rating' (which is selected), 'Distress Survey', and 'PM Inspection'. The second group, labeled 'Method', includes 'Not Sampling' (which is selected) and 'Sampling'. The 'Method' group is enclosed in a red rectangular box.

CI Results

- **CSCI (Read-Only).** The Component-Section condition index *as of the time of the opened inspection* is listed under the heading **Results** at the right side of the header section.

Even though some or all of the CSCI value is obtained from distress entries, the background color of the CSCI display box is coded to approximate the direct rating color the given CSCI value would correspond to in a direct rating inspection: it will be green, amber, or red. If the background color of the CSCI box is white, it means that data has not yet been entered to produce a result.

- **CSCCI (Read-Only)(Painted or coated items only).** If the Component-Section is painted or coated, the screen will display a separate condition index for the coating.

Inspection Details: Table of Subcomponents

Below the header section is a table of subcomponents. (If sampling is being used, there will be an intervening section showing sample locations.)

Save Comment N/A 3/5/2019

Inspection Attachments (0)

Inspection Date: 3/5/2019 Inspector: Fisher, Audrey

Type: ☐ Direct Rating ☒ Distress Survey ☐ PM Inspection

Method: ☒ Not Sampling ☐ Sampling

Results: CSCI:

☐ Defect Free

N/A	Subcomponent	Direct Rating	Distresses
<input checked="" type="checkbox"/>	Flush Valve Assembly	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Piping/Fittings	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Seat/Cover	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Unit	<input type="text"/>	Distresses (0)

The table of subcomponents lists customary subcomponents for the given type of Component-Section. It has the following columns (see illustration above):

- **N/A.** If, in a completed inspection, the checkbox in the **N/A** column is marked for a given subcomponent, that means this Component-Section does not contain that subcomponent type.

Note: In a new distress survey that has not been filled in yet, all subcomponents are marked **N/A** by default.

- **Subcomponent (Read-Only).** This column shows the subcomponent type.
- **Direct Rating.** The dropdown lists in this column allow you the option to apply a direct (color) rating to individual subcomponents instead of recording distresses.
- **Distresses.** In each row of the table, the [Distresses](#) link brings up the "Distresses" popup window, where distresses can be entered and existing distresses can be viewed in detail. (See the listing below under ["Inspection Details: Distresses Popup Window"](#) below for a description of distress details.)

Inspection Details: Distresses Popup Window

Each subcomponent that has distresses recorded against it will contain data in the "Distresses" popup window that is accessed via the [Distresses](#) link in the [table of subcomponents](#).

Distress Details Header Data

The header of the "Distresses" popup window provides the following information (see illustration below):

- **Component.** Identifies the Component number and name.
- **Section.** Identifies the Section number and name.
- **Subcomponent.** This identifies the subcomponent currently being detailed.
- **Subcomponent UM.** This shows the Unit of Measure (UM) being used for the subcomponent. Each subcomponent has a standard default UM that is used in BUILDER. However, by checking the **Alternative UM "Each"** checkbox, a user can change the UM for the subcomponent being evaluated from the default to "Each," if desired.
- **Alternative UM "Each" checkbox.** If this is checked, the unit of measure used for the component will be Each (EA) rather than a differing default UM such as linear feet (LF).

Table of Distress Details

Below the header section containing the inspection identification information is a table of distresses, where the following details can be viewed (see illustration above):

- **Distress.** Type of distress, which has been entered via a dropdown list of options.
- **Severity.** This will be Low, Medium, or High. Detail about what each of the severity designations means can be seen by activating the [Help](#) link in the rightmost column. Depending on the distress, it's possible that only a limited subset of the three options (Low, Medium, High) will apply as options for the selected distress.

Note: The options available for Severity are limited by the specifications for the applicable distress being shown, but the set of possibility will always consist of Low, Medium, and High, or some subset of these three options.

- **Subcomponent Qty.** The total subcomponent quantity included in the Component-Section. For example, if there are three lavatories in the Component-Section, and each of them has one faucet, then the "Faucet" subcomponent quantity is 3.
- **Distress Qty.** The subcomponent quantity that is exhibiting the distress. For example, if only one of the faucets mentioned above is exhibiting corrosion, the distress quantity is 1. Another example would be to record the number of linear feet of gutter missing.

- **Density (Required).** What the selected density range indicates is detailed in the specifications page for the distress. To view this information, activate the [Help](#) link in the rightmost column.
- **Critical.** If this checkbox is marked in the most recent inspection, then replacing or repairing the item will appear on the work plan regardless of the usual KBI scheduling for that type of inventory item.
- **ESC (Emergency Service Call).** If an Emergency Service call has been performed or scheduled, there should be a mark in this checkbox.

Note: **Critical** and **ESC** cannot both be checked.

- **ESC Num.** The service call number assigned to the Emergency Service Call.
- **ESC Date.** Date of the Emergency Service Call.
- **Help.** In this column, a link labeled [Help](#) will connect to the specifications page for the distress described in that row of the table.

Inspection Attachments

The number in parentheses shown on an inspection's **Attachments** tab indicates how many attachments are connected with the inspection. (This is something you can see even when you are at the **Inspection** tab.) If the number is zero, there are no attachments yet associated with the inspection.


To view one or more attachments,

1. Navigate to and activate the **Attachments** tab. *If attachments are present, a table will display their type, title, and description.*
2. Activate the link in the **Title** column. *The attachment will appear in the "Image Viewer" popup window.*
3. When finished viewing, activate the **Close** button on the popup window toolbar. *You will be returned to the table of attachments.*
4. Repeat the two steps immediately above for additional attachments as desired.

Inspection Comments

To view comments for the inspection, activate the **Comment** button on the toolbar above the inspection display. *The "Inspection Comments" popup window will appear.*

Note: If the **Comment** button icon does not show a white checkmark on a green background, no comments have been attached to the inspection.

To close the "Inspection Comments" popup without making any changes, either activate the  **Cancel** button on the popup toolbar, or activate the **X** in the upper right corner of the popup window.

Inventory Information

Inventory information is not directly a part of the inspection; however, when viewing an inspection in the condition tree, you have the option to switch to **Inventory** view to see more detail about the Component-Section if desired, by following these steps:

1. Without changing your location in the condition tree, activate the **Inventory** ribbon.
2. Activate the tabs as desired to see inventory details stored for the Section.
3. To return to the inspection, activate the **Condition** ribbon without changing your location in the inventory tree.

When you return to the condition tree, you will not be viewing the inspection itself, but rather the listing of inspections for that Component-Section. Simply re-select the date of the desired inspection to open it again.

Related Links

["Add a Distress Survey " below](#)

["Edit a Distress Survey " on page 47](#)

["Distress Survey Data \(Not Sampling\)" on page 48](#)

["Distress Survey: Distress-Level Data" on page 55](#)

["Delete an Inspection" on page 77](#)

Add a Distress Survey


This topic covers how to create a new distress survey inspection that does not use sampling.

If you are new to BUILDER inspections, consider first reviewing the topic ["View a Distress Survey " on page 38](#) for a detailed presentation of information contained in this type of inspection.

Initiate a New Inspection

To initiate a new inspection,


1. Make sure you are in the condition tree by activating the **Condition** ribbon.
2. Navigate to the Building containing the Section to be inspected.
3. Expand the Building's **By System** folder.
4. Navigate to the Section to be inspected and activate its name. *In the content area you should see a table listing at least one inspection.*
5. In the content area toolbar, activate the **New** icon.

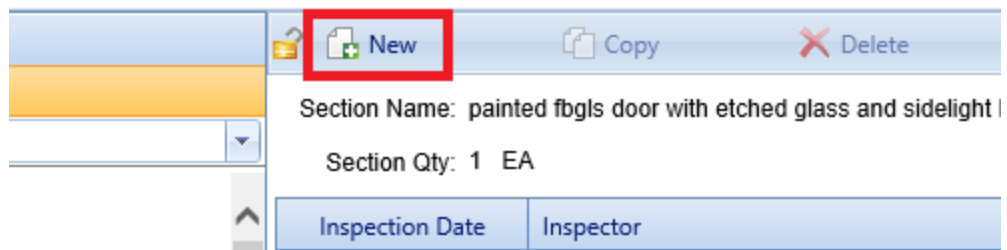

The screenshot shows a toolbar with three icons: a lock, a document with a plus sign labeled 'New', and a document with a plus sign labeled 'Copy'. To the right of the 'New' icon is a red 'X' icon labeled 'Delete'. Below the toolbar, the text 'Section Name: painted fbgl's door with etched glass and sidelight' and 'Section Qty: 1 EA' are visible. At the bottom, there are two input fields labeled 'Inspection Date' and 'Inspector'.

A screen similar to the one illustrated below should appear in the content area. Your name (as entered in your user account user) is automatically filled in as the inspector.

Troubleshooting tip: If the **New** icon is deactivated, it may be because an inspection has already been recently recorded for the Section. If the designated editing window (typically 30 days) has not elapsed, the existing inspection may be edited instead of creating a new inspection.

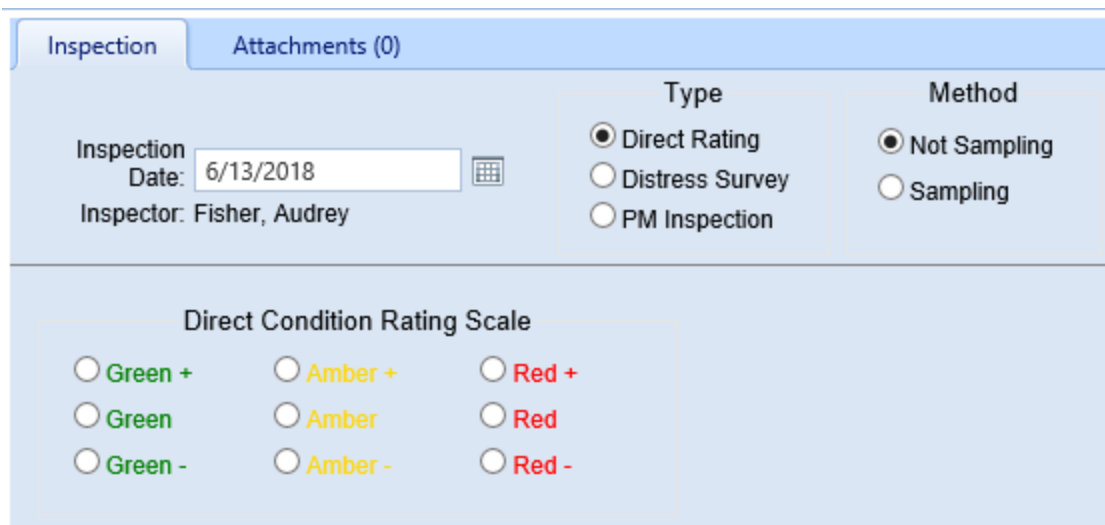

The screenshot shows a form with two tabs: 'Inspection' and 'Attachments (0)'. The 'Inspection' tab is active. It contains the following fields:

- Inspection Date: 6/13/2018 (with a calendar icon)
- Inspector: Fisher, Audrey
- Type: ☒ Direct Rating, ☐ Distress Survey, ☐ PM Inspection
- Method: ☒ Not Sampling, ☐ Sampling
- Direct Condition Rating Scale: ☐ Green +, ☐ Amber +, ☐ Red +, ☐ Green, ☐ Amber, ☐ Red, ☐ Green -, ☐ Amber -, ☐ Red -

Select Inspection Type

At the default new inspection screen [shown above](#), you have the following choices in the **Type** column:

- Direct Rating
- Distress Survey
- Preventative Maintenance (new as of BUILDER Version 3.4)

To create a distress survey, activate the **Distress Survey** radio button in the **Type** column, as shown by the red box below. The content screen will change to the distress survey display:

The screenshot shows a software interface for creating an inspection. At the top, there are tabs for 'Inspection' and 'Attachments (0)'. Below these, there are fields for 'Inspection Date' (3/5/2019) and 'Inspector' (Fisher, Audrey). The 'Type' section has three radio buttons: 'Direct Rating', 'Distress Survey' (which is selected and highlighted with a red box), and 'PM Inspection'. The 'Method' section has two radio buttons: 'Not Sampling' (selected) and 'Sampling'. The 'Results' section has a 'CSCI' field. Below these fields, there is a 'Defect Free' checkbox. The main table has columns for 'Subcomponent', 'Direct Rating', and 'Distresses'. The table contains four rows: 'Flush Valve Assembly', 'Piping/Fittings', 'Seat/Cover', and 'Unit'. Each row has a checkbox in the first column, a dropdown menu in the 'Direct Rating' column, and a link to 'Distresses (0)' in the 'Distresses' column.

N/A	Subcomponent	Direct Rating	Distresses
<input checked="" type="checkbox"/>	Flush Valve Assembly	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Piping/Fittings	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Seat/Cover	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Unit	<input type="text"/>	Distresses (0)

Enter Inspection Data

See the topic ["Distress Survey Data \(Not Sampling\)" on page 48](#) for how to how to enter or edit data in a distress survey type of inspection.

Related Links

- ["View a Distress Survey " on page 38](#)
- ["Edit a Distress Survey " on the facing page](#)
- ["Distress Survey Data \(Not Sampling\)" on page 48](#)
- ["Distress Survey: Distress-Level Data" on page 55](#)
- ["Delete an Inspection" on page 77](#)

Edit a Distress Survey

This topic introduces how to edit an existing distress survey inspection that does not use sampling.


If you are new to BUILDER inspections, consider first reviewing the topic ["View a Distress Survey " on page 38](#) for a detailed presentation of information contained in this type of inspection.

Open the Inspection

Note: An inspection may be viewed at any time. Editing, however, may only be performed within a specified number of days after the inspection date. The number of days is typically 30 by default in BUILDER as delivered to customers, but can be configured by a BUILDER Administrator.

To open an inspection for viewing or editing,

1. If you are not already in the condition tree, activate the **Condition** ribbon.
2. Navigate to the Building containing the desired inspection.
3. Expand the Building's **By System** folder.
4. Navigate to the desired Section and click on its name. *In the content area you should see a table listing at least one inspection.*

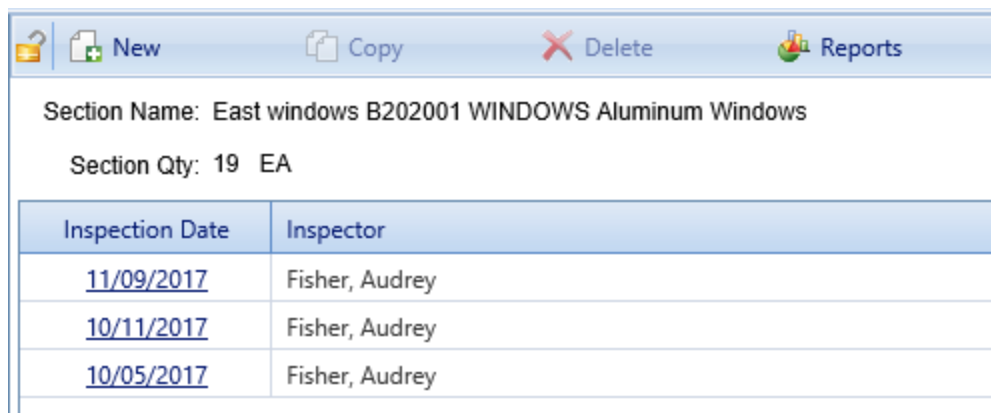

The screenshot shows a software interface with a top toolbar containing icons for 'New', 'Copy', 'Delete', and 'Reports'. Below the toolbar, the 'Section Name' is 'East windows B202001 WINDOWS Aluminum Windows' and the 'Section Qty' is '19 EA'. A table below this displays inspection data:

Inspection Date	Inspector
11/09/2017	Fisher, Audrey
10/11/2017	Fisher, Audrey
10/05/2017	Fisher, Audrey

Note: The oldest inspection was automatically generated by BUILDER as a direct rating when the Section was added to the inventory. No inspector name will be listed for this inspection.

Because an inventory item is assumed to be new at installation, BUILDER assigns a Green+ rating to this automatically generated inspection.

5. In the **Inspection Date** column, activate an inspection date link. *The inspection should open. The radio button under the **Type** heading indicates what type of inspection you are viewing or editing.*

Edit Inspection Data

See the topic ["Distress Survey Data \(Not Sampling\)" below](#) for how to enter or edit data in a distress survey type of inspection.

Related Links

["View a Distress Survey " on page 38](#)

["Add a Distress Survey " on page 44](#)

["Distress Survey Data \(Not Sampling\)" below](#)

["Distress Survey: Distress-Level Data" on page 55](#)

["Delete an Inspection" on page 77](#)

Distress Survey Data (Not Sampling)

This topic, along with the topics ["Distress Survey: Distress-Level Data" on page 55](#), ["Inspection Comments" on page 80](#), and ["Inspection Attachments" on page 83](#), provides detail about how to populate or edit a distress survey that does not use sampling.

The distress survey data screen and the "Distresses" popup window provide storage for a wealth of information pertaining to a distress survey inspection of a Component-Section. Sections below and in related topics will explain the following:

1. [Inspection identification data and CI results](#)
2. [Subcomponent-level data](#) (Table of Subcomponents)
3. [Distress-level data](#), with instructions for how to view, add, copy, edit, or delete distresses
4. [Inspection comments](#)
5. [Inspection attachments](#)
6. [Saving the distress survey](#)

Inspection Identification Data and CI Results

The header tab of a distress survey record shows inspection identification information and CI results:

- **Inspection Date.** Note that the oldest inspection is one that is automatically generated by BUILDER, as a direct rating, as of the date that the Component-Section was built, installed, or renewed.
- **Inspector (Read-Only).** Inspector name, automatically filled in by BUILDER based on user login. Inspector name will not be present for the oldest inspection, which is automatically generated by BUILDER.
- **Type.** Inspection type (in this case, the inspection type is **Distress Survey**).
- **Method.** Inspection method (**Not Sampling** vs. **Sampling**).
- **Results (Read-Only).** Shows the CSCI *at the time of that inspection*, and also a paint condition rating if applicable.

Subcomponent-Level Distress Data

This segment describes data that can be viewed, added, and edited at the subcomponent level of the distress survey. To see operations that can be performed at the level of each individual distress are discussed in a separate topic, ["Distress Survey: Distress-Level Data" on page 55](#).

When the **Distress Survey** radio button is first selected in the **Type** column, the content area of the BUILDER screen will resemble the screenshot below.

Inspection Date: 3/5/2019
Inspector: Fisher, Audrey

Type: ☐ Direct Rating ☒ Distress Survey ☐ PM Inspection

Method: ☒ Not Sampling ☐ Sampling

Results: CSCI:

☐ Defect Free

N/A	Subcomponent	Direct Rating	Distresses
<input checked="" type="checkbox"/>	Flush Valve Assembly	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Piping/Fittings	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Seat/Cover	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Unit	<input type="text"/>	Distresses (0)

This screenshot shows how a distress survey will appear when first created . By default, all subcomponents are marked **N/A** (Not Applicable) at the outset. If, however, you are editing an existing distress survey, some or all of the checkboxes will likely be unmarked.

Available Subcomponents

The table of subcomponents below the header section (and below the Sampling section, if present) lists the customary subcomponents for the given type of Component-Section. The selection of subcomponents listed come from the BUILDER database. This selection cannot be changed, but subcomponents that do not apply to the Component-Section instance being inspected can be marked **N/A**.

Because **N/A** is marked by default, when adding a distress survey, first click the checked **N/A** checkbox for each subcomponent that applies to the Section being inspected, which will remove the **N/A** checkmark. Then, as you enter inspection data, you will enter either distresses or direct ratings for subcomponents that are present.

Subcomponent Details

The screenshot shows a software interface for recording inspection data. At the top, there are buttons for 'Save' and 'Comment', and a breadcrumb 'N/A > 3/5/2019'. Below this is a tabbed interface with 'Inspection' and 'Attachments (0)'. The 'Inspection' tab contains fields for 'Inspection Date' (3/5/2019), 'Inspector' (Fisher, Audrey), 'Type' (radio buttons for Direct Rating, Distress Survey, PM Inspection), 'Method' (radio buttons for Not Sampling, Sampling), and 'Results' (CSCI: field). Below these fields is a 'Defect Free' checkbox. The main part of the screen is a table with columns: 'N/A', 'Subcomponent', 'Direct Rating', and 'Distresses'. The table lists four subcomponents: 'Flush Valve Assembly', 'Piping/Fittings', 'Seat/Cover', and 'Unit'. Each row has a checked checkbox in the 'N/A' column, a dropdown menu in the 'Direct Rating' column, and a link to 'Distresses (0)' in the 'Distresses' column.

N/A	Subcomponent	Direct Rating	Distresses
<input checked="" type="checkbox"/>	Flush Valve Assembly	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Piping/Fittings	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Seat/Cover	<input type="text"/>	Distresses (0)
<input checked="" type="checkbox"/>	Unit	<input type="text"/>	Distresses (0)

At the Distress Survey screen shown above, the following condition assessment data can be recorded or edited (with the exception of Read-Only items):

1. **Defect Free (All) Checkbox.** If no distresses are found on any sub-components, mark this checkbox to speed data entry.
2. **Paint Defect Free (All) Checkbox.** If all subcomponents are painted, a **Paint Defect Free** checkbox will appear. More details about adding or editing data about painted items can be found in ["Painted Sections" on the facing page](#).

Below the **Defect Free** checkbox is a grid format listing of possible sub-components for the current Section. The selection of subcomponents listed is governed by the BUILDER database and cannot be altered by the user.

The following data is provided or entered for each subcomponent at the sub-component level of the distress survey display:

3. **N/A Checkbox.** If the subcomponent is not applicable to this Section, this checkbox should be marked.

Note: Initially, the **N/A** checkbox is marked for each sub-component.

4. **Subcomponent (Read-Only).** Displays the name of a subcomponent, as taken from the BUILDER database.
5. **Direct Rating.** If the subcomponent is applicable but not defect free, you can optionally assign a direct "color" rating to a subcomponent, which will be used instead of distresses in calculating the CSCI.
6. **Distresses.** If the subcomponent is applicable but not defect free, activate its Distresses link to launch the "Distresses" popup window, unless you decide to do a subcomponent direct rating instead. See the topic ["Distress Survey: Distress-Level Data" on page 55](#) for how to view, add, edit, and delete distress details at this window.

Note: In BUILDER Version 3.3, there was the option to mark a subcomponent as defect free (**D/F**). In Version 3.4, the corresponding action would be to select a **G+** direct rating.

Once an inspection is complete, all subcomponents present in the Component-Section should either have distresses or direct ratings recorded against them. Those not present in the Component-Section should be marked in the **N/A** column.

Painted Sections

If the Component-Section is marked as painted, the following columns are added to the grid for each subcomponent, to record the following data:

- **Paint N/A Checkbox** - Mark this checkbox if the subcomponent is not painted or not applicable to this Section. Initially, this checkbox is marked by default for each subcomponent.
- **Paint D/F Checkbox** - Mark this checkbox if the subcomponent is painted and the paint is defect free. Marking this box automatically un-checks the **Paint N/A** checkbox.
- **Paint Rating** - If the subcomponent is applicable and painted but the paint is not defect free, select an appropriate rating for from the dropdown list. See Appendix C in this Condition Assessment Guide, or Appendix F in the Condition Assessment Reference Manual or Online Help for a detailed description of each paint color rating.

Resource: The Condition Assessment Reference Manual, ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, is available by download from the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

Using Direct Ratings within a Distress Survey

Within a distress survey, you have the option of evaluating individual sub-components using the direct rating method.

To use direct rating on a subcomponent,

1. Activate the dropdown list in the subcomponent's **Direct Rating** column. The ratings A+ through R- will display; to see higher ratings, scroll up.

Inspection

Attachments (0)

Inspection Date: 3/5/2019

Inspector: Fisher, Audrey

Type

☐ Direct Rating
☒ Distress Survey
☐ PM Inspection

Method

☒ Not Sampling
☐ Sampling

Results

CSCI: 71

☐ Defect Free

N/A	Subcomponent	Direct Rating	Distresses
<input type="checkbox"/>	Drain	A	Distresses (0)
<input type="checkbox"/>	Faucet	A	Distresses (0)
<input type="checkbox"/>	Unit	A	Distresses (0)
<input type="checkbox"/>	Valves	<div> A A+ A A- R+ R R- </div>	Distresses (0)

2. Select either a color rating, or else select the topmost option, which is a blank.

N/A	Subcomponent	Direct Rating
<input type="checkbox"/>	Drain	A ▼
<input type="checkbox"/>	Faucet	A ▼
<input type="checkbox"/>	Unit	A ▼
<input type="checkbox"/>	Valves	<div> <div></div> <div>G+</div> <div>G</div> <div>G-</div> <div>A+</div> <div>A</div> </div>

3. If you select the blank, the subcomponent will be automatically marked as **N/A**.

N/A	Subcomponent	Direct Rating
<input type="checkbox"/>	Drain	A ▼
<input type="checkbox"/>	Faucet	A ▼
<input type="checkbox"/>	Unit	A ▼
<input checked="" type="checkbox"/>	Valves	▼

Unit of Measure

Another data item that pertains to a given subcomponent as a whole is its unit of measure (UM). Unit of Measure configuration is accessible at the "Distresses" popup window and will be described with distress-level data, at "Change Sub-component/Distress Unit of Measure" in the topic ["Distress Survey: Distress-Level Data" on page 55](#).

Distress-Level Data

Viewing and working with the details of individual distresses is explained in the topic ["Distress Survey: Distress-Level Data" on page 55](#).

Inspection Attachments

About Inspection Attachments

The **Attachments** tab (to the right of the **Inspection** tab) allows files such as an image file to be attached to an inspection. An image might be a photograph, or it could be an electronic image of written notes or diagrams made during the inspection.

The attachment may be in any of the following formats:

- .jpg
- .jpeg
- .png
- .zip
- .doc
- .pdf

Note: As of March 7, 2019, .doc format is allowed, but not .docx.

Working with Inspection Attachments


How to view, add, edit, or delete inspection attachments is explained in the topic ["Inspection Attachments" on page 83](#).

Inspection Comments

View Comments

To view comments for the inspection, activate the **Comment** button on the toolbar above the inspection display. *The "Inspection Comments" popup window will appear.*

Note: If the **Comment** button icon does not show a white checkmark on a green background, no comments have been attached to the inspection.

To close the "Inspection Comments" popup without making any changes, either activate the  **Cancel** button on the popup toolbar, or activate the **X** in the upper right corner of the popup window.


Add, Edit, or Delete Comments

How to add, edit, or delete inspection comments is explained in the topic ["Inspection Comments" on page 80](#).

Save Distress and Subcomponent Data

1. Each distress is confirmed separately at the **Distresses** popup, as described under "Save Distress Data" in the topic ["Distress Survey: Distress-Level Data"](#) below.
2. After you finish confirming the distresses, you must also activate **Save** on the toolbar after you close the "Distresses" popup and return to the distress survey data screen.

IMPORTANT: If you fail to activate **Save**, your distress entries or edits will not be saved, even if you checkmarked them in the "Distresses" popup.

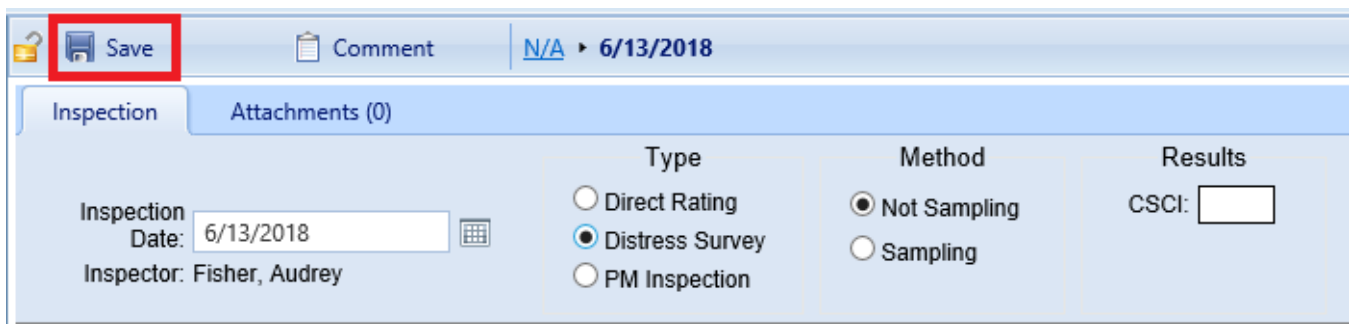

The screenshot shows a software interface for a distress survey. At the top, there is a toolbar with a 'Save' button (highlighted with a red box) and a 'Comment' button. To the right of the toolbar is a date field showing '6/13/2018'. Below the toolbar, there is a section for 'Inspection' and 'Attachments (0)'. The 'Inspection' section contains a date field set to '6/13/2018' and an inspector field set to 'Fisher, Audrey'. To the right of the inspection fields, there are two columns of radio buttons: 'Type' with options 'Direct Rating', 'Distress Survey' (selected), and 'PM Inspection'; and 'Method' with options 'Not Sampling' (selected) and 'Sampling'. To the right of these columns is a 'Results' section with a 'CSCI' field.

Related Links

- ["View a Distress Survey " on page 38](#)
- ["Add a Distress Survey " on page 44](#)
- ["Edit a Distress Survey " on page 47](#)
- ["Distress Survey Data \(Not Sampling\)" on page 48](#)
- ["Distress Survey: Distress-Level Data" below](#)
- ["Delete an Inspection" on page 77](#)

Distress Survey: Distress-Level Data

This topic provides detail about how to populate or edit distress details in a distress survey that does not use sampling.

WARNING: After you enter or edit a distress, if you do not activate the blue checkmark at the left side of the distress record to be saved, your work on that record will be lost!

The distress survey data screen and the "Distresses" popup window provide storage for a wealth of information pertaining to a distress survey inspection of a Component-Section. This topic focuses on working in the "Distresses" popup window. For information at the inspection and subcomponent level rather than the distress level, see the topic ["Distress Survey Data \(Not Sampling\)" on page 48](#).

When the **Distress Survey** radio button is selected under the **Type** of condition assessment, the content area of the BUILDER screen will resemble the screenshot below.

Save Comment N/A 3/5/2019

Inspection Attachments (0)

Inspection Date: 3/5/2019 Inspector: Fisher, Audrey

Type: ☐ Direct Rating ☒ Distress Survey ☐ PM Inspection

Method: ☒ Not Sampling ☐ Sampling

Results: CSCI:

☐ Defect Free

N/A	Subcomponent	Direct Rating	Distresses
<input checked="" type="checkbox"/>	Flush Valve Assembly		Distresses (0)
<input checked="" type="checkbox"/>	Piping/Fittings		Distresses (0)
<input checked="" type="checkbox"/>	Seat/Cover		Distresses (0)
<input checked="" type="checkbox"/>	Unit		Distresses (0)

This screenshot shows how a distress survey will appear when first created. By default, all subcomponents are marked **N/A** for "Not Applicable" at the outset. As you enter inspection data, you will either be entering distresses for subcomponents that are present, or assigning a direct rating (see **Using Direct Ratings within a Distress Survey** in ["Distress Survey Data \(Not Sampling\)" on page 48](#)). This topic details how to view, add, edit, and delete distresses.

View Subcomponent Distress Details

The "Distresses" popup window, shown below, is where you can view, add, copy, edit, or delete individual distresses against a subcomponent. Access to this popup window is via the [Distresses](#) link in the **Distresses** column of the distress survey screen.

Component: C2010 STAIR CONSTRUCTION

Section: PM-tester C201001 INTERIOR AND EXTERIOR STAIRS Exterior Stairs

Subcomponent: Landing/Stoop

Subcomponent UM: SF ☐ Alternative UM "Each" (unit count)

+ Add new record Refresh

	Distress	Severity	Subcomponent Qty	Distress Qty	Density	Critical	ESC	ESC Num	ESC Date
		Efflorescence	Low	25	3	> 10% - 25%	<input type="checkbox"/>	<input type="checkbox"/>	

Help

The header section of the popup identifies the Component, Section, and sub-component, and shows the unit of measure (UM) being used to measure the sub-component quantity and distress quantity. The (limited) option to change the unit of measure is discussed in ["Change Subcomponent/Distress Unit of Measure " below](#).

The lower section of the popup window is where distress details are recorded. Descriptions of these details are listed in ["Add a Distress" below](#). Subsequent documentation segments will instruct how to add, edit, or delete a distress.

Change Subcomponent/Distress Unit of Measure

BUILDER users who enter distresses have the option to change the unit of measure from a non-"each" default selected by BUILDER to a unit of measure of "each." If the **Alternative UM "Each"** checkbox is marked in the "Distresses" popup window, this means that the unit of measure used for the component will be Each (EA) rather than a differing default UM such as linear feet (LF).

The checkbox for selecting an alternative UM of "Each" is the only user-editable field in the upper section of the "Distresses" popup.

Add a Distress

There are two alternative ways to initiate adding a distress in the "Distresses" popup:

- Activate the **Add new record** button above the table of distresses, and create a distress from scratch, or
- Activate the **Copy [Distress]** button on the toolbar to use an existing distress listed in the popup as the starting point for a new distress.

For how to use the second method listed above, see ["Copy a Distress" on page 61](#).

List of Distress Details

This segment will show how to enter the following distress details:

- **Distress Type (Required).** This is in the column labeled **Distress**. From the dropdown list, select a type of distress present on the subcomponent. For definitions of all the distresses, see Appendix A in the Condition Assessment Reference Manual* or the Online Help documentation.
- **Severity (Required).** Select the severity of the distress from the dropdown list. The applicable severities for each distress type are listed and defined in Appendix A in the Condition Assessment Reference Manual* and the Online Help documentation.

Tip: You might find that you have two distresses of the same type, severity, and density. Such a pair of distresses should be combined into one row with an increased density value.


- **Subcomponent Quantity.** Enter the subcomponent quantity in the unit of measure listed above the grid. When the subcomponent's unit of measure should be "Each" but the unit of measure listed in the Subcomponent UM field is not, mark the **Alternative UM "Each"** checkbox and then enter the number of subcomponents.
- **Distress Quantity.** Enter the quantity of the subcomponent that has the distress in the unit of measure listed above the grid. When the subcomponent's unit of measure should be "Each" but the unit of measure listed in the Subcomponent UM field is not, mark the **Alternative UM "Each"** checkbox and then enter the number of subcomponents with the distress.
- **Density (Required).** Select the density of the distress from the dropdown list. The formulas used to compute the density for each distress type are listed in the definitions of the distresses in Appendix A in the Condition Assessment Reference Manual* and the Online Help documentation.
- **"Critical" Checkbox.** Mark this checkbox if the distress on the subcomponent is critical. Marking this checkbox will make the work item created for this Section "Must Do."
- **Emergency Service Call ("ESC") Checkbox.** Mark this checkbox if the distress on the subcomponent requires an ESC.
- **ESC Number.** If an ESC was issued to respond to this distress, enter its number for your records in this field.
- **ESC Date.** If an ESC was issued to respond to this distress and has been completed, enter the date of completion in this field. Distresses with completed service calls are assumed to have no effect on the subcomponent condition.

***Reference:** ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, December 2018, is available by download from the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

Instructions with Screenshots

To add a distress against the subcomponent shown in the header section of the "Distresses" popup,

1. Activate the **+ Add new record** button at the top of the table of distresses.

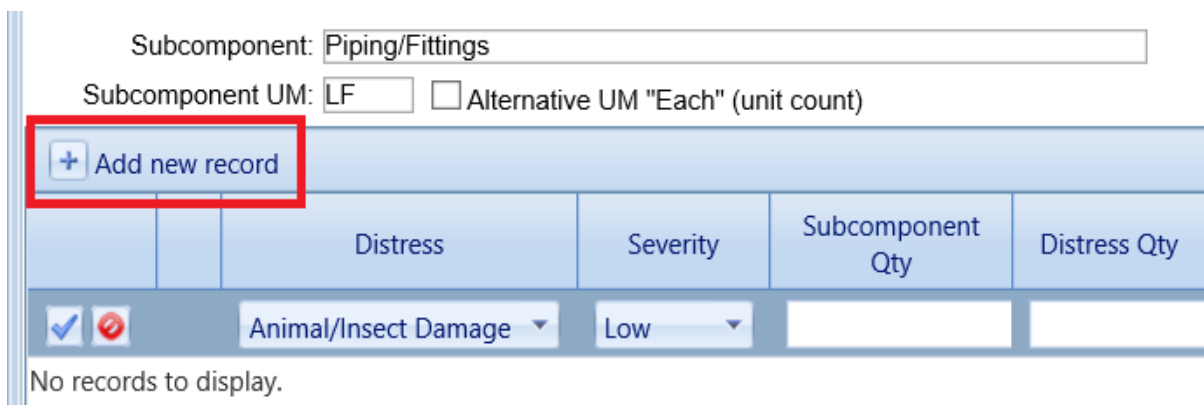

Subcomponent: Piping/Fittings


Subcomponent UM: LF ☐ Alternative UM "Each" (unit count)

+ Add new record

	Distress	Severity	Subcomponent Qty	Distress Qty
<input checked="" type="checkbox"/> <input type="checkbox"/>	Animal/Insect Damage	Low		

No records to display.

2. Select a distress from the dropdown list of options in the **Distress** column.

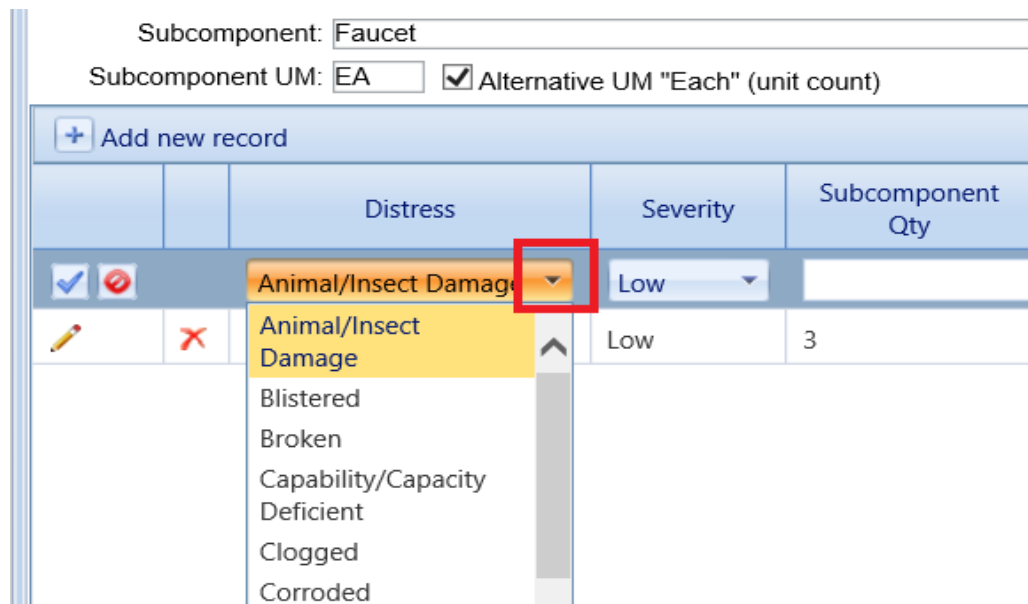

Subcomponent: Faucet

Subcomponent UM: EA ☒ Alternative UM "Each" (unit count)

+ Add new record

	Distress	Severity	Subcomponent Qty
<input checked="" type="checkbox"/> <input type="checkbox"/>	Animal/Insect Damage	Low	
<input type="checkbox"/> <input checked="" type="checkbox"/>	Animal/Insect Damage	Low	3

Blistered
Broken
Capability/Capacity
Deficient
Clogged
Corroded

3. Activate the [Help](#) link in the rightmost column to review the specifications page for the selected distress. A sample specifications page is shown below.

Tip: Reviewing the specifications page is a good idea to do before selecting a severity for the distress because for some distresses, not all severity levels (Low, Medium, High) will be legitimate entries. For example, for the distress "Electrical Ground Inadequate or Unintentional" (listed as "Elec Grnd Inad or Uninten" in the "Distress" dropdown list), only the severity level High is a legitimate entry, as shown on the specifications page.

Search

General Distresses: Electrical Ground Inadequate or Unintentional

Definition:

Unintentional connection of very low resistance causing a short circuit or a high resistance connection resulting in inadequate grounding.

Notes:

1. "Electrical Ground Inadequate or Unintentional" is a special case of impaired operations. When present, record "Electrical Ground Inadequate or Unintentional" instead of "Operationally Impaired."
2. Record additional distress types, if known, should they be contributing to this distress. These may include "Corroded," "Loose," "Damaged," etc.

Severity Levels:

High - Distress exists.

Measurement:

Total Sub-Component Area, Length, or Quantity

Density:

100% (automatic)

Note: All specification pages are documented in Condition Assessment Reference Manual appendixes, and listed in the BUILDER Online Help documentation.


4. Select the appropriate severity level from the dropdown list of options in the **Severity** column, keeping in mind any limitation in the Low/Medium/High options indicated by the specifications page for that distress.
5. Enter subcomponent quantity and distress quantity as appropriate.
6. Select the appropriate density range from the dropdown list of options in the **Density** column. You can activate the Help link in the rightmost column to review the appropriate matching between condition of the subcomponent and the corresponding density level to be selected.
7. Marking the **Critical** checkbox will trigger a repair work item within the first year of a work plan even if there is still a remaining maintenance life (RML) for the Component-Section.
8. **ESC** stands for Emergency Service Call. If an Emergency Service Call was generated due to the distress, mark this checkbox and fill in the number and date .


Note: **Critical** and **ESC** should not be used together.

9. Save as described in ["Save Distress Data" on page 63](#).

Copy a Distress


To copy a distress from within the same subcomponent to use as a starting place for a new distress,

1. Activate the  **Copy** button on the "Distresses" popup window toolbar. *The "Copy Distresses" popup window will appear, providing checkboxes in the first column for selecting distresses.*

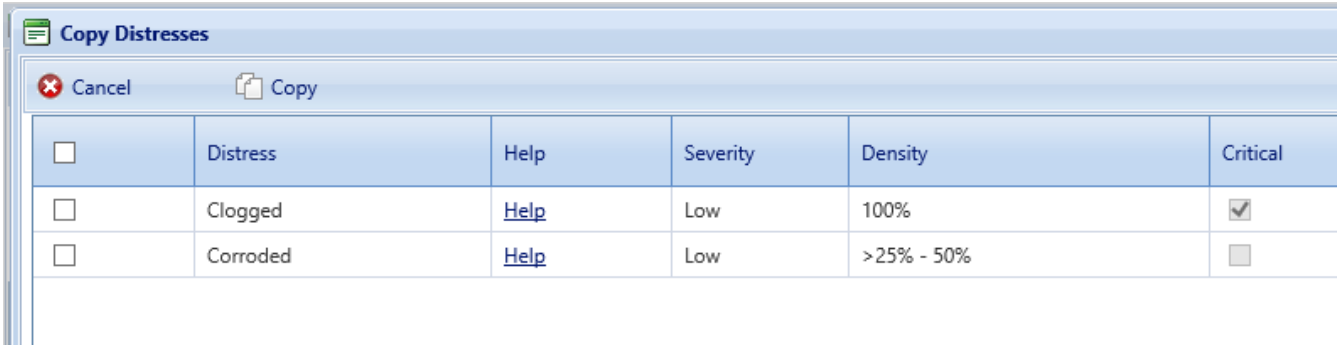




<input type="checkbox"/>	Distress	Help	Severity	Density	Critical
<input checked="" type="checkbox"/>	Clogged	Help	Low	100%	<input checked="" type="checkbox"/>
<input type="checkbox"/>	Corroded	Help	Low	>25% - 50%	<input type="checkbox"/>

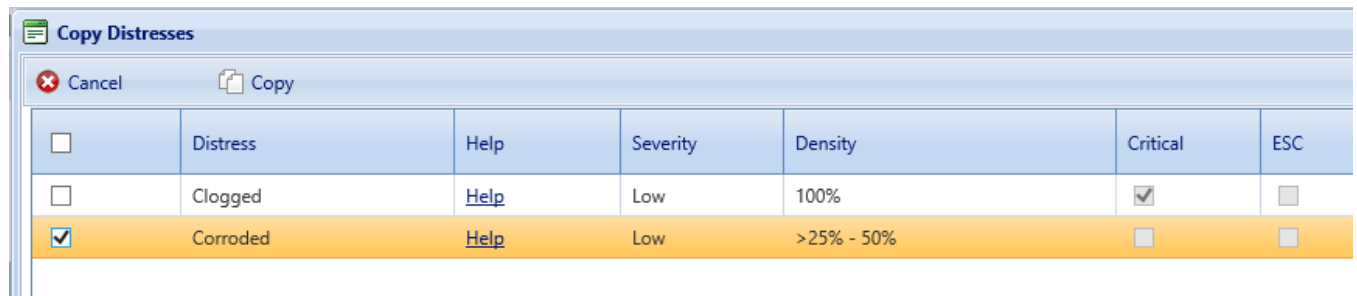
2. Mark the checkbox(es) of the distress(es) you wish to copy. Shown below is a sample selection.

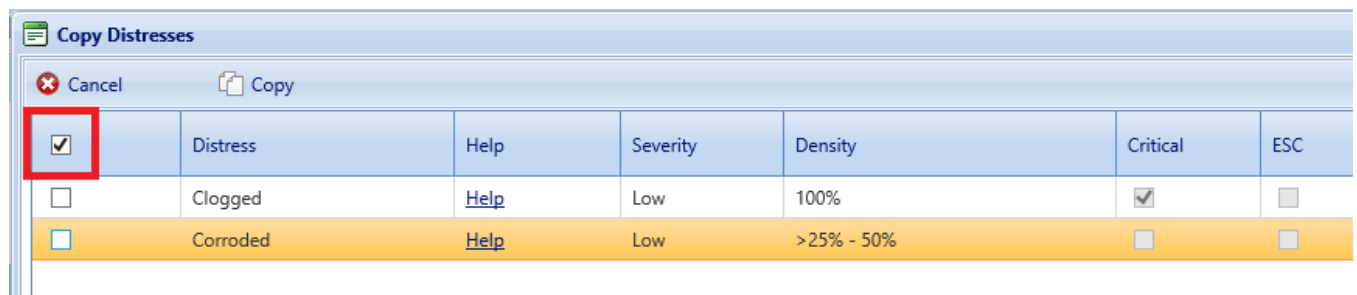

3. If you wish to copy all of the distresses shown, mark the checkbox in the *first column of the header bar* of the distress table.



4. Copy or Cancel: After you have made your selection(s), activate the  **Copy** button on the toolbar to complete the copy/copies. Alternatively, activate the  **Cancel** button to cancel the operation and return to the "Distresses" window.

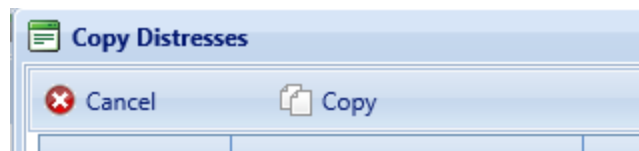

Edit a Distress

To edit a distress that has been entered against the subcomponent shown in the header section of the "Distresses" popup window,

Distresses

Close Copy Help

Component: C2010 STAIR CONSTRUCTION

Section: distress-tester C201001 INTERIOR AND EXTERIOR STAIRS Interior Stairs - Concrete (24 Riser Flight)

Subcomponent: Landing/Stoop

Subcomponent UM: ☐ SF ☐ Alternative UM "Each" (unit count)

+ Add new record

	Distress	Severity	Subcomponent Qty	Distress Qty	Density	Critical	ESC	ESC Num	
		Efflorescence	Low	100	20	>25% - 50%	<input type="checkbox"/>	<input type="checkbox"/>	

1. Activate the pencil icon shown in the left column, as shown above. *The display will change, as shown below:*

+ Add new record

	Distress	Severity	Subcomponent Qty	Distress Qty	Density	Critical	ESC	ESC Num
	Corroded	Low	3	3	>25% - 50%	<input type="checkbox"/>	<input type="checkbox"/>	

2. Edit the desired fields. (Remember that you can consult the specifications page for the distress by activating the Help link in the rightmost column).
3. Save as described in ["Save Distress Data" below](#).

Save Distress Data

To save distress data, you will need to first confirm your edits in each table row as follows:

1. To confirm the distress, activate the blue checkmark icon on the left in that row of data. (Alternatively, if you wish to cancel the changes, activate the cancellation icon; it looks like a "Do Not Enter" sign.)

Component: C2010 STAIR CONSTRUCTION

Section: distress-tester C201001 INTERIOR AND EXTERIOR STAIRS Interior Stairs - Concrete (24 Riser Flight)

Subcomponent: Landing/Stoop

Subcomponent UM: ☐ SF ☐ Alternative UM "Each" (unit count)

Activate this checkbox after entering data!

	Distress	Severity	Subcomponent Qty	Distress Qty	Density	Critical	ESC
<input checked="" type="checkbox"/>	Efflorescence	Low	100	20	>25% - 50%	<input type="checkbox"/>	<input type="checkbox"/>

No records to display.


After confirming the individual distress, you will be returned to the view showing a pencil icon in the leftmost column.







WARNING: If your BUILDER instance times out, you may lose work that is not yet fully saved.

- At this point, if you wish to add, edit, or delete other distress records in the "Distresses" popup window, you may do so before closing the popup.
- Activate **Close** on the toolbar when you are finished adding distresses to that subcomponent. You will be returned to the Subcomponent table, and you should see that the number of distress has been updated.


Delete a Distress


To delete a distress listed in the "Distresses" popup window,

- In the table of distresses, activate the  deletion button in the second column of the record you wish to delete.

		Distress	Severity	Subcomponent Qty	Distress Qty	Density	Critical	ESC	ESC Num
		Clogged	Low	3	1	100%	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
		Corroded	Low	3	2	>25% - 50%	<input type="checkbox"/>	<input type="checkbox"/>	
		Cracked	Low	3	3	>5% - 10%	<input type="checkbox"/>	<input type="checkbox"/>	

- Confirm the deletion in the popup confirmation box. (Alternatively, you can select the **Cancel** button to cancel the deletion.)

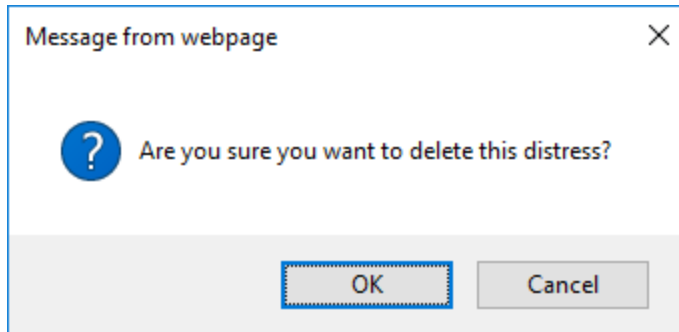

3. Activate  **Save** on the content area toolbar. *You will be returned to the **Inspection** tab showing the table of subcomponents.*

Related Links

- ["View a Distress Survey " on page 38](#)
- ["Add a Distress Survey " on page 44](#)
- ["Edit a Distress Survey " on page 47](#)
- ["Distress Survey Data \(Not Sampling\)" on page 48](#)
- ["Delete an Inspection" on page 77](#)

Delete an Inspection

This topic outlines the instructions and needed permissions for deleting an inspection (direct rating or distress survey or preventative maintenance inspection)

Who May Delete an Inspection

- A Master Planner or BUILDER administrator may delete any inspection.
- You may delete any of your own inspections within 30 days (or possibly less—see **CAUTION** below) of their creation.

CAUTION: If the default 30-day window has been changed to a different period of time in your organization, that different period of time is what will apply instead.


How to Delete

To delete an inspection,

1. Navigate to the applicable Component-Section in the condition tree and select it.


2. In the table of inspections, activate the inspector name in the row containing the inspection to be deleted. *The row will become highlighted, as shown below.*

Note: The reason for activating the inspector name is that selecting the inspection date will activate the link and take you into the inspection itself.

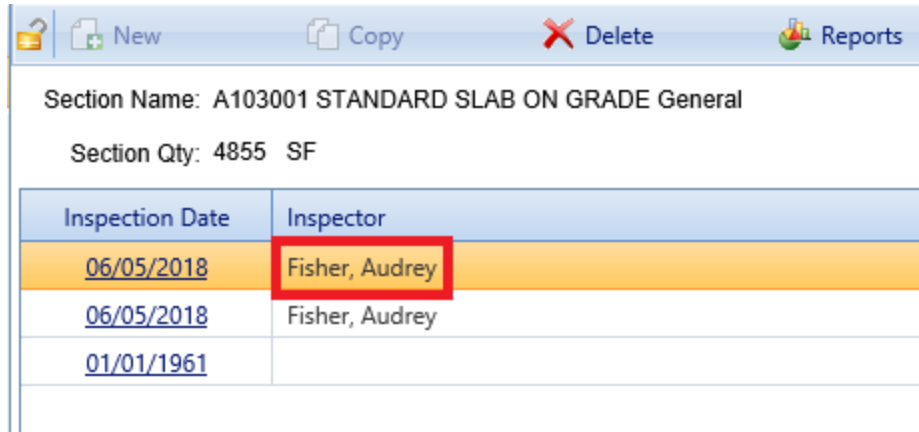


Inspection Date	Inspector
06/05/2018	Fisher, Audrey
06/05/2018	Fisher, Audrey
01/01/1961	

3. Activate the **Delete** button on the toolbar.

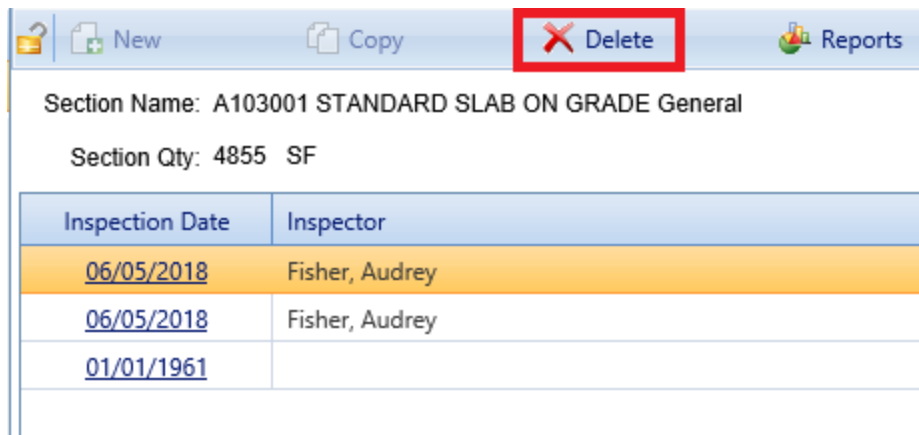

Inspection Date	Inspector
06/05/2018	Fisher, Audrey
06/05/2018	Fisher, Audrey
01/01/1961	

4. Select **OK** in the confirmation popup.

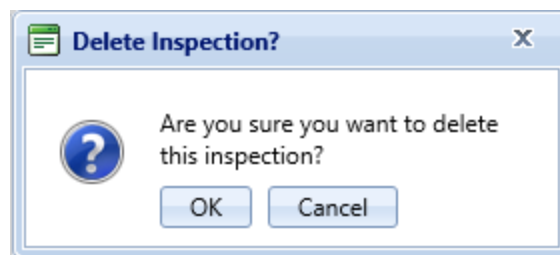

PM Inspections

Preventative Maintenance (PM) Inspections

This topic introduces the preventative maintenance (PM) inspection type of condition assessment. PM inspections allow the inspector to select, on a sub-component by subcomponent basis, between direct rating and evaluating by criteria.

The topic also supplies links to PM inspection tasks.

What Is a Preventative Maintenance Inspection?

In BUILDER, the PM inspection allows each subcomponent of a Component-Section to be separately evaluated either (a) according to criteria designated for that subcomponent, or (b) by a direct rating. An inspector has the option to "mix and match" the two approaches, (a) and (b), within the same PM inspection on a given Component-Section.

Another benefit, in addition to the flexibility to choose between the two evaluation options listed above, is that a PM inspection in BUILDER optionally allows for a predefined list of inspection tasks (such as "check for cracks") to be provided that each inspector is to follow for that subcomponent.

When to Use a Preventative Maintenance Inspection

PM inspections are done when called for by your company's procedures. Also, they can be useful when it's desirable to provide standardized checklists of inspection tasks (via the PM Task List) and/or inspection criteria.

PM Inspection Tasks

Tasks that can be performed on a preventative maintenance inspection are:

["View a Preventative Maintenance Inspection" on the next page](#)

["Add a Preventative Maintenance Inspection" on page 72](#)

["Edit a Preventative Maintenance Inspection" on page 75](#)

["Delete an Inspection" on page 77](#)

View a Preventative Maintenance Inspection





This topic covers how to open and view an existing preventative maintenance inspection that does not use sampling, and explains the information included there.

Open a Preventative Maintenance Inspection

Note: An inspection may be viewed at any time. Editing, however, may only be performed within a specified number of days after the inspection date. The number of days is typically 30 by default in BUILDER as delivered to customers, but can be configured by a BUILDER Administrator.

To open an inspection for viewing or editing,

1. If you are not already in the condition tree, activate the **Condition** ribbon.
2. Navigate to the Building containing the desired inspection.
3. Expand the Building's **By System** folder.
4. Navigate to the desired Section and click on its name. *In the content area you should see a table listing at least one inspection.*

 New	 Copy	 Delete	 Reports
Section Name: East windows B202001 WINDOWS Aluminum Windows			
Section Qty: 19 EA			
Inspection Date	Inspector		
11/09/2017	Fisher, Audrey		
10/11/2017	Fisher, Audrey		
10/05/2017	Fisher, Audrey		

Note: The oldest inspection was automatically generated by BUILDER as a direct rating when the Section was added to the inventory. No inspector name will be listed for this inspection.

Because an inventory item is assumed to be new at installation, BUILDER assigns a Green+ rating to this automatically generated inspection.

5. In the **Inspection Date** column, activate an inspection date link. *The inspection should open. The radio button under the **Type** heading indicates what type of inspection you are viewing or editing.*

View Preventative Maintenance Inspection Data

Information about a PM inspection is distributed as follows:

- The core information from a PM inspection record is shown at the **Inspection** tab, which is divided into a header section, Preventative Maintenance Task List, and a table of subcomponents.
- If attachments (the number of which is shown in parentheses on the **Attachments** tab) are associated with the inspection, these are accessible from the **Attachments** tab.
- If one or more comments have been recorded for the inspection, they are shown together in a popup accessed by activating the **Comment** button on the content area toolbar.

Information contained at the inventory tree can sometimes provide helpful background information for evaluation.

Select a link below for how to view

- ["Inspection Identification Data" below](#)
- ["CI Results" on the next page](#)
- ["Preventative Maintenance Task List" on the next page](#)
- ["Inspection Details" on the next page](#)
- ["Inspection Attachments" on the next page](#)
- ["Inspection Comments" on page 71](#)
- ["Inventory Information" on page 71](#)

Inspection Identification Data

The following identifying information is contained in the header section at the **Inspection** tab:

- **Inspection Date.** Note that the oldest inspection is one that is automatically generated by BUILDER, as a direct rating, as of the date that the Component-Section was built, installed, or renewed.
- **Inspector (Read-Only).** Inspector name, automatically filled in by BUILDER based on user login. Inspector name will not be present for the oldest inspection, which is automatically generated by BUILDER.

- **Type.** Available inspection types are **Direct Rating**, **Distress Survey**, and **Preventative Maintenance**.
- **Method.** Available inspection methods are **Not Sampling** and **Sampling**.

The screenshot shows a web form with two tabs: "Inspection" and "Attachments (0)". The "Inspection" tab is active. Below the tabs, there are input fields for "Inspection Date" (6/13/2018) and "Inspector" (Fisher, Audrey). To the right of these fields are two columns of radio buttons. The "Type" column has three options: "Direct Rating", "Distress Survey", and "PM Inspection". The "Method" column has two options: "Not Sampling" and "Sampling". The "Method" column is highlighted with a red rectangular box.

CI Results

- **CSCI (Read-Only).** In the header section, under the **Results** heading, is the Component-Section condition index *at the time of that inspection*.

Preventative Maintenance Task List

If a task list has been entered into BUILDER and associated with the Section type being inspected, the Preventative Maintenance Task List will appear in its own section between the header section and the table of subcomponents. It will show a list of preventative maintenance actions to be performed on the Component-Section.

BUILDER provides default criteria and PM tasks for select component types.

Inspection Details

Inspection details are described in the topic ["Add a Preventative Maintenance Inspection" on page 72](#), in the **Enter Inspection Data** section.

Inspection Attachments

The number in parentheses shown on an inspection's **Attachments** tab indicates how many attachments are connected with the inspection. (This is something you can see even when you are at the **Inspection** tab.) If the number is zero, there are no attachments yet associated with the inspection.

To view one or more attachments,


1. Navigate to and activate the **Attachments** tab. *If attachments are present, a table will display their type, title, and description.*
2. Activate the link in the **Title** column. *The attachment will appear in the "Image Viewer" popup window.*
3. When finished viewing, activate the **Close** button on the popup window toolbar. *You will be returned to the table of attachments.*

4. Repeat the two steps immediately above for additional attachments as desired.

Inspection Comments

To view comments for the inspection, activate the **Comment** button on the toolbar above the inspection display. *The "Inspection Comments" popup window will appear.*

Note: If the **Comment** button icon does not show a white checkmark on a green background, no comments have been attached to the inspection.

To close the "Inspection Comments" popup without making any changes, either activate the  **Cancel** button on the popup toolbar, or activate the **X** in the upper right corner of the popup window.

Inventory Information

Inventory information is not directly a part of the inspection; however, when viewing an inspection in the condition tree, you have the option to switch to **Inventory** view to see more detail about the Component-Section if desired, by following these steps:

1. Without changing your location in the condition tree, activate the **Inventory** ribbon.
2. Activate the tabs as desired to see inventory details stored for the Section.
3. To return to the inspection, activate the **Condition** ribbon without changing your location in the inventory tree.

When you return to the condition tree, you will not be viewing the inspection itself, but rather the listing of inspections for that Component-Section. Simply re-select the date of the desired inspection to open it again.

Related Links

["Add a Preventative Maintenance Inspection" on the next page](#)

["Edit a Preventative Maintenance Inspection" on page 75](#)

["Delete an Inspection" on page 77](#)

Add a Preventative Maintenance Inspection

This topic covers how to create a new preventative maintenance inspection that does not use sampling.

Initiate a New Inspection

To initiate a new inspection,

1. Make sure you are in the condition tree by activating the **Condition** ribbon.
2. Navigate to the Building containing the Section to be inspected.
3. Expand the Building's **By System** folder.
4. Navigate to the Section to be inspected and click on its name. *In the content area you should see a table listing at least one inspection.*
5. In the content area toolbar, activate the **New** icon. *In the Content area you should see a screen similar to the one illustrated below.*

Troubleshooting tip: If the **New** icon is deactivated, it may be because an inspection has already been recently recorded for the Section. If the designated editing window (typically 30 days) has not elapsed, the existing inspection may be edited instead of creating a new inspection.

Select Inspection Type

Inspection		Attachments (0)
Inspection Date: 6/13/2018	Inspector: Fisher, Audrey	
		Type
		<input checked="" type="radio"/> Direct Rating
		<input type="radio"/> Distress Survey
		<input type="radio"/> PM Inspection
		Method
		<input checked="" type="radio"/> Not Sampling
		<input type="radio"/> Sampling
Direct Condition Rating Scale		
<input type="radio"/> Green +	<input type="radio"/> Amber +	<input type="radio"/> Red +
<input type="radio"/> Green	<input type="radio"/> Amber	<input type="radio"/> Red
<input type="radio"/> Green -	<input type="radio"/> Amber -	<input type="radio"/> Red -

At the default new inspection screen shown above, you have three choices in the **Type** column located in the top portion of the content area. (**Direct Rating** is marked by default.)

Select the **PM Inspection** radio button. A screen resembling the following should appear:

The screenshot shows a software interface for a PM Inspection. At the top, there are tabs for 'Inspection' and 'Attachments (0)'. Below the tabs, there are input fields for 'Inspection Date' (9/13/2017) and 'Inspector' (dev, dev). To the right, there are radio buttons for 'Type' (Direct Rating, Distress Survey, PM Inspection) and 'Method' (Not Sampling, Sampling). Further right, there is a 'Results' section showing 'CSCI: 93'. Below these fields is a section titled 'Preventative Maintenance Task List' which contains a table with two columns: 'Task ID' and 'Description'. The table lists three tasks: 55 (Check for Cracks), 78 (Verify Paint Type), and 86 (Record Moisture Level). Below the table is a checkbox labeled 'Defect Free'. At the bottom, there is a table with four columns: 'Subcomponent', 'N/A', 'Direct Rating', and 'Criteria'.

Task ID	Description
55	Check for Cracks
78	Verify Paint Type
86	Record Moisture Level

Subcomponent	N/A	Direct Rating	Criteria
--------------	-----	---------------	----------

View Task List (Read Only)

When you select the PM inspection type, a task list may appear in the middle (vertically) portion of the content area, The list is read-only, and has two columns:

Task ID and Task Description

If there is a preventative maintenance checklist or job plan that is standard for your company to apply to the selected Section, that information is what should appear in this section of the content area.

Enter Inspection Data

The bottom portion of the PM Inspection content area displays the subcomponent table for the selected Section.

Note: The table displays a description of subcomponents that *could* be associated with the type of Section being inspected. Not all of the subcomponents listed will necessarily apply to every instance of that Section type.

You have a variety of options to consider as you enter or edit inspection data:

- **Defect Free.** If the entire Section is defect free, check the **Defect Free** checkbox above the table of subcomponents. Once you have done so, skip

to **Comments and Attachments**, below.

Note: Section-level **Defect Free** designation takes priority over a designation of **N/A** (next option in this list).

- **N/A.** If one or more of the listed subcomponents are not present in the Section you are inspecting, mark the checkbox in the **N/A** column for each of these.
- **Direct Rating on Subcomponent.** To apply a Direct Rating to a subcomponent, select the appropriate color rating from the dropdown list in the **Direct Rating** column. After applying a direct rating to each subcomponent desired, proceed to the next option in this list if there are still more subcomponents to be inspected.

Note: If both a Direct Rating and Criteria are applied to the same subcomponent, the direct rating has priority.

- **Criteria.** Using the checkboxes in the **Criteria** column, you can mark each aspect of the subcomponent that is defective. Then the BUILDER program will calculate the deduct values for each, adjust for the number of deducts as needed, and use these calculations to produce a CI value.

Note: If both a Direct Rating and Criteria are applied to the same subcomponent, Direct Rating has priority.

Comments and Attachments

IMPORTANT: Save your rating and/or Criteria BEFORE entering a comment or adding an attachment. Clicking or tapping elsewhere on the screen before saving can cause you to lose your entries or edit. This includes activating the **Comment** button on the toolbar.

You can add or modify comments pertaining to the Section being inspected, as outlined in ["Inspection Comments" on page 80](#), and add attachments as described in ["Inspection Attachments" on page 83](#).

Save

IMPORTANT: Save your rating and/or Criteria *BEFORE* entering a comment or adding an attachment. Clicking or tapping elsewhere on the screen before saving can cause you to lose entries, and this includes activating the **Comment** button on the toolbar.

Activate **Save** on the toolbar to save the inspection.

Related Links

["View a Preventative Maintenance Inspection" on page 68](#)

["Edit a Preventative Maintenance Inspection" below](#)

["Delete an Inspection" on page 77](#)





Edit a Preventative Maintenance Inspection

This topic covers how to edit an existing PM inspection that does not use sampling.

Note: An inspection may be viewed at any time. Editing, however, may only be performed within a specified number of days after the inspection date. The number of days is typically 30 by default in BUILDER as delivered to customers, but can be configured by a BUILDER Administrator.

To open an inspection for viewing or editing,

1. If you are not already in the condition tree, activate the **Condition** ribbon.
2. Navigate to the Building containing the desired inspection.
3. Expand the Building's **By System** folder.
4. Navigate to the desired Section and click on its name. *In the content area you should see a table listing at least one inspection.*

			
New	Copy	Delete	Reports
Section Name: East windows B202001 WINDOWS Aluminum Windows			
Section Qty: 19 EA			
Inspection Date	Inspector		
11/09/2017	Fisher, Audrey		
10/11/2017	Fisher, Audrey		
10/05/2017	Fisher, Audrey		

Note: The oldest inspection was automatically generated by BUILDER as a direct rating when the Section was added to the inventory. No inspector name will be listed for this inspection.

Because an inventory item is assumed to be new at installation, BUILDER assigns a Green+ rating to this automatically generated inspection.

5. In the **Inspection Date** column, activate an inspection date link. *The inspection should open. The radio button under the **Type** heading indicates what type of inspection you are viewing or editing.*

Edit PM Inspection Data

The task list in the (vertically) middle portion of the content area is not editable. However, the subcomponent table for the selected Section, in the lower portion of the PM inspection content area, can be edited.

Note: The table displays a description of subcomponents that *could* be associated with the type of Section being inspected. Not all of the subcomponents listed will necessarily apply to every instance of that Section type.

You have a variety of options to consider as you enter or edit inspection data:

- **Defect Free.** If the entire Section is defect free, check the **Defect Free** checkbox above the table of subcomponents. Once you have done so, skip to **Comments and Attachments**, below.

Note: Section-level **Defect Free** designation takes priority over a designation of **N/A** (next option in this list).

- **N/A.** If one or more of the listed subcomponents are not present in the Section you are inspecting, mark the checkbox in the **N/A** column for each of these.
- **Direct Rating on Subcomponent.** To apply a Direct Rating to a subcomponent, select the appropriate color rating from the dropdown list in the **Direct Rating** column. After applying a direct rating to each subcomponent desired, proceed to the next option in this list if there are still more subcomponents to be inspected.

Note: If both a Direct Rating and Criteria are applied to the same subcomponent, the direct rating has priority.

- **Criteria.** Using the checkboxes in the **Criteria** column, you can mark each aspect of the subcomponent that is defective. Then the BUILDER program will calculate the deduct values for each, adjust for the number of deducts as needed, and use these calculations to produce a CI value.

Note: If both a Direct Rating and Criteria are applied to the same subcomponent, Direct Rating has priority.

Comments and Attachments

IMPORTANT: Save your rating and/or Criteria BEFORE entering a comment or adding an attachment. Clicking or tapping elsewhere on the screen before saving can cause you to lose your entries or edit, This includes activating the **Comment** button on the toolbar.

You can add or modify comments pertaining to the Section being inspected, as outlined in ["Inspection Comments" on page 80](#), and add attachments as described in ["Inspection Attachments" on page 83](#).

Save

IMPORTANT: Save your rating and/or Criteria BEFORE entering a comment or adding an attachment. Clicking or tapping elsewhere on the screen before saving can cause you to lose your edits, and this includes activating the **Comment** button on the toolbar.

Activate **Save** on the toolbar to save the inspection.

If you decide to add or edit a comment, save again after doing so.

Related Links

["View a Preventative Maintenance Inspection" on page 68](#)
["Add a Preventative Maintenance Inspection" on page 72](#)
["Delete an Inspection" below](#)

Delete an Inspection

This topic outlines the instructions and needed permissions for deleting an inspection (direct rating or distress survey or preventative maintenance inspection)

Who May Delete an Inspection

- A Master Planner or BUILDER administrator may delete any inspection.
- You may delete any of your own inspections within 30 days (or possibly less—see **CAUTION** below) of their creation.





CAUTION: If the default 30-day window has been changed to a different period of time in your organization, that different period of time is what will apply instead.

How to Delete





To delete an inspection,

1. Navigate to the applicable Component-Section in the condition tree and select it.
2. In the table of inspections, activate the inspector name in the row containing the inspection to be deleted. *The row will become highlighted, as shown below.*


Note: The reason for activating the inspector name is that selecting the inspection date will activate the link and take you into the inspection itself.

			
Section Name: A103001 STANDARD SLAB ON GRADE General			
Section Qty: 4855 SF			
Inspection Date	Inspector		
06/05/2018	Fisher, Audrey		
06/05/2018	Fisher, Audrey		
01/01/1961			

3. Activate the  **Delete** button on the toolbar.

			
Section Name: A103001 STANDARD SLAB ON GRADE General			
Section Qty: 4855 SF			
Inspection Date	Inspector		
06/05/2018	Fisher, Audrey		
06/05/2018	Fisher, Audrey		
01/01/1961			

4. Select **OK** in the confirmation popup.

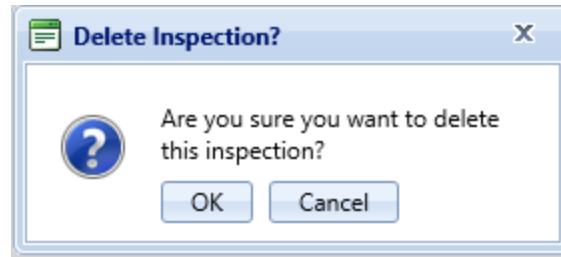

Inspection Comments and Attachments


Inspection Comments

This topic explains how to [add](#) a comment file to an inspection, and how to [view](#), [edit](#), or [delete](#) existing comments.


IMPORTANT: In a direct rating where the Component-Section is given an Amber rating (Amber+, Amber, or Amber-), best practice is to provide a comment listing the observations about the Component-Section's condition that led to the rating.

About Inspection Comments

The **Comment** button on the content area toolbar, above the inspection, indicates whether a comment has been logged for the inspection currently being displayed. The icon portion of the button resembles a clipboard.

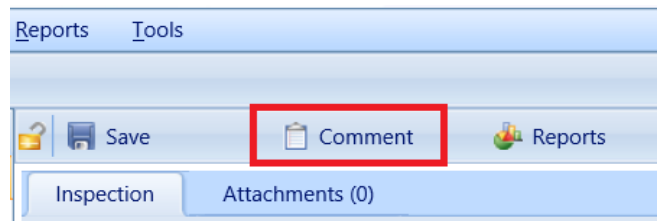

If a white checkmark on green background appears at the upper right corner of that icon, it means that a comment has been logged.

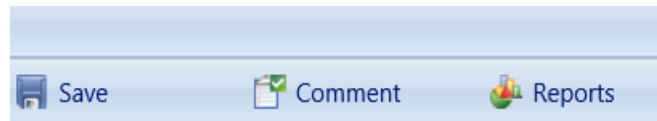


Note: For any given inspection, all comments are contained in a single popup window.

View an Inspection Comment

To view comments for the inspection, activate the **Comment** button on the toolbar above the inspection display. *The "Inspection Comments" popup window will appear.*


Note: If the **Comment** button icon does not show a white checkmark on a green background, no comments have been attached to the inspection.

To close the "Inspection Comments" popup without making any changes, either activate the  **Cancel** button on the popup toolbar, or activate the **X** in the upper right corner of the popup window.


Add an Inspection Comment


IMPORTANT: In a direct rating where the Component-Section is given an Amber rating (Amber+, Amber, or Amber-), best practice is to provide a comment listing the observations about the Component-Section's condition that led to the rating.


To add one or more comments to the inspection,

1. Activate the  **Comment** button on the content area toolbar above the inspection. *The "Inspection Comments" popup window will appear.*
2. Enter the text of your comment(s) in the popup.



3. *Optional:* After entry, you have the option to check and fix spelling as follows:
 - a. Activate the  **Check Spelling** button.
 - b. Make any corrections needed, either by entering the needed changes in the upper ("Not in Dictionary") frame and activating the **Change** button, or by selecting one of the suggestions in the lower frame and then activating the **Change** button.

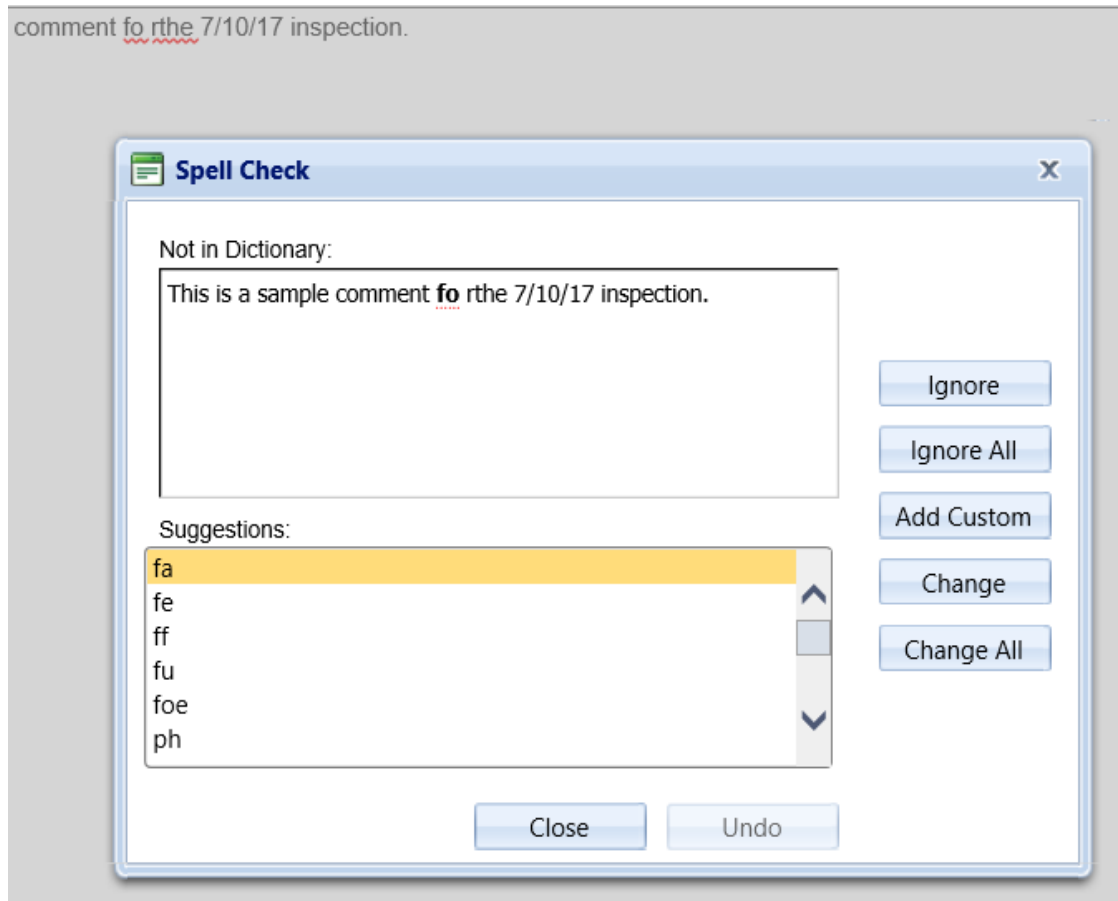

- c. Activate **OK** on the popup that says the spell check is complete.
4. Activate  **OK** on the "Inspection Comments" popup toolbar. *You will be returned to the **Inspection** tab. The Comment icon on the content area toolbar should be showing a white checkmark on a green background.*



WARNING: Even though the Comment icon indicates that there is a comment attached to this inspection, the new comment is not yet saved until you activate the **Save** icon. Be sure to complete the next step below!

5. Activate **Save** on the content area toolbar.

Edit an Inspection Comment

To edit the inspection comment(s),

1. Activate the **Comment** button on the content area toolbar above the inspection. *The "Inspection Comments" popup window will appear.*
2. Make desired edits to the comment text in the popup.

3. *Optional:* After entry, activate the  **Check Spelling** button and make any corrections needed. How to check spelling is described in more detail under ["Add an Inspection Comment " on page 81](#) above.
4. Activate  **OK** on the "Inspection Comments" popup toolbar. *You will be returned to the **Inspection** tab.*

WARNING: Your edits are not yet saved until you activate the **Save** icon. Be sure to complete the next step below!

5. Activate **Save** on the content area toolbar.

Delete an Inspection Comment

To delete an inspection comment,

1. Activate the **Comment** button on the content area toolbar above the inspection. *The "Inspection Comments" popup window will appear.*
2. Highlight the comment text in the popup that you wish to delete.
3. Press the **Delete** key on your keyboard, or perform an equivalent deletion maneuver.
4. Activate **OK** on the "Inspection Comments" popup toolbar. *If you deleted all of the text in the comment, the white checkmark on green background should have disappeared from the Comment icon on the content area toolbar.*

WARNING: Your deletion is not yet saved until you activate the **Save** icon. Be sure to complete the next step below!

5. Activate **Save** on the content area toolbar.

Inspection Attachments

This topic explains how to add an attachment to a direct rating or distress survey or preventative maintenance inspection, and how to view, edit, or delete existing attachment files.

About Inspection Attachments

The **Attachments** tab allows files such as an image file to be attached to an inspection. An image might be a photograph, or it could be an electronic image of written notes or diagrams made during the inspection.

The attachment may be in any of the following formats:

- .jpg
- .jpeg
- .png
- .zip
- .doc
- .pdf

Note: As of March 7, 2019, .doc format is allowed, but not .docx.

View an Inspection Attachment

The number in parentheses shown on an inspection's **Attachments** tab indicates how many attachments are connected with the inspection. (This is something you can see even when you are at the **Inspection** tab.) If the number is zero, there are no attachments yet associated with the inspection.



To view one or more attachments,

1. Navigate to and activate the **Attachments** tab. *If attachments are present, a table will display their type, title, and description.*
2. Activate the link in the **Title** column. *The attachment will appear in the "Image Viewer" popup window.*
3. When finished viewing, activate the **Close** button on the popup window toolbar. *You will be returned to the table of attachments.*
4. Repeat the two steps immediately above for additional attachments as desired.


Add an Inspection Attachment

To add an attachment to an inspection,


1. Navigate to the inspection's **Attachments** tab.
2. Activate the **Add** button as shown immediately below. *The "Add Image" popup window will appear, as displayed next.*

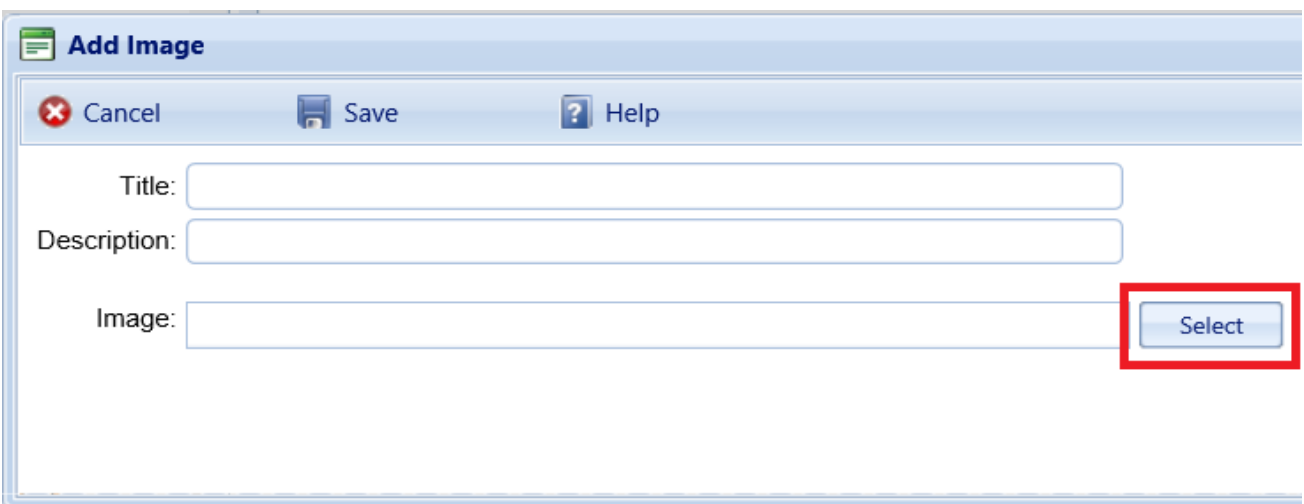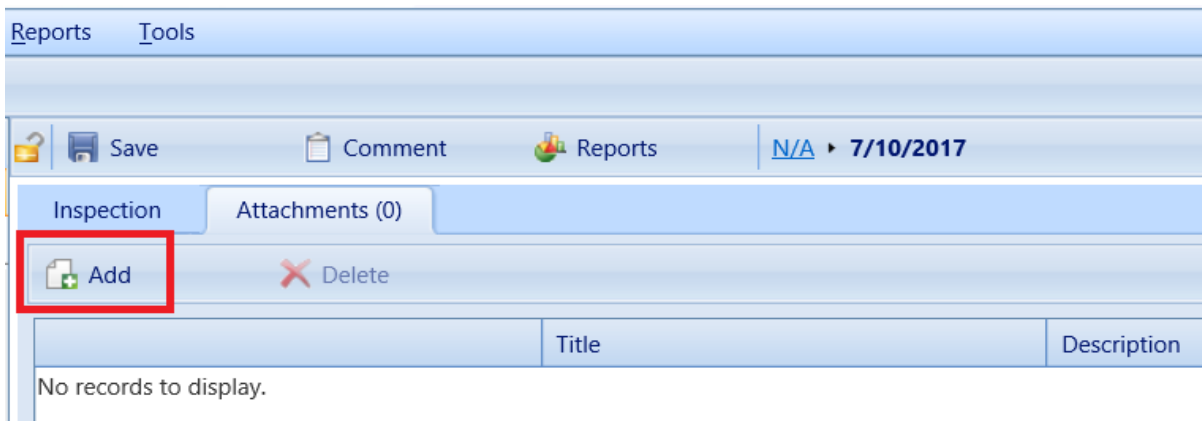

3. In the "Add Image" popup, enter a title and a description for your attachment.
4. Next, do one of the following to designate the path to the image:
 - a. Enter the path name in the **Image** field.
 - b. Alternatively, activate the **Select** button and navigate to the image file. Click or double-click the image file to attach it.
5. *The display in the popup window will change to indicate whether the attachment is in an acceptable format (green dot indicates acceptable format; red dot indicates unsupported format). You are also given the option here to remove the image if you wish.*

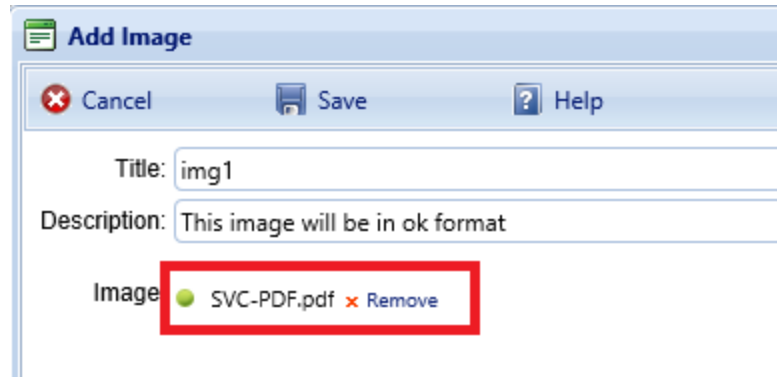

6. If the attachment is not in an acceptable format, activate the **x Remove** button as shown below and repeat from step 4.

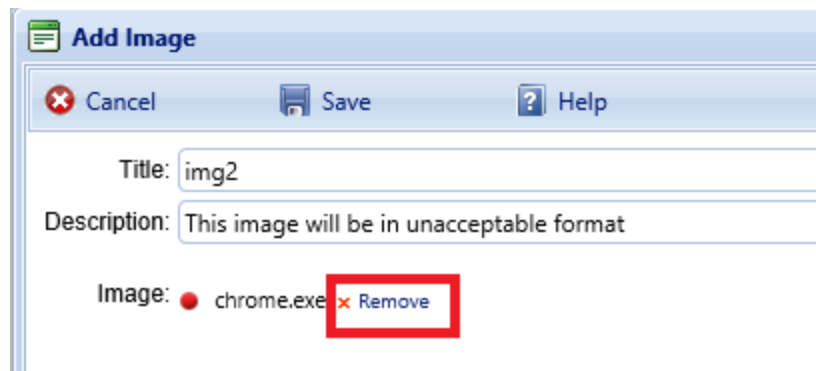

7. Once all of the information in the popup window is satisfactory, activate **Save** on the popup toolbar.

After an image has been added, the "Add Image" popup will close and you will be returned to the **Attachments** tab. A table in the content area will show the type, title, and description of each attachment.

Edit an Inspection Attachment

If the number in parentheses shown on the **Attachments** tab is greater than zero, there are one or more attachments associated with the inspection.

You can edit the title and/or description of an attachment as follows:

1. Navigate to the **Attachments** tab to view the attachments table.
2. Activate a link in the **Title** column. *The attachment will appear in the "Image Viewer" popup window.*
3. In the header section above the attachment, make the desired changes in the **Title** and/or **Description** field(s).
4. Activate **Save** on the popup toolbar to store your changes and return to the table of attachments.


- Alternatively, if you want to cancel the change, activate **Close** on the popup toolbar. *You will be returned to the table of attachments.*

If you wish to change the contents of the attachment, you will need to delete the existing attachment file and add a new one.

Delete an Inspection Attachment

To delete an attachment,

- Navigate to the inspection's **Attachments** tab to view the attachments table.
- Select the attachment you wish to delete (do *not* activate the link in the **Title** column). *When properly selected, that record in the table will change background color as illustrated below:*

Inspection Attachments (3)		
 Add	 Delete	
	Title	Description
	delme	zfsd
	attach1	inventory levels
	attach2	rollup

- Activate the **Delete** button above the table.
- Activate **Yes** in the confirmation box to delete the attachment, or **No** to cancel.

Sampling

How To Prepare for Sampling

If an entire Component-Section is not readily viewable—whether due to its size (quantity), complexity, inaccessibility, or other reasons—sampling can be used to cut down the workload or to estimate the condition of an entire Component-Section based on the condition of accessible parts. This topic introduces how to prepare for sampling.

The information in this topic is adapted and rearranged from Section 2.9 of ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, available by download from the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

Why Sample?

Sampling is a way of breaking up the assessment of large or spatially dispersed Component-Sections into more manageable parts, with each part being assessed individually. The use of sampling can also potentially provide some efficiencies in the assessment process, because the sum of the individual sample quantities need not equal the overall quantity of the Component-Section.

When to Use Sampling

Performing a condition survey inspection by sampling should be done when the component is large, complex, and/or discontinuous. In a practical sense, this means that the entire Component-Section is not readily viewable. Depending on organizational policies or guidance given to the inspector, sampling may not always be allowed but if it is, the decision to sample or not will be a judgment call made by the inspector based on building size and Component-Section quantities. Once the ["Minimum Representative Sample Quantities" on the facing page](#) has been met, sampling rates are up to the discretion of the inspector and/or organizational policy. Both sampling and non-sampling approaches can be used in the same building for different Component-Sections.

Representative vs. Nonrepresentative Samples

Samples may be representative or nonrepresentative. Representative samples are those that *are* in a typical condition for the Component-Section as a whole. This does not mean that they are in exactly the same condition; some variation is expected. Nonrepresentative samples are those that are *not* in typical condition

for the Component-Section as a whole. This can be either significantly better or worse condition. The designation as "representative" or not *will* affect the CI. Non-representative samples are considered isolated, and thus they have less of an influence on the CI than do representative samples.

Minimum Representative Sample Quantities

The minimum quantities specified below are for representative samples. As long as the minimum number of representative samples is met, nonrepresentative samples or additional representative samples may also be added.

The number of representative (as to condition) samples to be taken of a specific Component-Section with the unit of measure of "each" are listed below:

- One (1) sample when the Component-Section quantity is 1-4.
- Two (2) samples when the Component-Section quantity is 5-9.
- At least three (3) samples when the Component-Section quantity is 10 or more.
- AND a minimum of 10% of the Component-Section quantity.

The number of representative (as to condition) samples to be taken of a specific Component-Section with the unit of measure of square feet (square meters) or linear feet (meters) are listed below:

- One (1) sample when the number of potential samples is 1-4.
- Two (2) samples when the number of potential samples is 5-9.
- At least three (3) samples when the number of potential samples is 10 or more.
- AND a minimum of 10% of the Component-Section quantity.

Non-Representative Samples

- Inspect nonrepresentative Component-Sections in addition to the required representative sample quantity amounts.
- Ensure that the nonrepresentative samples are designated as such.

Representative Sample Creation and Selection

Representative sample locations and sample sizes are determined by the layout of a given building. There are a few simple rules to follow, as listed below.

- A general walkthrough of the Building is recommended prior to selecting samples, to ensure that they are representative.
- Use discrete Building discontinuities (e.g., entire rooms, wall corners) to help delineate sample boundaries, especially when the quantity has a unit of measure of square feet (square meters) or linear feet (meters).

- When an area of the building (e.g., specific room) is selected for sampling, it is recommended but not required that all of the Component-Sections at that location be inspected as part of the sample (e.g., all Component-Sections for all Systems found in a room).
- Specific Component-Sections with a unit-of-measure of “each” should most often be sampled individually, (e.g., sample five of 25 interior doors as five separate samples).
- Sample sizes for Component-Sections with a unit-of-measure of “each” need not be restricted to one.
- Sample sizes are often situation specific. Try to have them be of approximately equal size, but be practical. There will be situations when this is not possible or practical.
- Ensure that all samples are properly identified as to location, including room number or name, if applicable, (think of the next person or inspector – can he/she easily find this location?).
- When sampling is used for a given condition survey inspection cycle, either the distress survey, preventative maintenance, or direct condition rating approach may be used for a given Component-Section. However, do *not* combine the methods for any given Component-Section (i.e., do not use distress survey for one sample and direct condition rating for another sample).

Sampling Suggestions

- Specific rooms inside of a Building (e.g., "Room 110"), where all of the various Component-Sections in that room would be sampled (e.g., ceiling, walls, wall finish, floor, floor covering, light fixtures, etc.).
- Exterior wall locations (e.g. “North Wall”), where all Component-Sections included in that wall would be sampled (e.g., wall surface, doors, windows, awnings, lights).
- A Component-Section consisting of 10 roof ventilating fans (all 10 are the same) could label samples as “Fan 1”, “Fan 2”, etc.
- Interior doors denoted by room number (e.g., along a hallway) has many doors leading to rooms, so select the requisite number of doors with each door being a sample).
- Specific structural columns, beams, frames, trusses.
- A specific Component-Section (e.g., fireplace) with a quantity greater than one, but still a small number (such as two or three) that are geographically separated such that they cannot be inspected together. Inspect each one as a sample with a specific location. All Component-Sections will need to be inspected to be in conformance with the minimum sample quantity addressed above.

- If an entire Component-Section happens to be co-located at a defined sample location where other Component-Sections were sampled (e.g., a fire-place in a room selected for sampling of walls, ceiling, flooring), that Component-Section can either be included in the sample location or simply inspected without sampling.
- In general, do what makes sense, but ensure that the rules are followed.

The Importance of Sample Locations

The importance of sample locations cannot be overemphasized. The above sections briefly touched on sample locations, but two important considerations of inspection data management (past, present, and future) and field data collection practicalities are addressed below.

First, the sample location creation possibly provides a basis for collecting condition survey data for a number of different Component-Sections. For example if a room were chosen as a location, the walls, ceiling, light fixtures, etc. could all be inspected and associated with the same location. This can be very useful for future inspections even if all of the Component-Sections are not inspected in a given cycle, because a method of sorting inspection data is by sample location. These locations can be used year after year and will be illustrated later in this manual.

Second, the creation of sample locations will affect sampling rates and sizes. It was stated earlier that Component-Sections with the unit-of-measure of “each” should be sampled individually. However, sometimes this is impractical. If a sample location has been created that covers a specific area, such as a room, the Component-Section may have a quantity of more than one in that room. A logical clustering of individual items may form a practical basis for a sample. An example would be a Component-Section quantity of one hundred (100) light fixtures in a building. A room being sampled may have four fixtures out of that total Component-Section quantity. The intent would be to not inspect each light fixture in the sample location room. Rather, all four light fixtures would encompass a single sample. Under these circumstances it becomes important to make all sample sizes roughly the same for a given Component-Section. That is, avoid one sample of four (4) lights and another sample of forty (40) lights.

Additional Information: Refer to ERDC/CERL SR-18-7, pages 25 and 26, for information about unusual condition situations and about sampling to quantify work needs for a distress survey with distress quantity.

Related Links

["Add a Sample" below](#)

["Edit a Sample" on the facing page](#)

["Delete a Sample" on page 95](#)

["Sampling Data" on page 96](#)

Add a Sample


This topic shows how to add a sample when using the sampling method in a direct rating or distress survey or PM inspection.

Tip: Before embarking on sampling for the first time, be sure to read ["How To Prepare for Sampling" on page 88](#).

When the **Sampling** radio button is selected in the header section of the inspection, (whether it be a direct rating, or a distress survey, or a preventative maintenance inspection), an additional section of the screen will open up because additional data is required for condition assessments that are performed using sampling. This additional data is reviewed at ["Sampling Data" on page 96](#).

To add a sample,

1. Activate the button to the right of the **Sample** field.

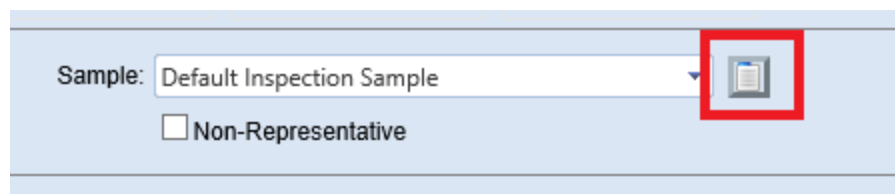

Note: BUILDER provides an initial default sample named "Default Inspection Sample" which is initially sized at 100% of the Component-Section.

2. In the list of options, select  **Add Sample**. *The "Add Location" popup window will appear.*

3. In the "Add Location" popup, you have the option to select an existing sample location for the current Section. Alternatively, activate the **Create a new sample location** radio button and enter the sample name in the field.
4. Activate **Save** on the popup toolbar.

WARNING: When you create your first sample for a Component-Section, you should either delete or reduce the size (**Sample Qty**) of the Section's Default Inspection Sample provided at delivery of BUILDER, because that default sample is initially sized at 100% of the Component-Section. *Failure to do this can result in the percentage inspected, reported in the "Inspected" field, to be greater than 100 percent.*

Related Links

["How To Prepare for Sampling" on page 88](#)

["Edit a Sample" below](#)

["Delete a Sample" on page 95](#)

["Sampling Data" on page 96](#)

Edit a Sample


This topic shows how to edit a sample when using the sampling method in a direct rating or distress survey or PM inspection.

When the **Sampling** radio button is selected in the header section of the inspection, (whether it be a direct rating, or a distress survey, or a preventative maintenance inspection), an additional section of the screen will open up because


additional data is required for condition assessments that are performed using sampling. This additional data is reviewed at ["Sampling Data" on page 96](#).


To edit a sample,

1. Expand the dropdown list in the **Sample** field.

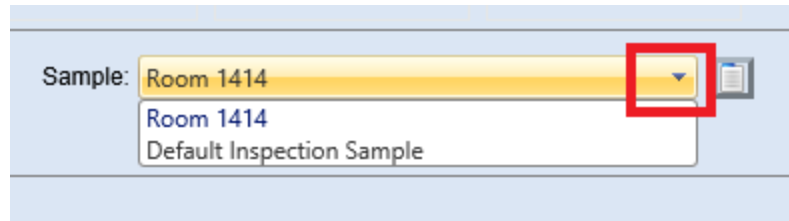

A screenshot of the 'Sample' field in a software interface. The field is a dropdown menu with 'Room 1414' selected. A red rectangle highlights the dropdown arrow on the right side of the field. Below the field, a list of options is visible: 'Room 1414' and 'Default Inspection Sample'.

2. In the list, select the sample you wish to edit.
3. Activate the button to the right of the **Sample** field.
4. In the list of options, select  **Edit Sample**

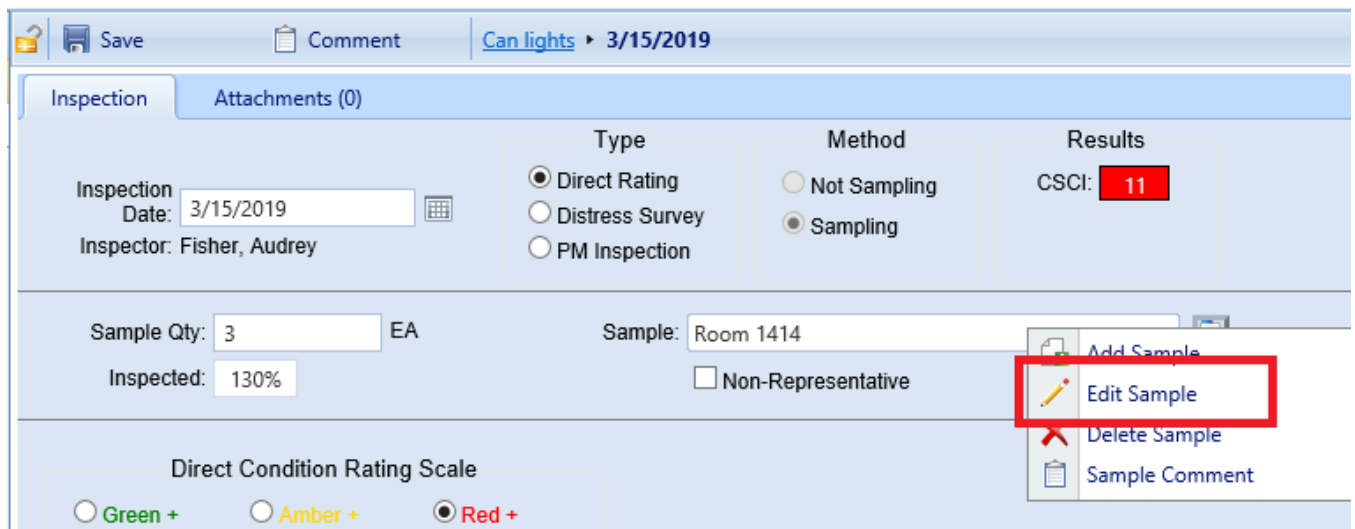

A screenshot of the inspection form. The form has a top bar with 'Save', 'Comment', and 'Can lights' buttons. Below this is a section for 'Inspection' with fields for 'Date' (3/15/2019) and 'Inspector' (Fisher, Audrey). To the right are radio buttons for 'Type' (Direct Rating, Distress Survey, PM Inspection) and 'Method' (Not Sampling, Sampling). Further right is a 'Results' section with 'CSCI: 11'. Below the inspection section is a 'Sample' section with 'Sample Qty: 3', 'Inspected: 130%', 'Sample: Room 1414', and a 'Non-Representative' checkbox. To the right of the 'Sample' field is a dropdown menu with four options: 'Add Sample', 'Edit Sample' (highlighted with a red rectangle), 'Delete Sample', and 'Sample Comment'. At the bottom is a 'Direct Condition Rating Scale' with three radio buttons: 'Green +', 'Amber +', and 'Red +'.

5. If you wish to change the sample quantity, do so in the Sample Qty field. Make sure to adhere to the minimum quantity for representative samples, as listed in ["How To Prepare for Sampling" on page 88](#).

Note: If the percent inspected shows as more than 100%, you may want to consider deleting or reducing the size of the Default Inspection Sample, which is initially sized at 100% of the Component-Section.

6. You can also change whether the sample is designated as representative or not, by marking or unmarking the **Non-Representative** checkbox. This distinction is explained in ["How To Prepare for Sampling" on page 88](#).
7. Activate **Save** on the toolbar.

Related Links

["How To Prepare for Sampling" on page 88](#)

["Add a Sample" on page 92](#)

["Delete a Sample" below](#)


["Sampling Data" on the next page](#)

Delete a Sample

Tip: When you create your first sample for a Component-Section, you should either delete or reduce the size (**Sample Qty**) of the Section's Default Inspection Sample provided at delivery of BUILDER, because that default sample is initially sized at 100% of the Component-Section. This would lead to the percentage inspected—reported in the **Inspected** field—to be greater than 100 percent after creating more samples.

To delete a sample,

1. Expand the dropdown list in the **Sample** field.

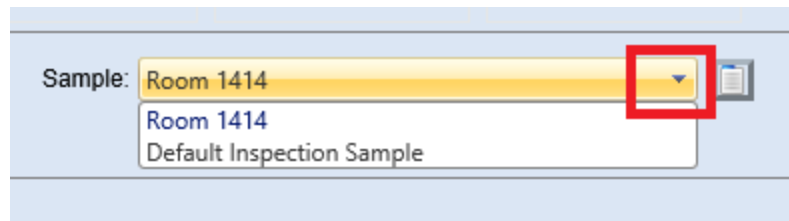

2. In the list, select the sample you wish to delete.
3. Activate the button to the right of the **Sample** field.

4. In the list of options, select **✗ "Delete Sample."**

The screenshot shows a software interface for inspection data entry. At the top, there is a toolbar with icons for 'Save', 'Comment', and a date field '3/15/2019'. Below the toolbar, there are tabs for 'Inspection' and 'Attachments (0)'. The 'Inspection' tab is active, showing a form with the following fields: 'Inspection Date: 3/15/2019', 'Inspector: Fisher, Audrey', 'Type' (with radio buttons for 'Direct Rating', 'Distress Survey', and 'PM Inspection'), 'Method' (with radio buttons for 'Not Sampling' and 'Sampling'), and 'Results' (with 'CSCI: 11'). Below these fields, there are 'Sample Qty: 3' and 'Inspected: 130%' fields, followed by 'Sample: Room 1414' and a 'Non-Representative' checkbox. At the bottom, there is a 'Direct Condition Rating Scale' with radio buttons for 'Green +', 'Amber +', and 'Red +'. On the right side, there is a dropdown menu with four options: 'Add Sample', 'Edit Sample', 'Delete Sample' (highlighted with a red box), and 'Sample Comment'.

5. Activate **Save** on the toolbar.

Related Links

["How To Prepare for Sampling" on page 88](#)

["Add a Sample" on page 92](#)

["Edit a Sample" on page 93](#)

["Sampling Data" below](#)

Sampling Data

This topic reviews the data available about a sample when using the sampling method in a direct rating or distress survey or PM inspection.





When the **Sampling** radio button is selected in the header section of the inspection, (whether it be a direct rating, or a distress survey, or a preventative maintenance inspection), an additional section of the screen will open up because additional data is required for condition assessments that are performed using sampling.

Additional data related to sampling:

- **Sample Qty.** The quantity of the Section inspected at the current sample location. (The unit of measure is displayed to the right of the data field.)

- **% Inspected (Read-Only).** Displays the total percentage of the Section that has been inspected for the current inspection date. This value is calculated by summing the sample quantities of all sample locations and dividing by the Section quantity.

Note:BUILDER provides an initial default sample named "Default Inspection Sample" which is initially sized at 100% of the Component-Section. Thus, if additional samples are added without deleting or reducing the size of the Default Inspection Sample, the percent inspected can be over 100%.

- **Sample.** The list of all available sample names is stored in this field, in a dropdown. Using the button to the right of this field, you can choose to
 - a.  [Add](#) a sample location.
 - b.  [Edit](#) the currently selected sample.
 - c.  [Delete](#) the currently selected sample.
 - d.  Add comments regarding the current sample.
- **Non-Representative.** Mark this checkbox if the condition of the current sample is not representative of the Component-Section as a whole. Representative samples are those that are in a "typical" condition for the Component-Section as a whole. This does not mean that they are exactly in the same condition. Some variation is expected. Non-representative samples are those that are not in typical condition for the Component-Section as a whole. This can be either significantly better or worse condition. Non-representative samples are considered isolated and thus have less of an influence on the condition index than representative samples.

Related Links

["How To Prepare for Sampling" on page 88](#)

["Add a Sample" on page 92](#)

["Delete a Sample" on page 95](#)

Scheduling Assessments

About Manual Inspection Scheduling

This topic points to information about best practices for inspection scheduling. To learn about BUILDER's automated scheduling tool, see "[About Knowledge-Based Inspection Scheduling](#) " below.

To read about the principles of inspection scheduling, see Section 2.6 in the **Overview** chapter of the manual referenced immediately below.

Resource: ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, is available by download from the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

About Knowledge-Based Inspection Scheduling

Overview

The knowledge-based inspection (KBI) feature in BUILDER is designed to select from your entire inventory a subset of Component-Sections that should be considered for inclusion in the next round of condition assessments. Additionally, this feature is able to determine the type of condition assessments to perform. The selection algorithm is based on pieces of data (knowledge) associated with the Component-Sections that are compared with user-defined parameters.

Note: The KBI feature is an optional tool. It can assist in selecting candidates for condition assessment if other structured programs for scheduling inspections are lacking.


For an explanation of the Knowledge-Based Inspection principles, please refer to the **Overview** chapter of ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, available by download from the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

Determining When to Perform a Condition Assessment

As stated above, the KBI feature needs to compare knowledge about the Component-Section with user-defined parameters to determine when a condition

assessment is to be performed. These parameters are input when [creating a condition standard](#) and must be input for each of the five condition zones shown in the figure below. For an explanation of each condition zone, see Section 2.5, **Condition Zones**, in the **Overview** chapter of the manual referenced immediately below.

Resource: ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*, is available by download from the SMS community user's group website at <https://www.sms.erdcdren.mil> (at the website, see **PRODUCTS > BUILDER > Downloads**).

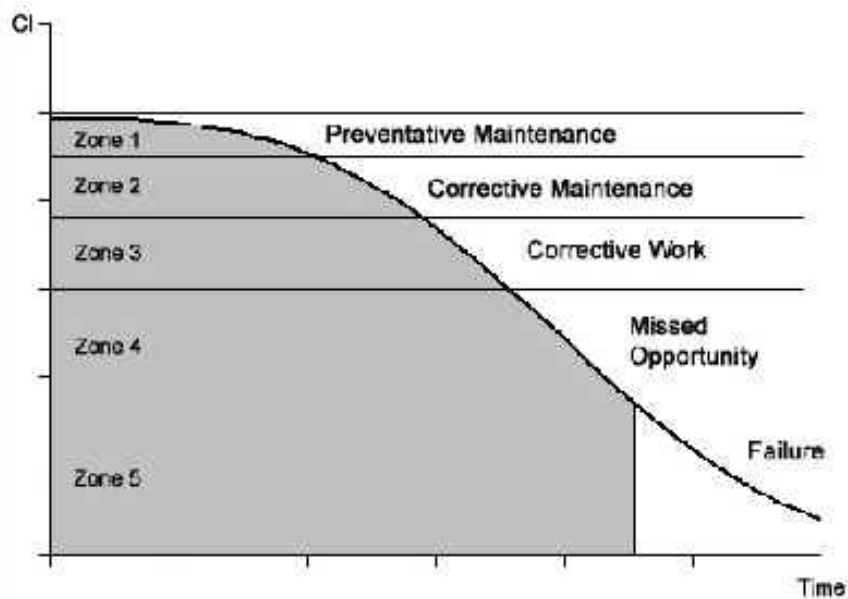

The user-defined parameters for the KBI feature include:

- **CI Lower Bound.** The lower bound of the CI range of the condition zone. Providing the lower bound for each zone breaks the condition curve as shown above.
- **Maximum Inspection Interval.** The maximum amount of time, in years, between condition assessments in each condition zone.
- **Number of Inspections in Zone.** The maximum number of condition assessments that should be performed in each condition zone.
- **Degradation Factor.** The ratio of the maximum relative rate of deterioration to the expected rate of deterioration when a condition assessment is triggered. That is, if the deterioration rate were set to 2, any measured deterioration rate greater than twice the expected rate would trigger another inspection.

Based on the projected CI of the Component-Section, the KBI feature determines which range the Component-Section is in, and how many inspections to perform in that range. It then calculates the time between inspections to accomplish this. This interval is compared to the maximum inspection interval, and the lesser of the two becomes the allowable inspection interval.

When the time since the last inspection becomes greater than the allowable interval between condition assessments, the Component-Section is flagged for inclusion into the next round of assessments. In addition, if the rate of deterioration of the CI seen by the last condition assessment is greater than the allowable rate of deterioration determined by the deterioration factor discussed above, the Component-Section will also be flagged for inclusion into the next round of assessments.

Determining the Type of Condition Assessment to Perform

Once the KBI program selects the subset of recommended Component-Sections for inclusion into the next round of assessments, it must determine the assessment type that will be used for each condition assessment. Based on the CI range that the component is projected to be in, the general guidelines below apply.

Range	Procedure
1	Direct
2	Distress
3	Distress
4	Direct
5	Direct

In some instances, a more detailed level of condition assessment may be warranted regardless of the guidelines recommended above. If a more detailed assessment was performed previously, this same assessment type will be recommended again for zones 1 - 3. This means, for example, if the Component-Section is still in range 1 and the previous condition assessment type was a distress survey, the KBI program would recommend a distress survey be performed.


Using the KBI Feature in BUILDER

To begin using the KBI feature, see ["Add a Knowledge-Based Inspection Schedule" on the facing page.](#)

Add a Knowledge-Based Inspection Schedule

To add a knowledge-based inspection schedule in BUILDER,

1. Start with full-screen view (BUILDER window to the full size of your computer screen) for best results.
2. Activate the **Condition** ribbon unless you are already in the condition tree.
3. Navigate to a Site or below.
4. Then do one of the following:
 - a. Activate the **Inspection Schedule** icon in the inspection navigation toolbar, as shown in the image below.

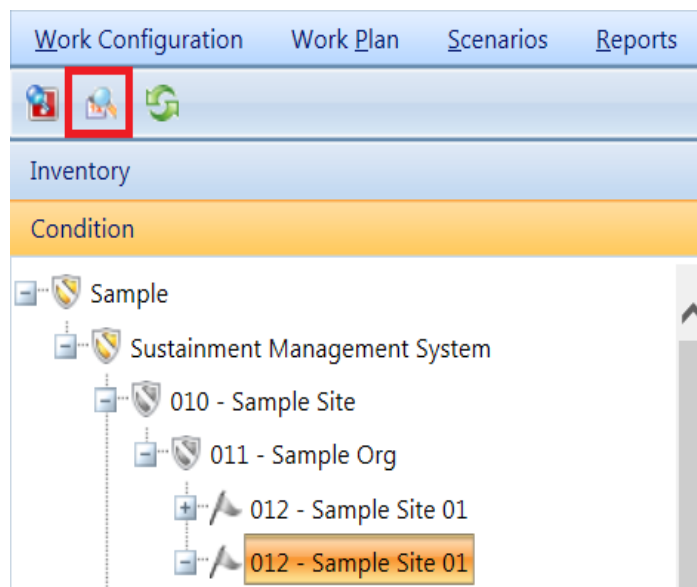

- b. Alternatively, right-click the location in the Condition navigation tree and select **Inspection Schedule** from the dropdown list.

The Knowledge-Based Inspection Scheduling window will appear.

Knowledge-Based Inspection Scheduling Toolbar

The following options are available at the Knowledge-Based Inspection Scheduling toolbar:


- **Close.** Closes the Knowledge-Based Inspection Scheduling window and returns to the **Condition** ribbon.
- **Export to Excel.** Exports the current inspection schedule to a Microsoft Excel spreadsheet.
- **Generate.** Generates a new inspection schedule.

- **Create Work Items.** Work items can be created from this location, but this generation takes a long time.
- **Delete Selected.** Deletes any row of the inspection table where the check-box is marked.
- **Help.** Opens a help document in a new browser tab.

Creating an Inspection Schedule

To create a knowledge-based inspection schedule,

1. Activate the **Generate** button in the toolbar.

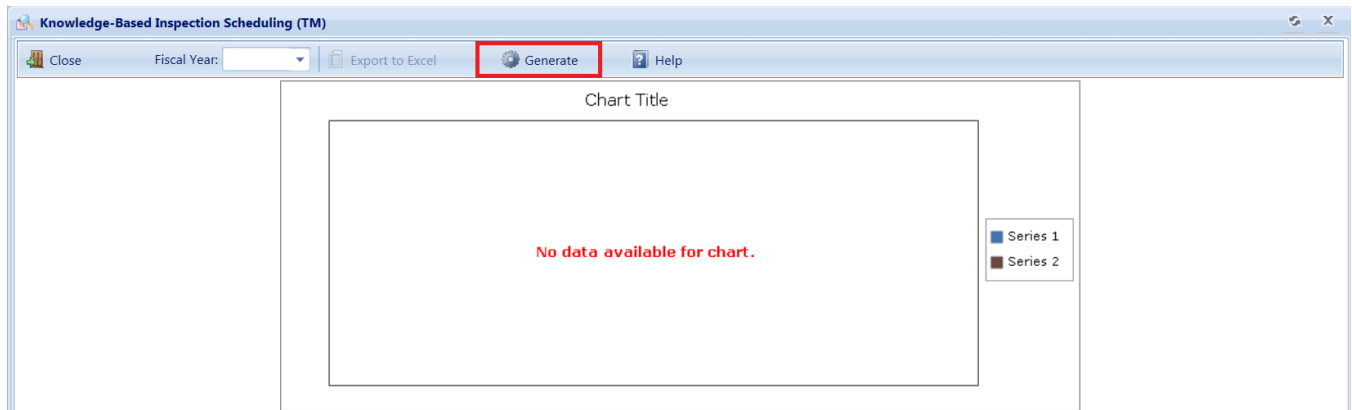


The "Scheduler" popup window will appear.

2. In the Scheduler window, first use the dropdown to choose how many years of inspection schedule to generate.
3. Next, activate **Proceed** to delete your current inspection schedule and generate a new one with KBI. (Alternatively, activate **Cancel** to cancel and exit the Scheduler window.)

WARNING: Generating a new inspection schedule will delete the current inspection schedule.

Using the policy sequence [policy sequence](#) defined in the [Site data](#), the **KBI**¹ inspection schedule will be generated and shown in the window.

¹Component material category

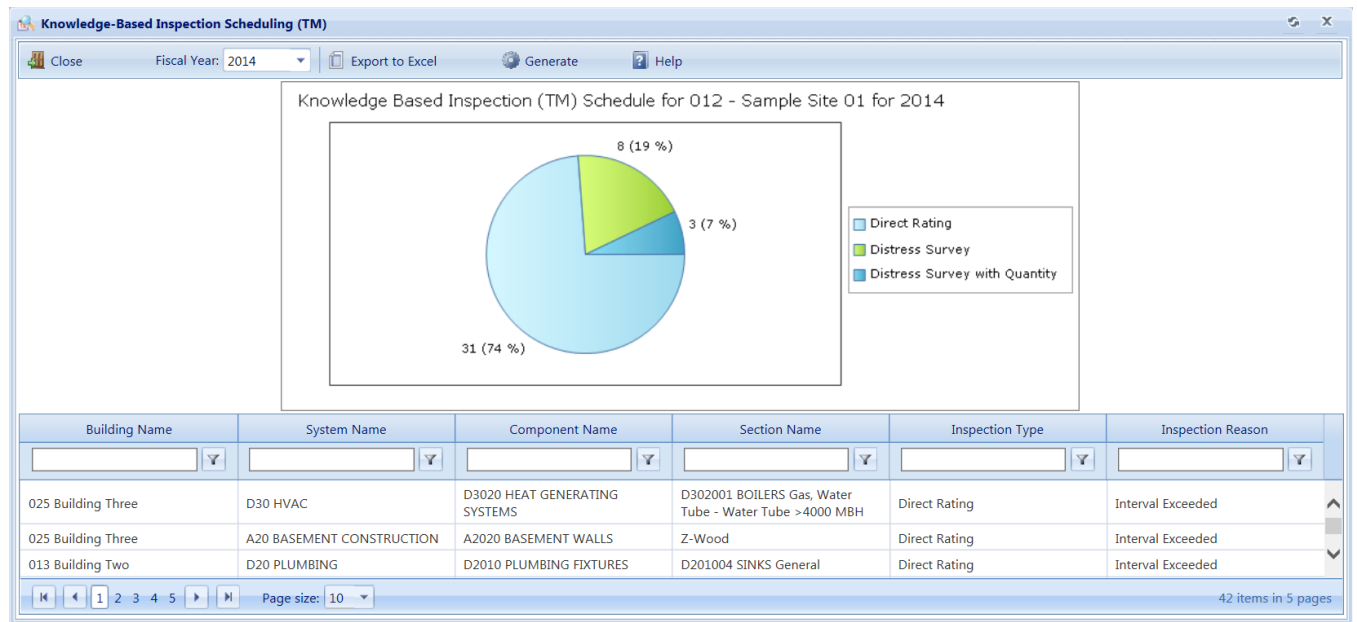

- To export the schedule to a Microsoft Excel spreadsheet, activate **Export to Excel** in the toolbar.

Remote Inspection and Inventory Entry Using BuilderRED

This topic

- Introduces the BUILDER Remote Entry Database (BuilderRED) tool.
 - Provides the download location.
 - Explains briefly what the tool can do.
 - Links to topics giving detailed instructions for exporting to and importing from BuilderRED.
-

What is BuilderRED?

The BUILDER™ Remote Entry Database (BuilderRED, or BRED) is an optional tool designed for use with BUILDER. It allows you to (1) capture and collect inventory and inspection data using a Windows tablet or laptop as you walk through a Building, and then (2) later, load that data into the BUILDER database.

You can download BRED from the **PRODUCTS > BUILDER > Downloads** section of the [SMS community user's group website](#), under the heading **BUILDER Remote Entry Database (BRED)**.

IMPORTANT: Before upgrading from BUILDER Version 3.3.6, be sure to read the introductory segment in this documentation that explains the impact of this upgrade on using BuilderRED.

Collecting Inventory Data

When performing inventory, Buildings and their subparts can be created in BuilderRED, then imported into BUILDER. If the Buildings have already been created in BUILDER, they can be exported to BuilderRED, where inventory details can be entered on-site, then imported back into BUILDER.

Performing Inspections

Inspectors can use BuilderRED to enter condition assessment data in BUILDER format and then import it into BUILDER. Standard functionality assessments are also built into BuilderRED. These assessments can be initiated and filled out in the field, then imported into BUILDER.

Export Data to BuilderRED

You can choose to export database items to BuilderRED (aka BRED) either (a) with or (b) without the images that are linked to these items.

WARNING: In BUILDER releases prior to 3.3.10, non-image files such as PDFs may prevent *all* images from exporting to BuilderRED or importing into BUILDER from BuilderRED. This [known issue of image export from BUILDER](#) is due to file size precautions: overlarge files can cause the export to fail.

Below are some recommendations for best practices to follow to help ensure successful and less time-consuming export of files to BuilderRED:

Best Practice Recommendation #1: Be sure to observe the 30-day [time limit on editing inspections](#) and re-importing them into BUILDER, or the time limit in effect for your implementation of BUILDER if it differs from 30 days.


Best Practice Recommendation #2: Some Facilities (Buildings) within your Site can already contain several hundred photos. If you know beforehand that you will not need to view or edit these existing photos in BuilderRED, the best practice is to just download the BRED file without images.

Best Practice Recommendation #3: 800 pixels is the recommended maximum width and maximum height for images to be used in BuilderRED.

The next section describes how to export both database information and images to BuilderRED. For instructions on exporting database information without images, see [Export Database Information Alone to BuilderRED](#).

Export Database Information and Images to BuilderRED


1. In the BUILDER navigation tree, right-click the lowest level node (Site, Complex, or Building) that contains the items you wish to export.
2. Select the “Export to BRED” option:

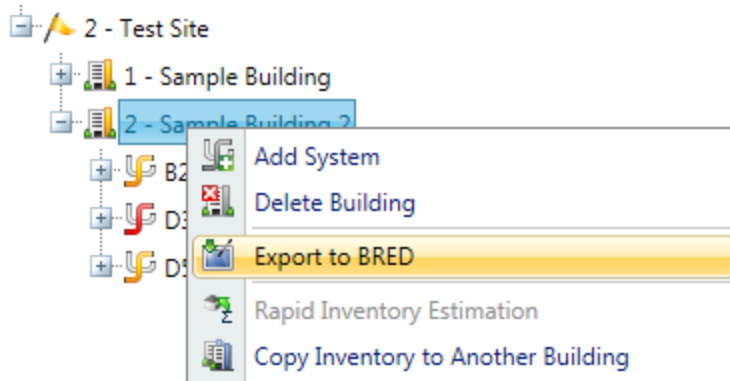


3. In the "BRED Exporter" popup window, highlight the Building(s) you want to export, using the arrows to move Buildings in or out of the Selected Buildings list. Click here to see different ways you can select Buildings.¹

1


All Buildings:	Activate the double arrow.
One Building:	<ol style="list-style-type: none"> 1. Select the Building. 2. Activate the single arrow.
Multiple Buildings, contiguous in the list:	<ol style="list-style-type: none"> 1. Select the first Building. 2. Press and hold SHIFT, then select the last Building. 3. Release SHIFT. 4. Activate the single arrow.
Multiple Buildings, not contiguous in the list:	<ol style="list-style-type: none"> 1. Select the first Building. 2. Press and hold CTRL, then select each subsequent Building desired. 3. Release CTRL. 4. Activate the single arrow.
To deselect a highlighted Building from the list:	<ol style="list-style-type: none"> a. Press and hold CTRL, then select the Building. b. Alternatively, you can wait until the Building has been moved to the right-hand column under "Selected Buildings", then select the Building, and activate the single arrow pointing to the left. This will move the Building back into the "Available for Selection" column.

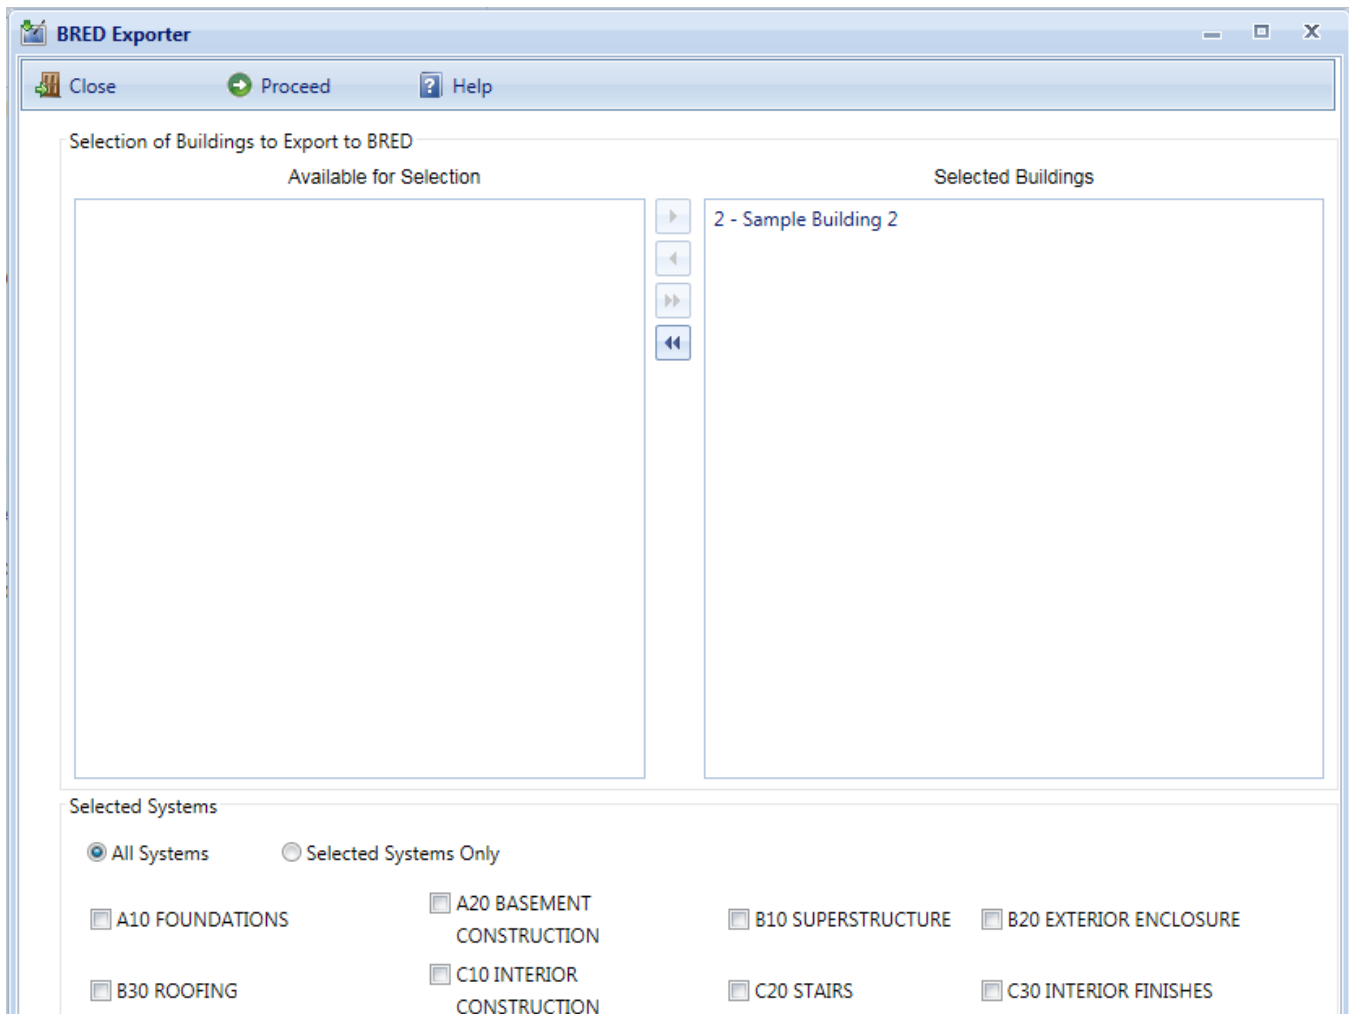


4. Once the desired Buildings are in the Selected Buildings column, do one of the following in the lower section of the "BRED Exporter" window:
 - a. Choose "All Systems" (radio button; this is the default), or
 - b. Select specific systems (using radio button and checkboxes).
5. (Optional) In order to download images with the BRED file, you must select "Also Export Images" at the bottom of BRED Exporter Window, as shown below:

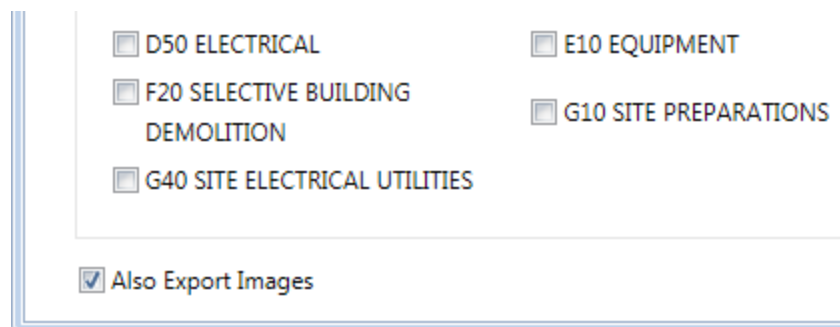

Note: If instead of “Also Export Images” you see “No Images to Export” it means that the Building(s) you have selected to export do(es) not currently have any images:

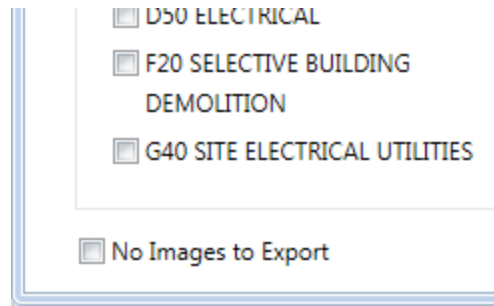


6. To start the export, click the **Proceed** button near the top of the window. A progress bar will display as the BRED database file is downloaded:

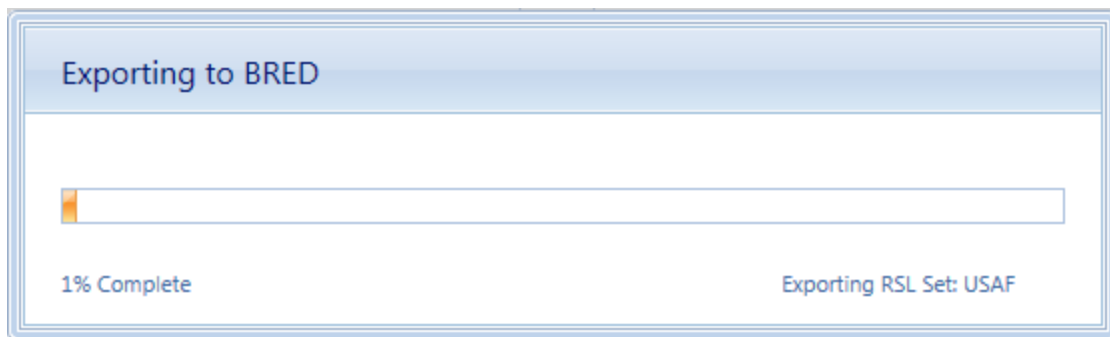


By clicking the **Proceed** button, the following tasks area accomplished:

- A Microsoft Access database is created, which will be identified by the path and name you choose after the export has completed. The database will contain the inventory and condition assessment data for the selected Systems in the Buildings in the Selected Buildings list. This database is accessible to a computer with the BRED software, where inventory and/or condition assessment data can be recorded. Once complete, this file can be imported into BUILDER to add the new data is added to the database.
- The Building inventory records of the selected Systems that were exported are locked so changes cannot be made to them in BUILDER while being edited with BRED. The records are unlocked when the BRED data is imported back into the database.


7. After the database file has successfully downloaded, select the “Save As” option to choose a file location for it:



8. If the BRED file did not download correctly, select “Redownload Export File.” Otherwise, select “Download Images File” to start the second download (the download of the images file into BRED):

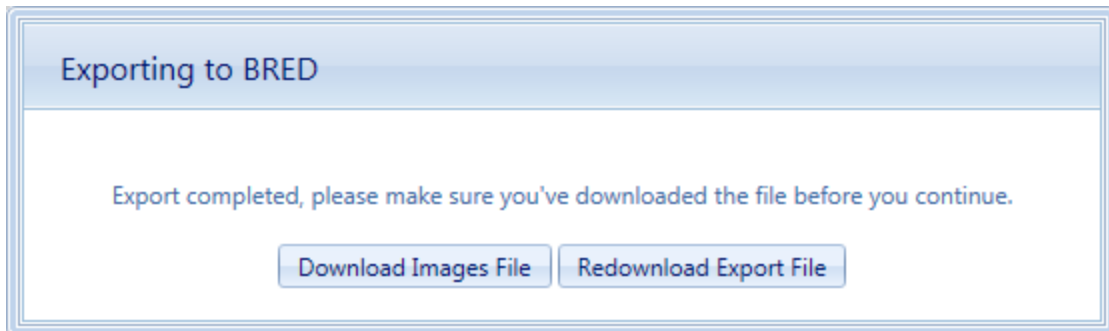


9. After the second download completes, click “Save As” and choose the **same file location** as your BRED database file.
10. Lastly, select “Complete Export” to finish the export process:

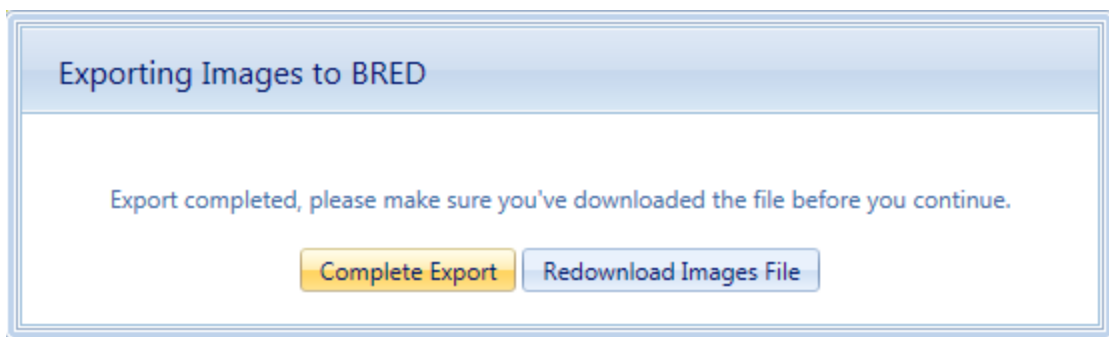

Time Limit on Editing Inspections

Once the export is complete, you can use BuilderRED to collect Inventory data or perform Inspections. Note that it is a common standard to have a 30-day time limit from the date of an Inspection to edit the Inspection or the comments in it. This time limit applies both in BuilderRED and after the data has been imported back into BUILDER.

Known Issue with Image Export from Builder

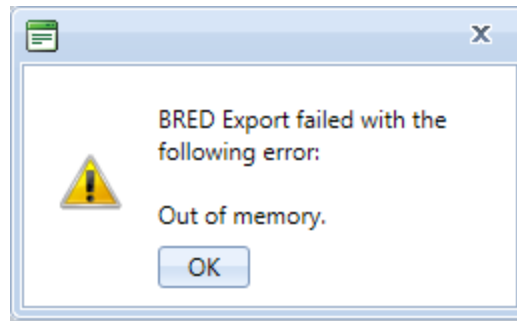


This issue applies to versions of BUILDER 3.3.9 and older.

If the BRED Export error message shown above displays after you try to download the image file from BUILDER, that indicates that somewhere in the exported files there is an attachment (such as a PDF, an Excel file, etc.) that is not an image. The workaround is to export the Building(s) without images.

Export Database Information Alone to BuilderRED

This section outlines the procedure to export data from BUILDER to BuilderRED without any of the associated image files.

1. In the BUILDER navigation tree, right-click the lowest level node (Site, Complex, or Building) that contains the items you wish to export.
2. Select the "Export to BRED" option:

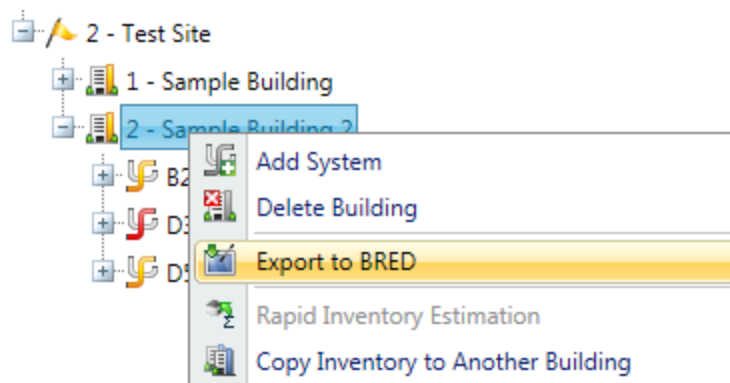


3. In the "BRED Exporter" popup window, highlight the Building(s) you want to export, using the arrows to move Buildings in or out of the Selected Build-


ings list. Click here to see different ways you can select Buildings.¹

1

All Buildings:	Activate the double arrow.
One Building:	<ol style="list-style-type: none">1. Select the Building.2. Activate the single arrow.
Multiple Buildings, contiguous in the list:	<ol style="list-style-type: none">1. Select the first Building.2. Press and hold SHIFT, then select the last Building.3. Release SHIFT.4. Activate the single arrow.
Multiple Buildings, not contiguous in the list:	<ol style="list-style-type: none">1. Select the first Building.2. Press and hold CTRL, then select each subsequent Building desired.3. Release CTRL.4. Activate the single arrow.
To deselect a high- lighted Building from the list:	<ol style="list-style-type: none">a. Press and hold CTRL, then select the Building.b. Alternatively, you can wait until the Building has been moved to the right-hand column under "Selected Buildings", then select the Building, and activate the single arrow pointing to the left. This will move the Building back into the "Available for Selection" column.

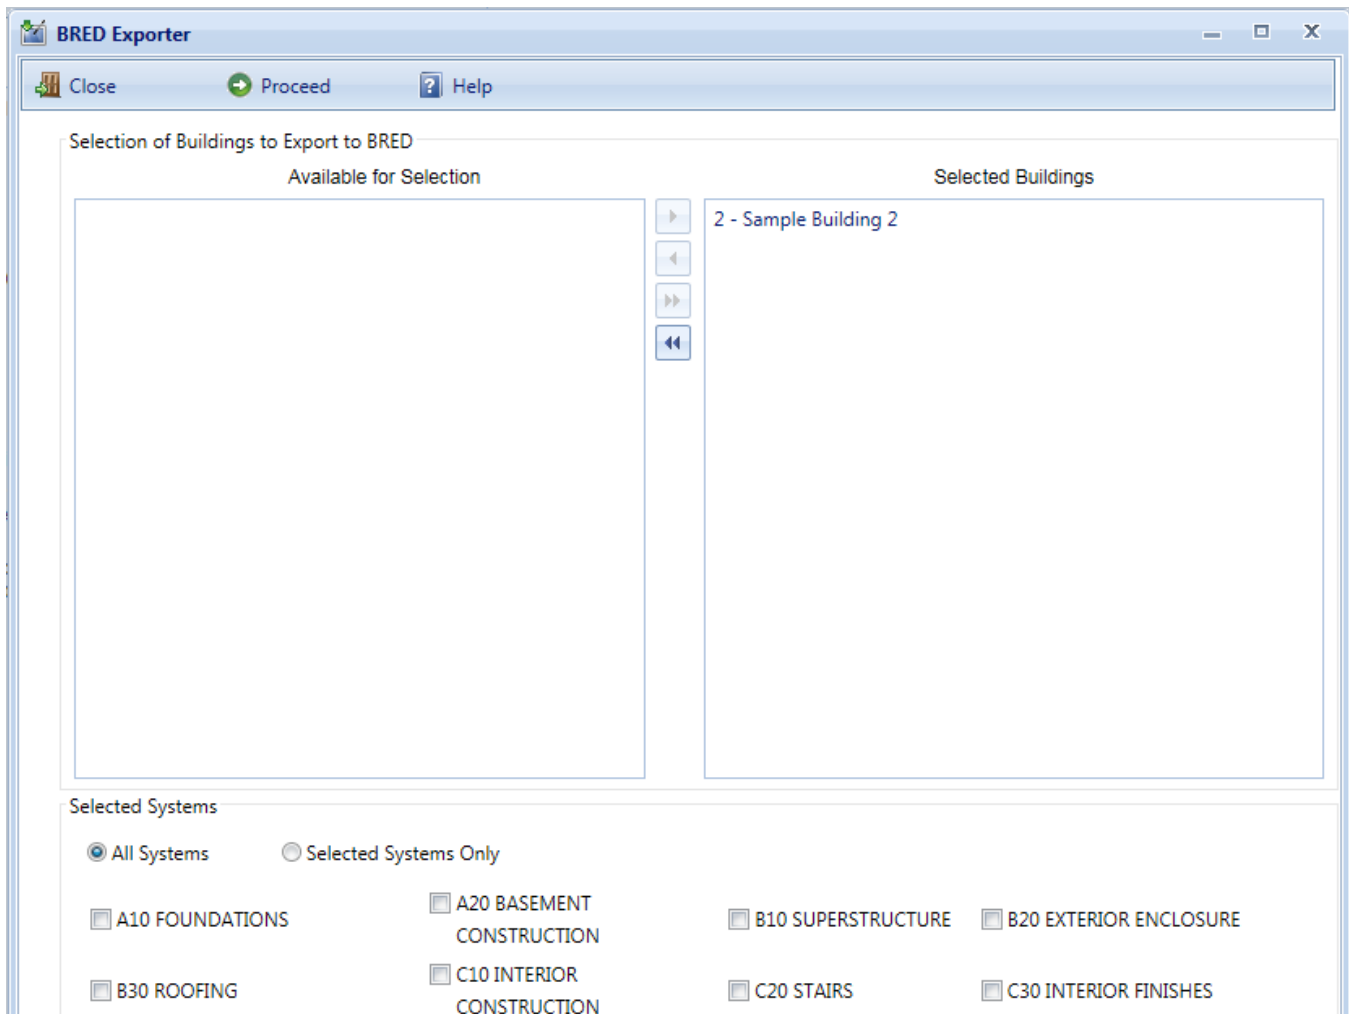


4. Once the desired Buildings are in the Selected Buildings column, do one of the following in the lower section of the "BRED Exporter" window:
 - a. Choose "All Systems" (radio button; this is the default), or
 - b. Select specific systems (using radio button and checkboxes).
5. In order to download the BRED file without downloading the associated images, make sure that the **Also Export Images** checkbox at the bottom of the BRED Exporter Window is *not* checked.
6. To start the export, click the **Proceed** button near the top of the window. *A progress bar will display as the BRED database file is downloaded:*

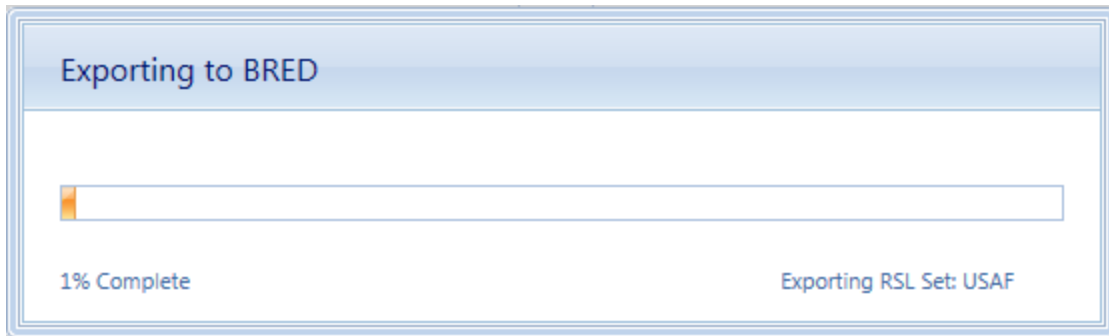


By clicking the **Proceed** button, the following tasks area accomplished:

- A Microsoft Access database is created, which will be identified by the path and name you choose after the export has completed. The database will contain the inventory and condition assessment data for the selected Systems in the Buildings in the Selected Buildings list. This database is accessible to a computer with the BRED software, where inventory and/or condition assessment data can be recorded. Once complete, this file can be imported into BUILDER to add the new data is added to the database.
- The Building inventory records of the selected Systems that were exported are locked so changes cannot be made to them in BUILDER while being edited with BRED. The records are unlocked when the BRED data is imported back into the database.

7. After the database file has successfully downloaded, select the “Save As” option to choose a file location for it:



8. If the BRED file did not download correctly, select “Redownload Export File.” Otherwise, select “Complete Export” to finish the export process:

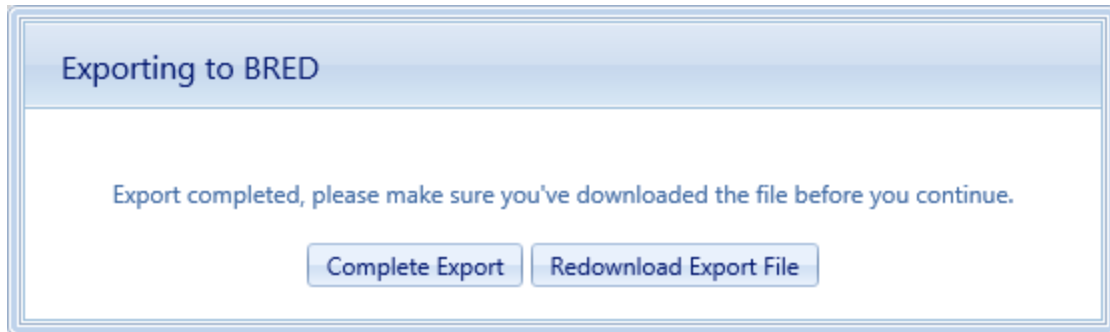

Time Limit on Editing Inspections

Once the export is complete, you can use BuilderRED to collect Inventory data or perform Inspections. Note that it is a common standard to have a 30-day time limit from the date of an Inspection to edit the Inspection or the comments in it. This time limit applies both in BuilderRED and after the data has been imported back into BUILDER.

Import Data from BuilderRED to BUILDER

Overview of the Import Process

In order to load data collected using BRED into the BUILDER database, you will need to import the database from BRED into BUILDER. It is important to note that the database file containing your new data must be loaded so that the BUILDER program has access to its path and can complete the importing process.

If you added new images during Inventory or Inspections, then importing your information back into BUILDER will be done in two steps: (1) importing the BRED database into BUILDER, and (2) importing the image archive file.

These two steps may be followed by an optional third step: (3) performing a manual condition rollup. This step is optional because the system performs automated rollups nightly.


If you have no images to import, then you can go straight from importing the BRED database information into BUILDER to [performing a rollup](#).

How To Import Database Information


After you have finished adding, editing, and deleting Inventory and/or Inspections data, the updated database must be imported back into BUILDER, to assess the condition of the installation and to plan maintenance and repair.

To import database information into BUILDER from BuilderRED:


1. Save all changes to the database in BuilderRED.
2. Open BUILDER.
3. Select **Tools > Import > Import from BRED** starting at the main menu.

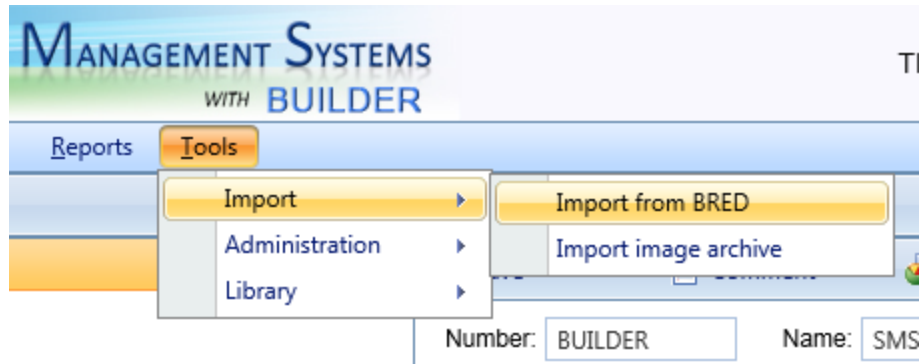

The "Import from BRED" popup window will appear:

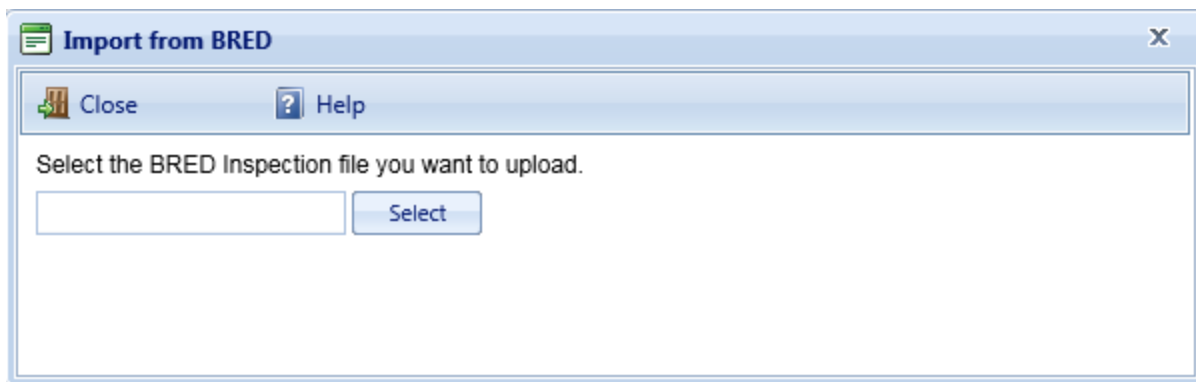

4. Locate the database you wish to import, by either (a) entering the full path and file name in the text box or (b) clicking the **Select** button, navigating to the database file, and selecting it.
5. All changes to the database will be imported into BUILDER and you will see a popup window with the following message:

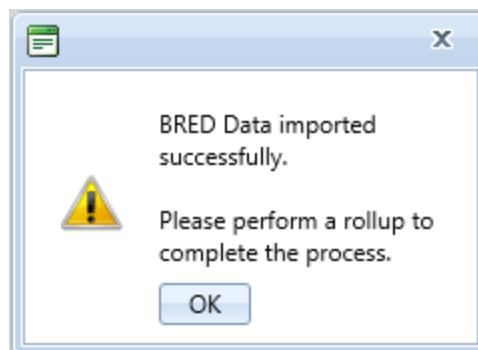

6. If you don't have any images to be imported into BUILDER, activate **OK**. You are finished with the import, and can [perform a rollup](#) if you wish.
7. **IMPORTANT:** If you have images to import from BuilderRED, it is recommended that you NOT click **OK** to perform a manual condition rollup at this point. Instead, close the popup box by activating the "x," then follow the instructions in the next section:

How To Import Images

The process of importing images makes use of an image archive file that has the extension .bredpackage. By default, the image archive file has the same name as the .mdb BRED data file containing the imported data, except for the extension.

WARNING: It is very important that the name of the image archive file match the name of the .mdb data file. If you rename one of these files, be sure to rename the other one identically (except for the extension). Images will not be found by the BRED (.mdb) file if the .bredpackage file name doesn't match.

To import images into BUILDER from BuilderRED:

1. If you have new images that need to be imported from BRED, this procedure needs to be done *after* importing the database information (see section above).
2. Select **Tools > Import > Import image archive** starting at the main menu. *(The "Import image archive" popup window will appear.)*
3. Locate the image ("bredpackage") file corresponding to the database you just imported, by either (a) entering the full path and file name in the text box or (b) clicking **Select**, navigating to the database file, and selecting it. The image archive will be in the same location as the database file, and similarly named except that the extension is .bredpackage instead of .mdb.
4. When you see the message "Upload successful," close the "Import image archive" window. Follow with a manual condition rollup as warranted (see next section).



Should I Perform a Rollup after Import?

The items you import from BuilderRED are unlocked as soon as the import is complete, whether you do a manual condition rollup or not. However, the condition and Functionality Indexes will not yet have been updated.

If you only performed inventory with BuilderRED, you need to do a rollup only if

- one or more cost books or other reference books have changed, or
- you wish to see updated PRVs or RSLs immediately instead of waiting on BUILDER's automated rollup (performed overnight)

If you entered inspection data in BuilderRED, performing a rollup after the import is completed allows you to see the changes in the following indexes right away:


- condition indexes
- functionality indexes
- performance indexes


If you do not perform a rollup at this time, the SMS will do the rollup automatically overnight, and the updated index figures will be available the next day.

How To Perform a Manual Rollup after Importing from BuilderRED

To perform a manual rollup, do one of the following:

- a. Right-click on the affected Building (or Complex, if multiple Buildings were exported from the same Complex). Then select **Rollup Building** or **Rollup Complex**.

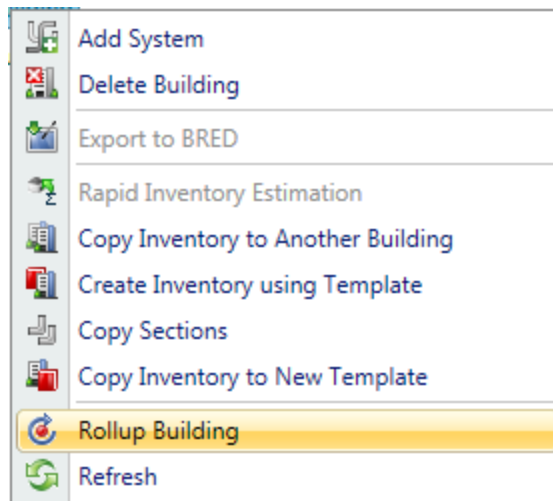

- b. Alternatively, select the Building (or Complex, if multiple Buildings were exported from the same Complex) and click the Rollup icon  on the toolbar.

You have the option to roll up the entire Site in similar fashion, but be aware that a Site rollup can take an extremely long time. It would typically be less time consuming to sequentially select the applicable Complexes and Buildings for manual rollup.

Reports


Generate a Report

BUILDER™ offers a number of standard reports. These reports can be viewed, printed, or exported to electronic files of several formats.

How To Generate and View a Report

Note: This topic explains how to access reports from the toolbar at the top of the Content Area, not from the main toolbar.


To view a report,

1. In the navigation tree in the left window pane, navigate to and select the node for which you want to generate a report.
2. Click the **Reports** button  in the local toolbar.

Note: The **Reports** button is available if you are in the inventory tree or condition tree, but not when you are in the functionality navigation tree.

Note: Selected Standard reports are also available from the **Reports** button on the main menu bar.

3. *For Inventory only:* Select either **Standard** or **Custom** (where available) reports:

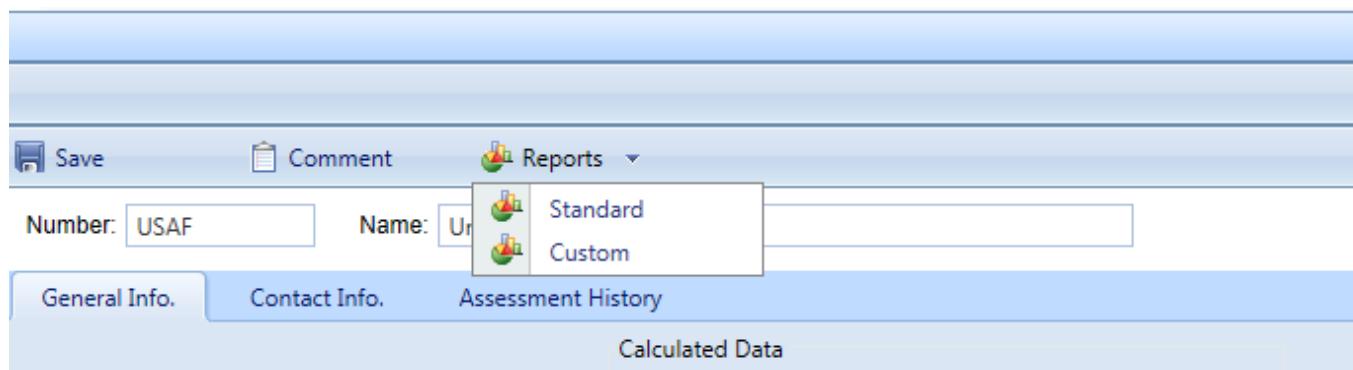

The "Reports," "Standard Reports," or "Custom Reports" window will appear. This window contains a dropdown list of reports, which includes only reports applicable to that level. Additionally, the report will only show data for the current mode you are in. For example, if you activate the Reports button while in inspection mode, only inspection related reports will be displayed.

4. Activate the dropdown arrow in the bar, and select the desired report from the dropdown list.
5. After you have a report selected, click the **View Report** button in the popup window toolbar; or, if you have selected a Custom Report, click on the **Run Report** button in the popup window toolbar.

The selected report will launch in the Report Viewer window or in the Custom Reports window. The image below shows a sample report in the Report Viewer:

Report Viewer

Close | Export Type: PDF | Export Report | Help

1 / 1 | 50.7% | Fill & Sign | Comment

Direct Condition Rating Inspection Report by Component

Sample Site 02 (013)

00001 - Flight **Training (0044)**

System	Component	Section Description	Quantity (UM)
A10 FOUNDATIONS	A1010 STANDARD FOUNDATIONS	Beam A101001 WALL FOUNDATIONS Grade Beams	600 (LF)
Last Inspection Date: 01-Feb-2016 Condition Rating: R- Used Sampling? No Inspector: Sample User Inspection Source: Inspection Inspection Comments: Degraded foundation. A/JF.			
B10 SUPERSTRUCTURE	B1010 FLOOR CONSTRUCTION	Auditorium floor B101004 INCLINED AND STEPPED FLOORS	600 (EA)
Last Inspection Date: 01-Feb-2016 Condition Rating: G- Used Sampling? No Inspector: Sample User Inspection Source: Inspection Inspection Comments:			

February 01, 2016 Page 1 of 1

Export a Report


Export a Standard Report

To export a standard report, first follow the steps in ["Generate a Report" on page 119](#). Then

1. In the Report Viewer toolbar, select the Export Type: **PDF**, **Excel**, or **Word (RTF)**.

CAUTION: Not all reports have been adapted to the Excel format.

2. In the Report Viewer toolbar, click **Export Report**.
3. At the bottom of the screen, you will be queried whether you want to save the report:




4. Click the down arrow to the right of the **Save** button.
5. Select **Save as**.
6. In the Save As popup window, browse to the desired location where you wish to save the report.
7. Name the report in the File name: bar; then activate **Save** (lower right).
8. After the download is complete, the bar at the bottom of the screen will give you the option to open the report you just saved, to open the folder, or view downloads. If none of these are needed, click the "x" at the right side of the query bar.
9. If you want to open the report to view it, select **Open**. When you close the viewing window, you will be back at the Report Viewer window.
10. Click **Close** to close the Report Viewer window.

Export a Custom Report

To export a custom report, first follow the steps in ["Generate a Report" on page 119](#). Then

1. With the desired report showing in the Custom Reports popup window, activate the **Save** icon.
2. Select the desired export format from the options in the dropdown list.
3. At the bottom of the screen, you will be queried whether you want to save the report:



4. Click the down arrow to the right of the **Save** button.
5. Select **Save as** (or **Save and open**).
6. In the Save As popup window, browse to the desired location where you wish to save the report.
7. Click the **Save** button.

APPENDIX A: About Rollup

Automated Rollup

BUILDER automatically "rolls up" inventory, condition, and functionality information nightly. (For installations with U.S. Army Corps of Engineers support service, this begins at about 6:00 p.m.). Starting at the Section level, aggregated Section-level information in each Component is recorded for the Component; aggregated Component-level information is recorded for each System; aggregated System-level information is recorded for each Building, and so forth up the entire inventory tree.

Manual Rollup

Users can perform a manual rollup at the Building, Complex, or Site level (subject to permissions). A user-initiated manual rollup is limited in scope to the Building, Complex, or Site where the rollup is run, including all of its sublevels of inventory. A manually initiated rollup of the entire navigation tree can only be performed by a BUILDER Administrator.

What does a Rollup Do?

The following (subcategorized) processes will occur during the rollup:

Inventory

Inventory-related processes accomplished by a rollup are as follows:

- The current remaining service life (RSL) is estimated for all Sections.
- RSL information is reflected upwards through the Inventory tree.
- Plant Replacement Value (**PRV**¹) is updated at all levels. For example, if new Sections, Components, or Systems have been added to a Building, its PRV will increase.

Condition Assessment

Condition assessment-related processes accomplished by a rollup are as follows:

- **Components:** The current CI for each Component (BCCI) is estimated by calculating the average of its Component-Sections' condition indices, weighted by replacement cost.

¹Plant Replacement Value. For an inventory item above the Building level, this number will be the aggregate of the PRV of all Buildings included in that item.

- **Systems:** The current CI for each System (SCI) is estimated by calculating the average of its Components' condition indices, weighted by replacement cost.
- **Buildings:** The current condition index for each Building (BCI) is estimated by calculating the average of its Systems' condition indices, weighted by replacement cost.
- **Complexes, Sites, and Organizations:** The current condition index for all Complexes, Sites, and Organizations is estimated by calculating the average of their Buildings' condition indices, weighted by replacement cost.

FCI

In addition to calculating and rolling up BUILDER condition indexes, rollup also calculates the financially oriented Facility Condition Index (FCI):

- The FCI is estimated for all Buildings using the formula $FCI = (1 - \text{\$current repair needs} / \text{\$PRV}^1) \times 100$, obtaining the dollar amount of repair needs from BUILDER work items.
- The FCI is estimated for all Complexes, Sites, and Organizations, using the formula $FCI = (1 - \text{\$current repair needs} / \text{\$PRV}^2) \times 100$, obtaining the dollar amount of repair needs from BUILDER work items for the Complex, Site, or Organization.

Functionality and Performance

Processes accomplished by a rollup related to functionality and performance are:

- The latest functionality assessment records are retrieved. Based on the results of the assessments, the **FI**³ is determined for each Functional Area and applicable Building.
- The current **FI**⁴ is estimated for all Complexes, Sites, and Organizations by calculating the average of their Buildings' FIs, weighted by replacement cost.
- The current **PI**⁵ is estimated for each Building, using a weighted combination of the Building's CI and FI.

¹Plant Replacement Value. For an inventory item above the Building level, this number will be the aggregate of the PRV of all Buildings included in that item.

²Plant Replacement Value. For an inventory item above the Building level, this number will be the aggregate of the PRV of all Buildings included in that item.

³Functionality Index

⁴Functionality Index

⁵Performance Index. See also: BPI. The Performance Index is a weighted combination of the CI value and the FI value, with the lower of the two values being given two-thirds of the weight and the higher of the two values being given one-third of the weight.

- The current **PI**¹ is estimated for all Complexes, Sites, and Organizations by calculating the average of their Buildings' PIs, weighted by replacement cost.

After the rollup process completes, the "Manual Condition Rollup" popup window (or the "Progress" window, in case of a full-tree rollup performed by a BUILDER administrator) will close. You will be returned to the originating BUILDER screen. Updated condition colors (red, amber, green) will be displayed for all elements in the inventory, condition, and functionality trees, and recalculated current condition indices will be shown in the relevant information screens.

¹Performance Index. See also: BPI. The Performance Index is a weighted combination of the CI value and the FI value, with the lower of the two values being given two-thirds of the weight and the higher of the two values being given one-third of the weight.

APPENDIX B: Direct Condition Rating Definitions

This table of direct condition rating definitions is from Appendix E of ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*.

Table E-1. Direct Condition Rating Definitions

Rating	SRM ¹ Needs	Rating Definition
Green (+)	Sustainment consisting of possible preventive maintenance (where applicable)	Entire Component-Section or Component-Section sample free of observable or known distress
Green	Sustainment consisting of possible preventive maintenance (where applicable) and minor repairs (corrective maintenance) to possibly few or some sub-components.	No Component-Section or sample serviceability or reliability reduction. Some, but not all, minor (non-critical) subcomponents may suffer from slight degradation or few major (critical) subcomponents may suffer from slight degradation.
Green (-)		Slight or no serviceability or reliability reduction overall to the Component-Section or sample. Some, but not all, minor (non-critical) sub-components may suffer from minor degradation or more than one major (critical) subcomponent may suffer from slight degradation.
Amber (+)	Sustainment or restoration to any of the following: Minor repairs to several sub-components; or Significant repair, rehabilitation, or replacement of one or more subcomponents, but not enough to encompass the Component-Section as a whole; or Combinations thereof	Component-Section or sample serviceability or reliability is degraded, but adequate. A very few, major (critical) subcomponents may suffer from moderate deterioration with perhaps a few minor (non-critical) subcomponents suffering from severe deterioration.
Amber		Component-Section or sample serviceability or reliability is definitely impaired. Some, but not a majority, major (critical) subcomponents may suffer from moderate deterioration with perhaps many minor (non-critical) subcomponents suffering from severe deterioration.
Amber (-)		Component-Section or sample has significant serviceability or reliability loss. Most subcomponents

¹Building Condition Index - a condition rating for the overall Building. For each Building, the BCI is computed by taking the average of its Systems' CIs, weighted by replacement cost.

		may suffer from moderate degradation or a few major (critical) subcomponents may suffer from severe degradation.
Red (+)	Sustainment or restoration required consisting of major repair, rehabilitation, or replacement to the Component- Section as a whole.	Significant serviceability or reliability reduction in Component–Section or sample. A majority of sub-components are severely degraded and others may have varying degrees of degradation.
Red		Severe serviceability or reliability reduction to the Component-Section or sample such that it is barely able to perform. Most subcomponents are severely degraded.
Red (-)		Overall Component-Section degradation is total. Few, if any, subcomponents salvageable. Complete loss of Component-Section or sample serviceability.

APPENDIX C: Paint Rating Definitions

This table is from Appendix F of ERDC/CERL SR-18-7, *Knowledge-Based Condition Assessment Reference Manual for Building Component-Sections*.

Table F-1. Paint/Coating Rating Definitions

Rating	% Deteriorated	Relative Amount Deteriorated
Green (+)	0.00-0.03	Up to about 1" x 4" in a 8' x 10' area; 1/32" in a 10' length; or 3 in 10,000
Green	0.03 – 0.10	Between about 1" x 4" and 1" x 12" in a 8' x 10' area; 1/32" and 1/8" in a 10' length; or 3 and 10 in 10,000
Green (-)	0.10 – 0.30	Between 1" x 12" and 3" x 12" in a 8' x 10' area; 1/8" and 3/8" in a 10' length, or 1 and 3 in 1000
Amber (+)	0.30 – 1.00	Between 3" x 12" and 10" x 12" in a 8' x 10' area; 3/8" and 1 1/4" in a 10' length; or 3 and 10 in 1000
Amber	1.00 – 3.00	Between 10" x 12" and 18" x 18" in a 8' x 10' area; 1 1/4" and 3 3/4" in a 10' length; or 1 and 3 in 100
Amber (-)	3.00 – 10.0	Between 1' x 2 1/2' and 1' x 8' in a 8' x 10' area; 3 3/4" and 12" in a 10' length; or 3 and 10 in 100
Red (+)	10.0 – 17.0	Between 1' x 8' and 1 3/4' x 8' in a 8' x 10' area; 1' and 1 3/4' in a 10' length; or 10 and 17 in 100
Red	17.0 – 33.0	Between 1 3/4' x 8' and 3 1/2' x 8' in a 8' x 10' area; 1 3/4' and 3 1/2' in a 10' length; or 17 and 33 in 100
Red (-)	33.0 - 100	Greater than 1/3 of area, length, or amount

Glossary

Administrator

A user with Administrator Role can administer users, assign users to Roles, and change software configuration settings.

Area Cost Factor

A multiplier that adjusts national average labor/material/equipment costs to local costs. For example, in a remote area with high shipping costs and a tight labor market, the Area Cost Factor might be 1.3. The Area Cost Factor is generally a number between 0.8 and 1.2 for continental U.S. locations, but it can be even greater than 2.0 in high-cost geographic locations.

ATFP

Antiterrorism Force Protection

BCCI

Building Component Condition Index - a condition rating for the target Building Component. For each Component, the BCCI is computed by taking the average of its Sections' CIs, weighted by replacement cost

BCI

Building Condition Index - a condition rating for the overall Building. For each Building, the BCI is computed by taking the average of its Systems' CIs, weighted by replacement cost.

BFI

Building Functionality Index - computed from the results of a functionality assessment.

BPI

Building Performance Index - a measure of a Building's overall performance, derived from a weighted combination of the BCI and BFI, where the lower of the two values is given two-thirds of the weight and the higher of the two values is given one-third of the weight. If no functional assessment has been performed, the BFI is assigned a value of 100.

BRED

BUILDER Remote Entry Database (BuilderRED)

BUR

Built-up Roofing

CCI

Coating Condition Index

CI

Condition Index

CII

Component Importance Index. This index may be used to rank the relative importance of components against one another. An example of use is in Work Configuration to hold different Component Sections to different thresholds, or to prioritize them differently based on relative importance.

CM

Corrective Maintenance

CMC

Component material category

Complex CI

Complex Condition Index - a condition rating for the target Complex. The Complex CI is computed by taking the average of the BCIs of each Building in the Complex, weighted by replacement cost.

CSCCI

Component Section Coating Condition Index

CSCI

Component-Section Condition Index - a condition rating for the target Component-Section. The CSCI is computed by using the assessment data to calculate a deduct value, then subtracting that deduct value from the maximum possible rating of 100. The deduct value computation differs for each condition assessment method.

Equipment Make

The series, collection or line that the equipment is included in, if applicable. For example, a Trane® gas furnace might be designated as S9V2, XC95, or XV95.

ERDC-CERL

U.S. Army Engineer Research and Development Center, Construction Engineering Research Laboratory

ESC

Emergency Service Call

FAFI

Functional Area Functionality Index

FCA

Facility Condition Assessment

FCI (ROOFER)

Flashing Condition Index. In ROOFER the FCI, as determined by inspection and/or algorithm, is used in the calculation of the Roof Condition Index (RCI).

FEMA

Federal Emergency Management Agency

FI

Functionality Index

HABS

Historic American Buildings Survey

HAER

Historic American Engineering Record

HPSB

High Performance and Sustainable Building

IAQ

Indoor air quality

ICI (ROOFER)

Insulation Condition Index

Icon Color

Icon color designates the condition of an SMS element, or whether it has yet been inspected at all. If the icon is gray, no inspection has been performed. Red, amber, and green icons indicate a red-, amber-, or green-level average condition of all sublevels below the designated icon, assuming that a rollup has been performed.

Inspection Supervisor

A user with Inspection Supervisor Role has all the rights of an Inspector, and can also create inspection schedules

Inspector

Person who performs inspections to be input into BUILDER or ROOFER. As a permissions Role, Inspectors can input and edit inventory information in Inventory mode, and can input and edit inspection information from the Condition Assessment screen.

Inventorior

A user with Inventorior Role can add and edit records below the Building level.

KBI

Knowledge-Based Inspection

M&R

Maintenance and Rehabilitation

Master Planner

A user with Master Planner Role has all the rights of a Work Planners, and can also generate multi-year work plan scenarios, and edit any and all data saved by other users of the program. Master Planner is the highest level of user privileges.

MBH

1,000 BTU/hour

MCI (ROOFER)

Membrane Condition Index

MDI

Mission Dependency Index - measures the relative importance of a Building

MOA

Memorandum of Agreement

MOU

Memorandum of Understanding

NAGPRA

Native American Graves Protection and Repatriation Act

PCBs

Polychlorinated biphenyls

PCI (ROOFER)

Panel Condition Index. The PCI is one component making up the Roof Condition Index (RCI) for a metal panel roof, along with the Insulation Condition index (ICI) if applicable, and the Flashing Condition Index (FCI).

PI

Performance Index. See also: BPI. The Performance Index is a weighted combination of the CI value and the FI value, with the lower of the two values being given two-thirds of the weight and the higher of the two values being given one-third of the weight.

PM

Preventative Maintenance

PM inspection

Preventative maintenance inspection

PRV

Plant Replacement Value. For an inventory item above the Building level, this number will be the aggregate of the PRV of all Buildings included in that item.

RCI (ROOFER)

Roof Condition Index

RML

Remaining Maintenance Life

RPIE

Real property installed equipment

RSL

Remaining Service Life

SCCI

Subcomponent condition index, produced when using direct rating in a preventative maintenance (PM) inspection

SCI

System Condition Index - a condition rating for a Building System. For each System, the SCI is computed by taking the average of its Components' CIs, weighted by replacement cost.

SCI (ROOFER)

Substrate Condition Index

Site CI

Site Condition Index - a condition rating for the target Site. The Site CI is computed by taking the average of the BCIs of each Building at the Site, weighted by replacement cost.

SMS

Sustainment Management System

SOW

Statement of Work

SP

Single Ply

SR

Shingle Roofing

SRM

Sustainment, Restoration, and Modernization

STIG

Security Technical Implementation Guide (DoD)

SUCI

Sample Unit Condition Index

UM

Unit of Measure. Examples: Each; LF (linear feet)

Work Planner

A user with Work Planner Role has all the rights of an Inspection Supervisor, and can also create and edit work plans, standards, policies, prioritization schemes, and RSL and cost books.

Index

A

Add

- direct rating 23
- direct rating inspection data 24
- distress 57
- distress survey 44
- inspection attachment 84
- inspection comment 81
- knowledge-based inspection schedule 101
- PM inspection 72
- sample location for inspection 92

Alternate between Condition and Inventory views 22

Attachment

- inspection attachment 83

B

BRED See **BuilderRED**

BUILDER Remote Entry Database (BRED) See **BuilderRED**

BuilderRED

- capabilities 104
- export data to 105
- import data from 114
- import images from 116
- rollup after import 117

Building

- condition index 14

C

Comment

- inspection comment 80

Condition assessment **See Inspection**

Condition assessment data

- distress survey (not sampling) 48

- inspection attachments 83

- inspection comments 83

- with sampling 88

Condition assessment method **See Inspection type**

Condition tree 8

Condition view

- switch to Inventory view 22

Copyright 2

CSCI 14

CSCI computation 11

D

Defect Free paint designation 50

Defect Free subcomponent designation 50

Delete

- direct rating 31, 65, 77

- distress 64

- distress survey 31, 65, 77

- inspection 31, 65, 77

- inspection attachment 87

- inspection comment 83

- PM inspection (N/A for versions 3.3.x) 31, 65, 77

- sample location for inspection 95

Direct rating

- about 17
- add 23
- CSCI computation 11
- delete 31, 65, 77
- description 13
- edit 27
- of subcomponent in a distress survey 52
- view 19

Direct rating inspection data

- add 24
- save 26, 30

Disclaimer 2

Distress

- add 57
- copy 61
- data 55
- delete 64
- density 58
- edit 63
- severity 58
- type 58
- view distress details 56

Distress survey 48

- about 36
- add 44
- CSCI computation 11
- delete 31, 65, 77
- description 14
- edit 47
- view 38

E

Edit

- direct rating 27
- distress 63
- distress survey 47
- inspection attachment 86
- inspection comment 82
- PM inspection 75
- sample location for inspection 93

Emergency service call (ESC) 58

Export

- BuilderRED data 105
- report 121

I

Import

- BuilderRED data 114
- images from BuilderRED 116

Inspection

- about 5
- attachments 83
- comment 80
- condition rating (color designation) 25
- delete 31, 65, 77
- scheduling 98
- tools **See Inspection tools**
- type **See Inspection type**

Inspection attachment

- about 83
- add 84

- delete 87
- edit 86
- view 84
- Inspection comment
 - about 80
 - add 81
 - delete 83
 - edit 82
 - view 80
- Inspection tools *See also* **BuilderRED**
 - knowledge-based inspection (KBI) scheduling 98
 - overview 6
 - Rapid Inspection 32
- Inspection type 13
 - select direct rating 24
 - select distress survey 46
 - using KBI to recommend inspection type 100

K

- KBI *See* **Knowledge-based inspection (KBI) scheduling**
- Knowledge-based inspection (KBI) scheduling
 - about 98
 - add inspection schedule 101
 - toolbar 101

M

- Must-do work item generated by critical distress 58

P

- PM inspection
 - about 67

- add 72
- delete 31, 65, 77
- delete (N/A for versions 3.3.x) 31, 65, 77
- edit 75
- view 68

R

Rapid Inspection 32

Report

- export 121
- generate 119
- select 119
- view 119

Representative vs. nonrepresentative sample 88

Rollup

- Condition index rollup 12

S

Sample

- add sample location for inspection 92
- delete sample location for inspection 95
- edit sample location for inspection 93
- minimum quantity 89
- nonrepresentative 89
- representative vs. nonrepresentative 88
- sampling data 96
- sampling suggestions 90
- size in percentage 92, 97

Sampling 88, See *also* **Sample**

Sampling data 96

Save

Direct rating inspection data 26, 30

Subcomponent

unit of measure 53

Subcomponent

direct rating 52

SUCI computation for distress survey using sampling 12

Switch view from Condition view to Inventory view 22

U

Unit of measure

change for subcomponent/distress 57

subcomponent 53

V

View

direct rating 19

distress details 56

distress survey 38

inspection attachment 84

inspection comment 80

PM inspection 68

report 119

W

Welcome 3

Work item

must-do work item generated by critical distress 58

